

Multi - Use COLLAPSIBLE BASKET PATTERNS



Over 100 Designs for the Scroll saw

Rick and Karen Longabaugh














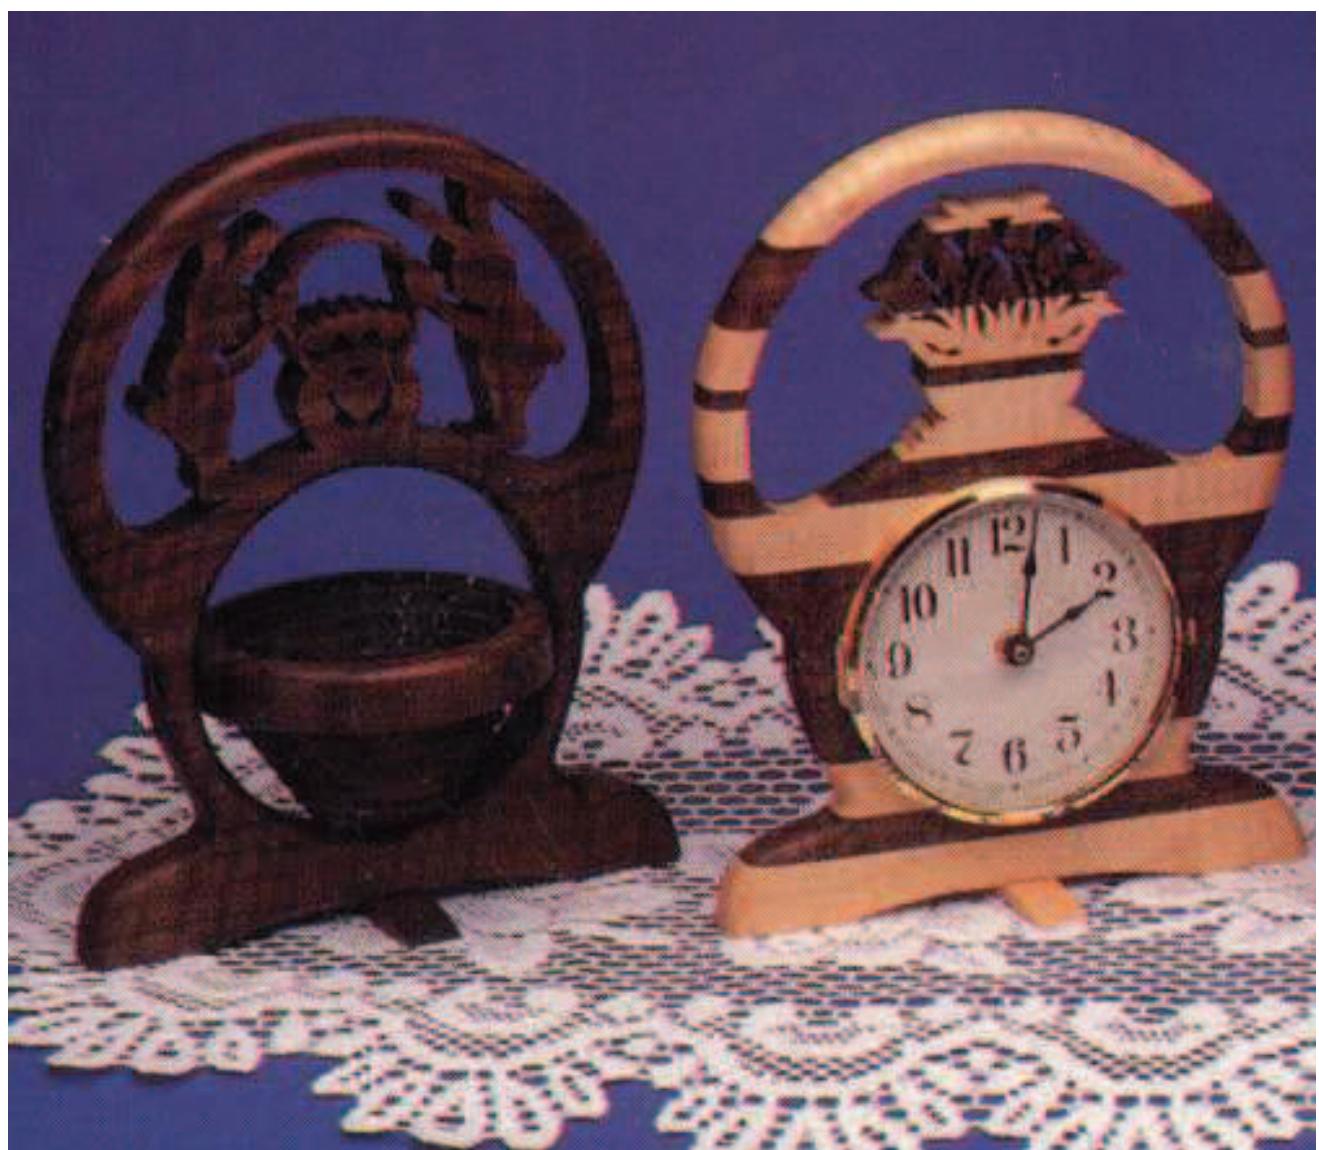











SCROLLSAW PATTERNS:


Following are the full-size scrollsaw patterns for creating beautiful projects from our CD Scroll saw Pattern Book.

Each pattern is shaded to make it easier to see where to cut and where not to cut.

To navigate from page to page, simply use the vertical scrollbar on the right hand side of the screen, or the “Go To” buttons |◀◀ ▶▶| located at the top and bottom of the screen.

To print, simply click on the “Printer Icon”  at the top of the screen, or choose “Print” from the “File” pull-down menu. Be sure to specify which page numbers you want to print, and the number of copies. You can determine the page number from the “Page #” box | 4 of 107 | at the bottom of the screen.


When finished, click the “First Page” button |◀ to go back to the beginning to choose another section to view.

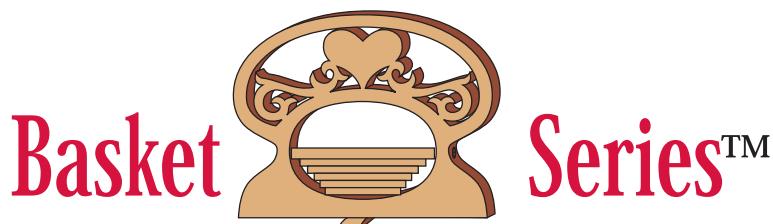

Simply click on the button of your choice.

INTRO **PHOTOS** **HOW-TO** **PATTERNS**

MORE CD'S AVAILABLE **BACK TO START**

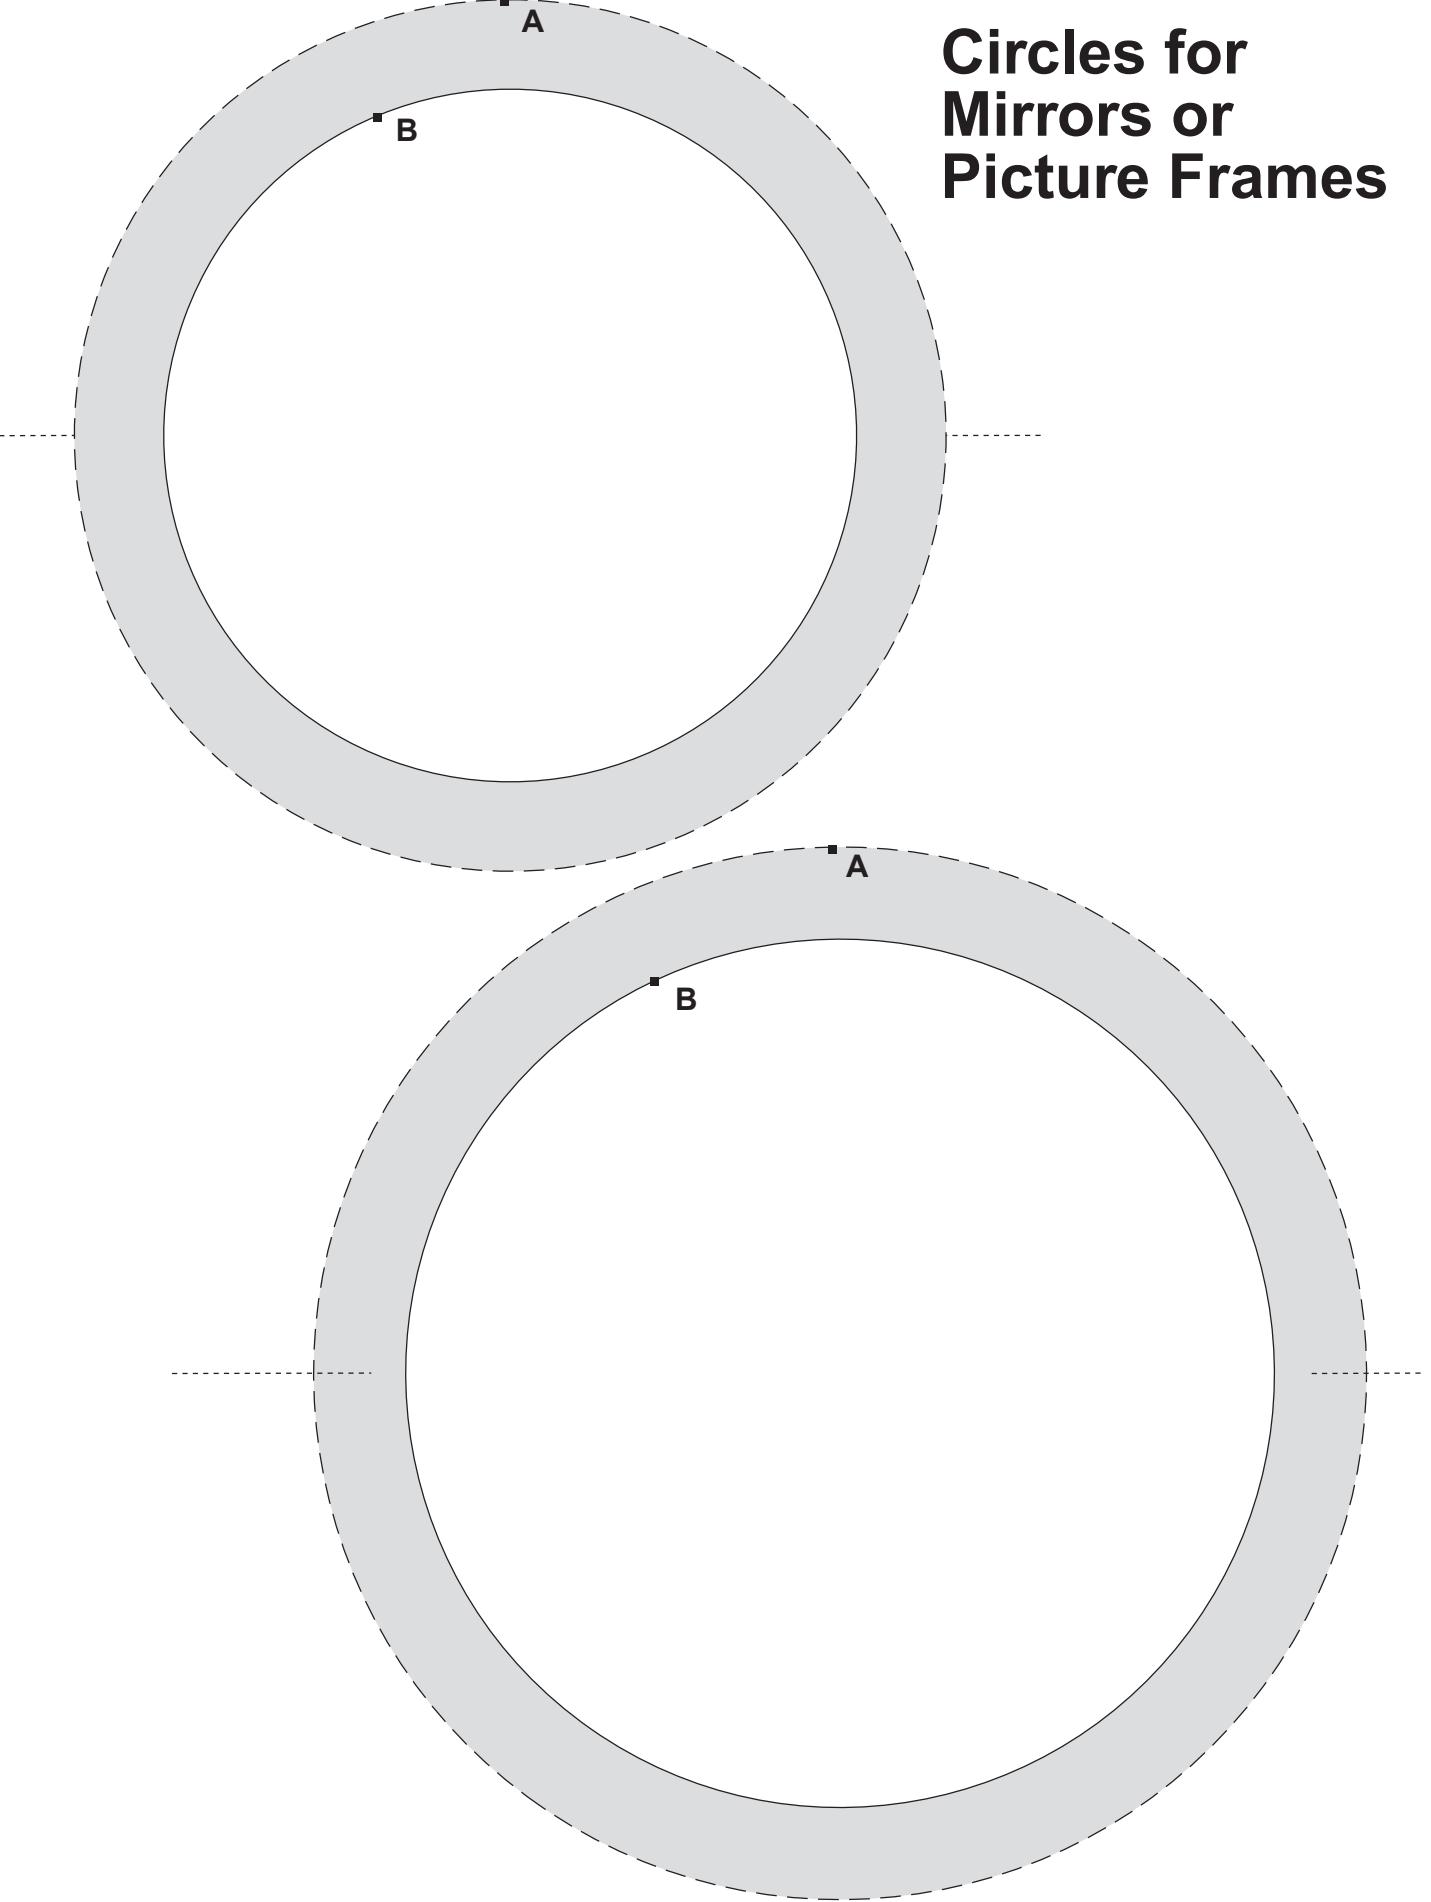

Circles for Mirrors or Picture Frames



A

B


A

B


Ovals for Mirrors or Picture Frames

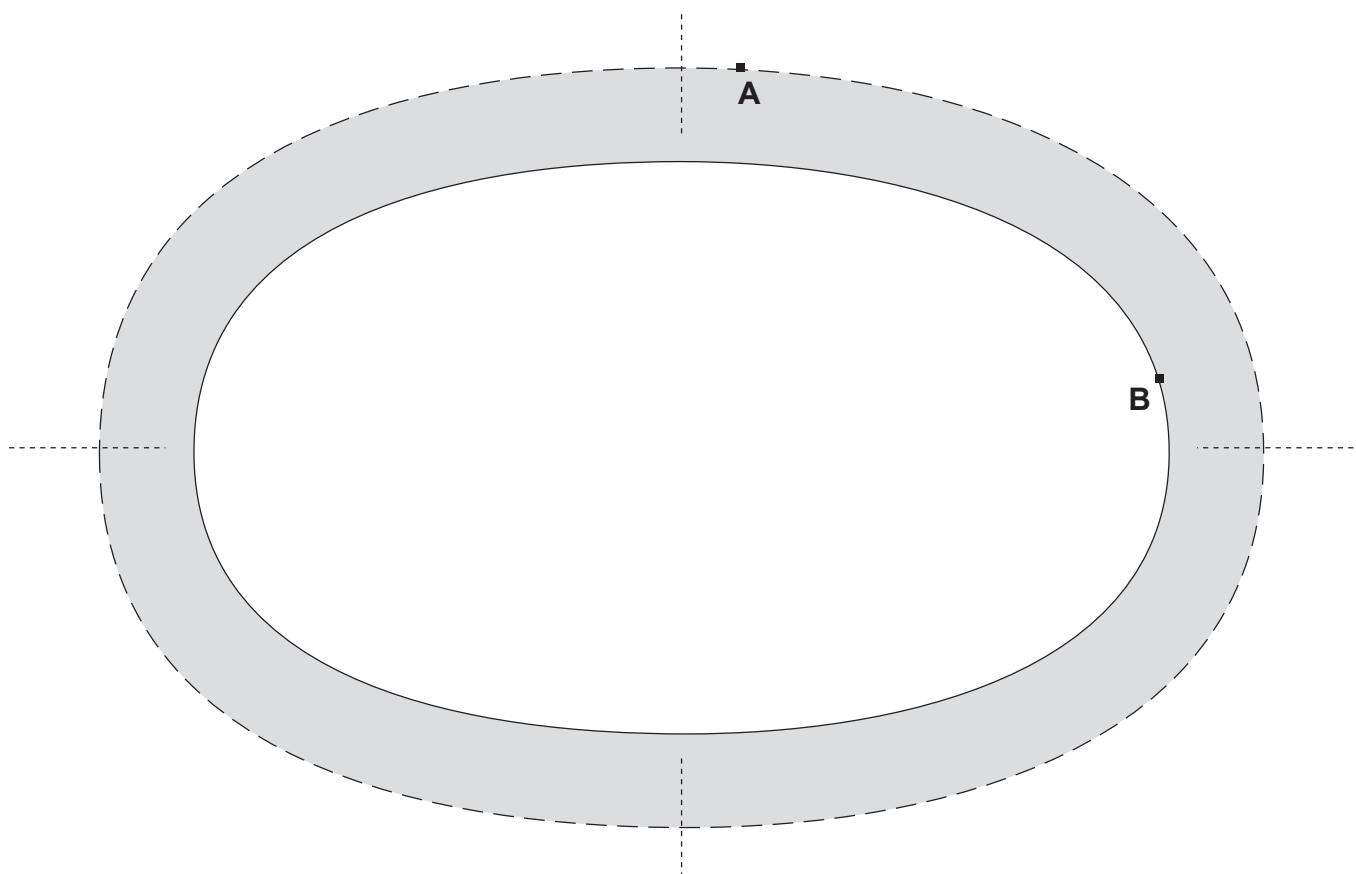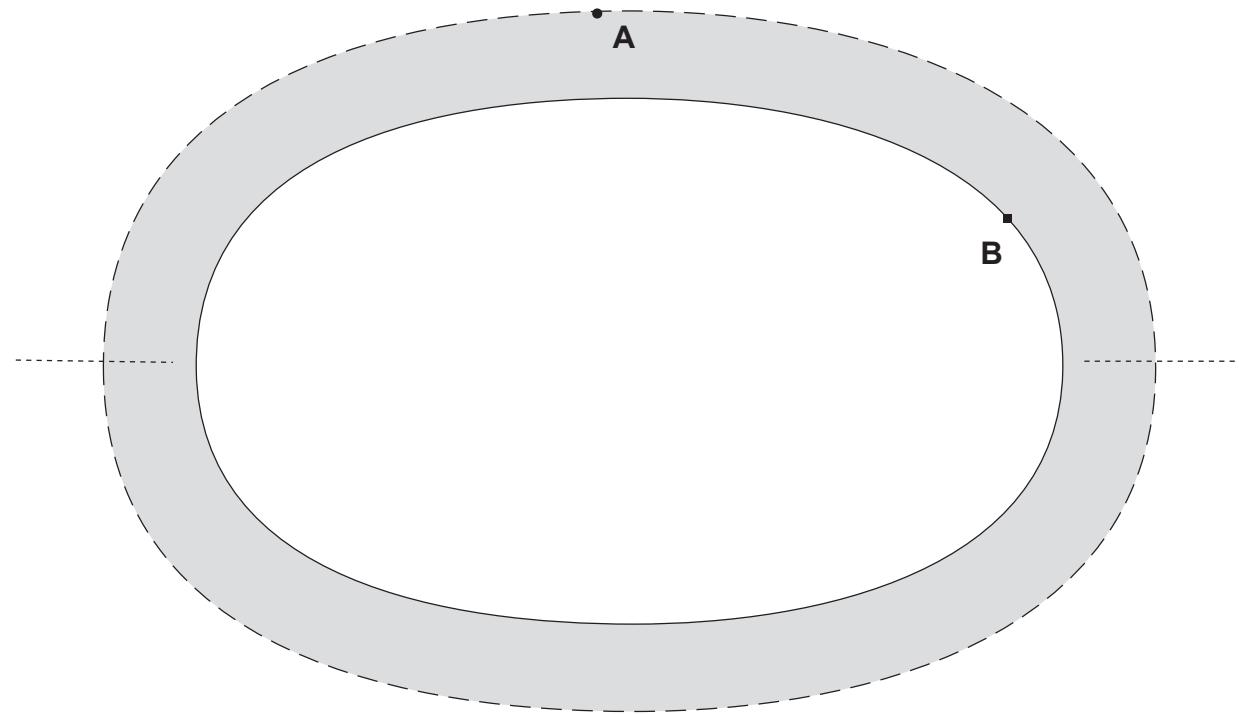

Heart for Mirrors or Picture Frames

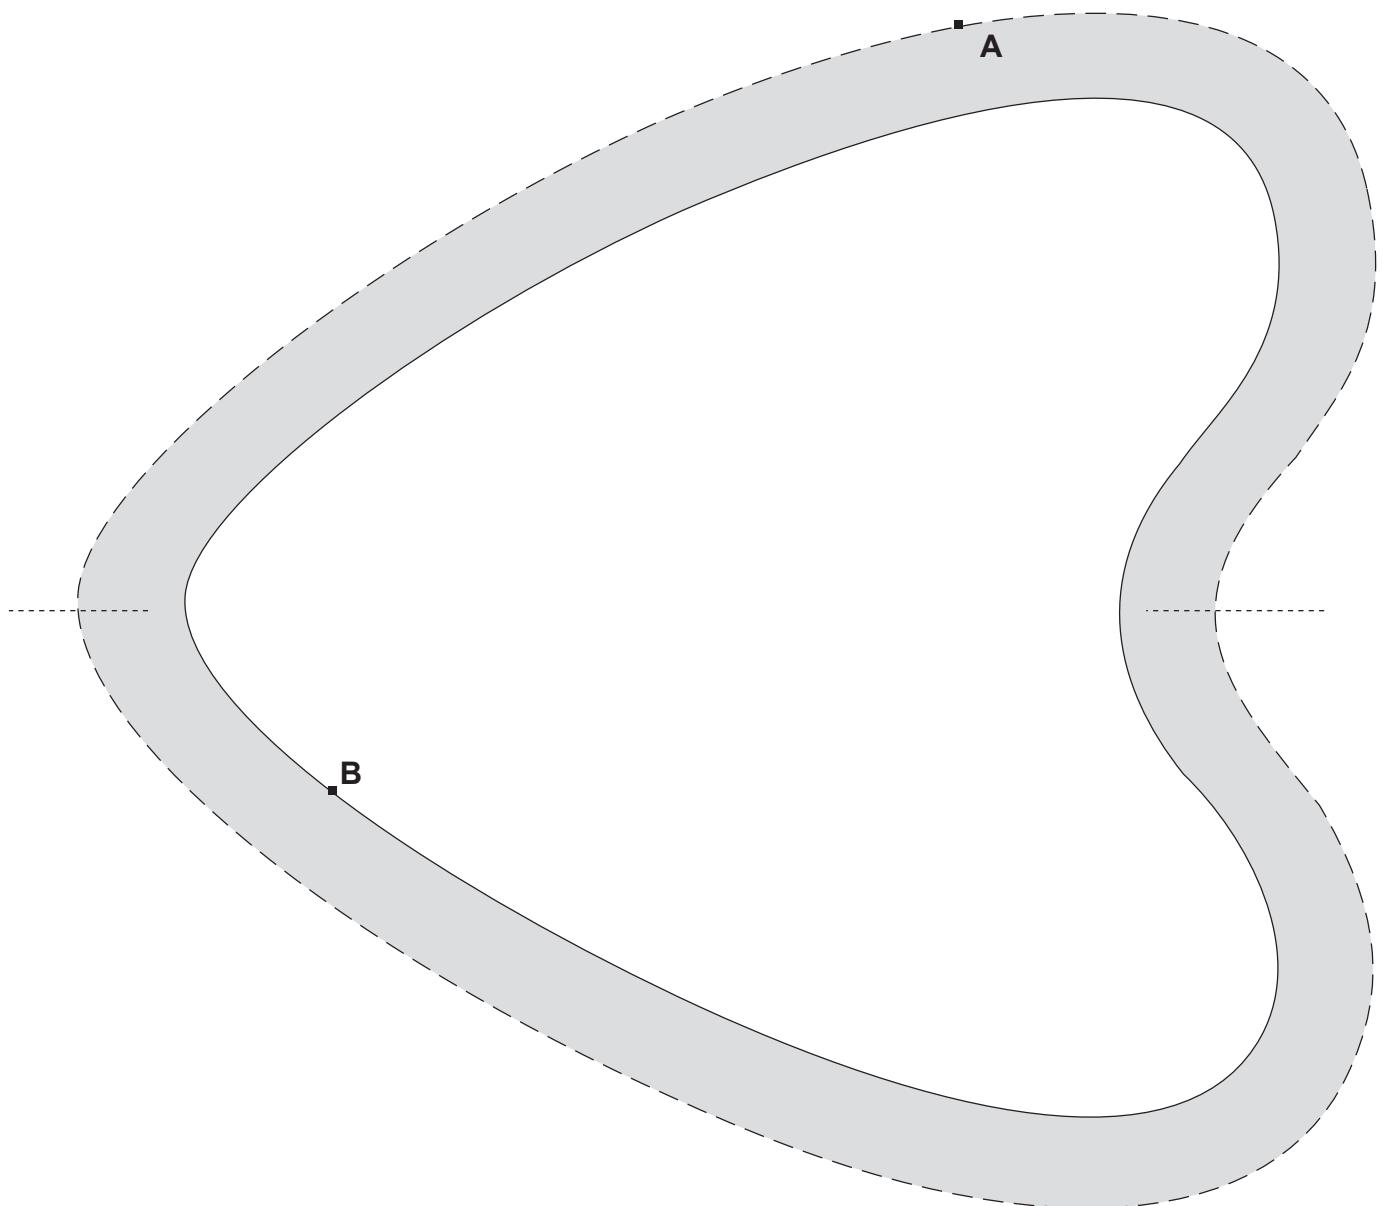

Heart for Mirrors or Picture Frames

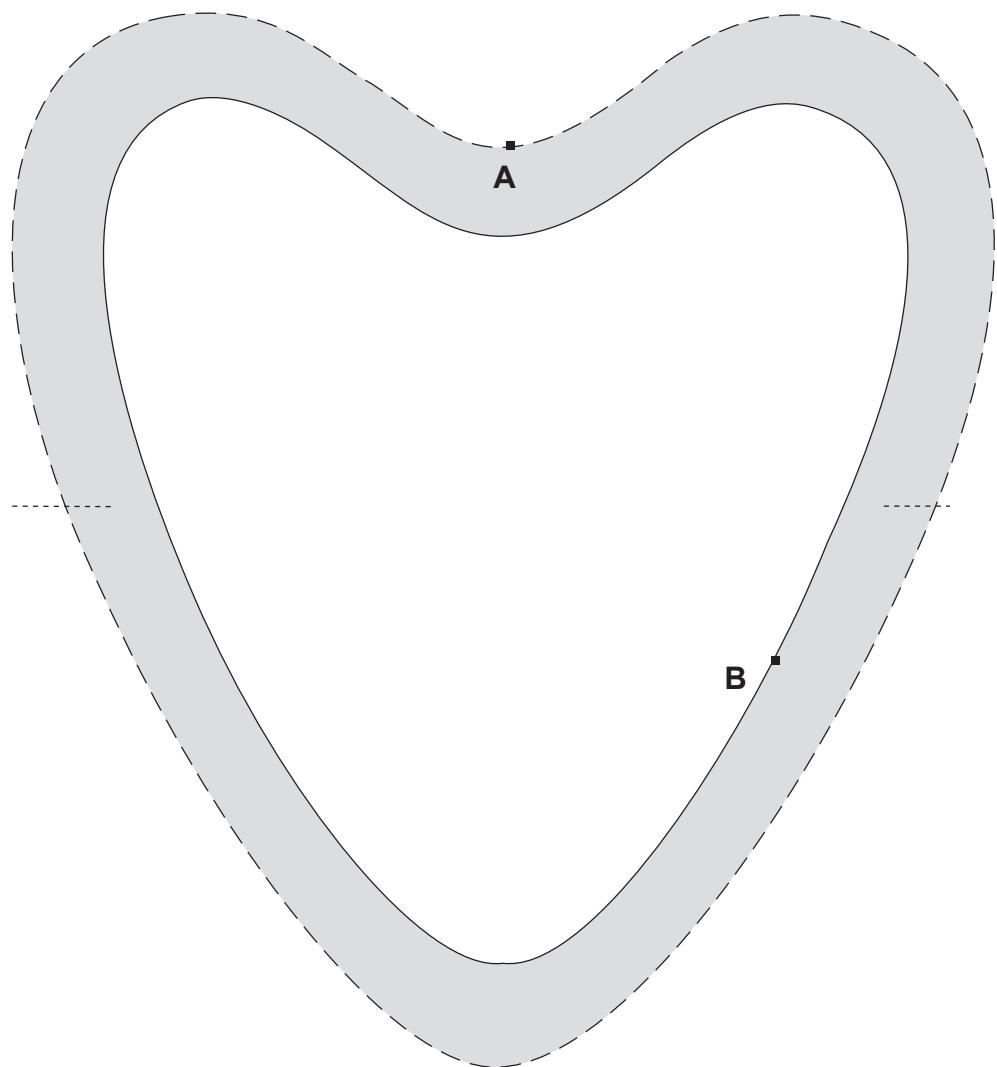

Numbers

The following numbers can be used with a few of the patterns to customize them for birthdays, anniversaries, or other special occasions. The patterns that allow for this are found on pages 15, 21, 26, and 37. On page 37, the word LUV can be removed and replaced with the numbers of your choice.


0 1 2 3 4 5 6 7 8 9


10 15 20 25 30


35 40 45 50 55


60 65 70 75 80


85 90 95 100

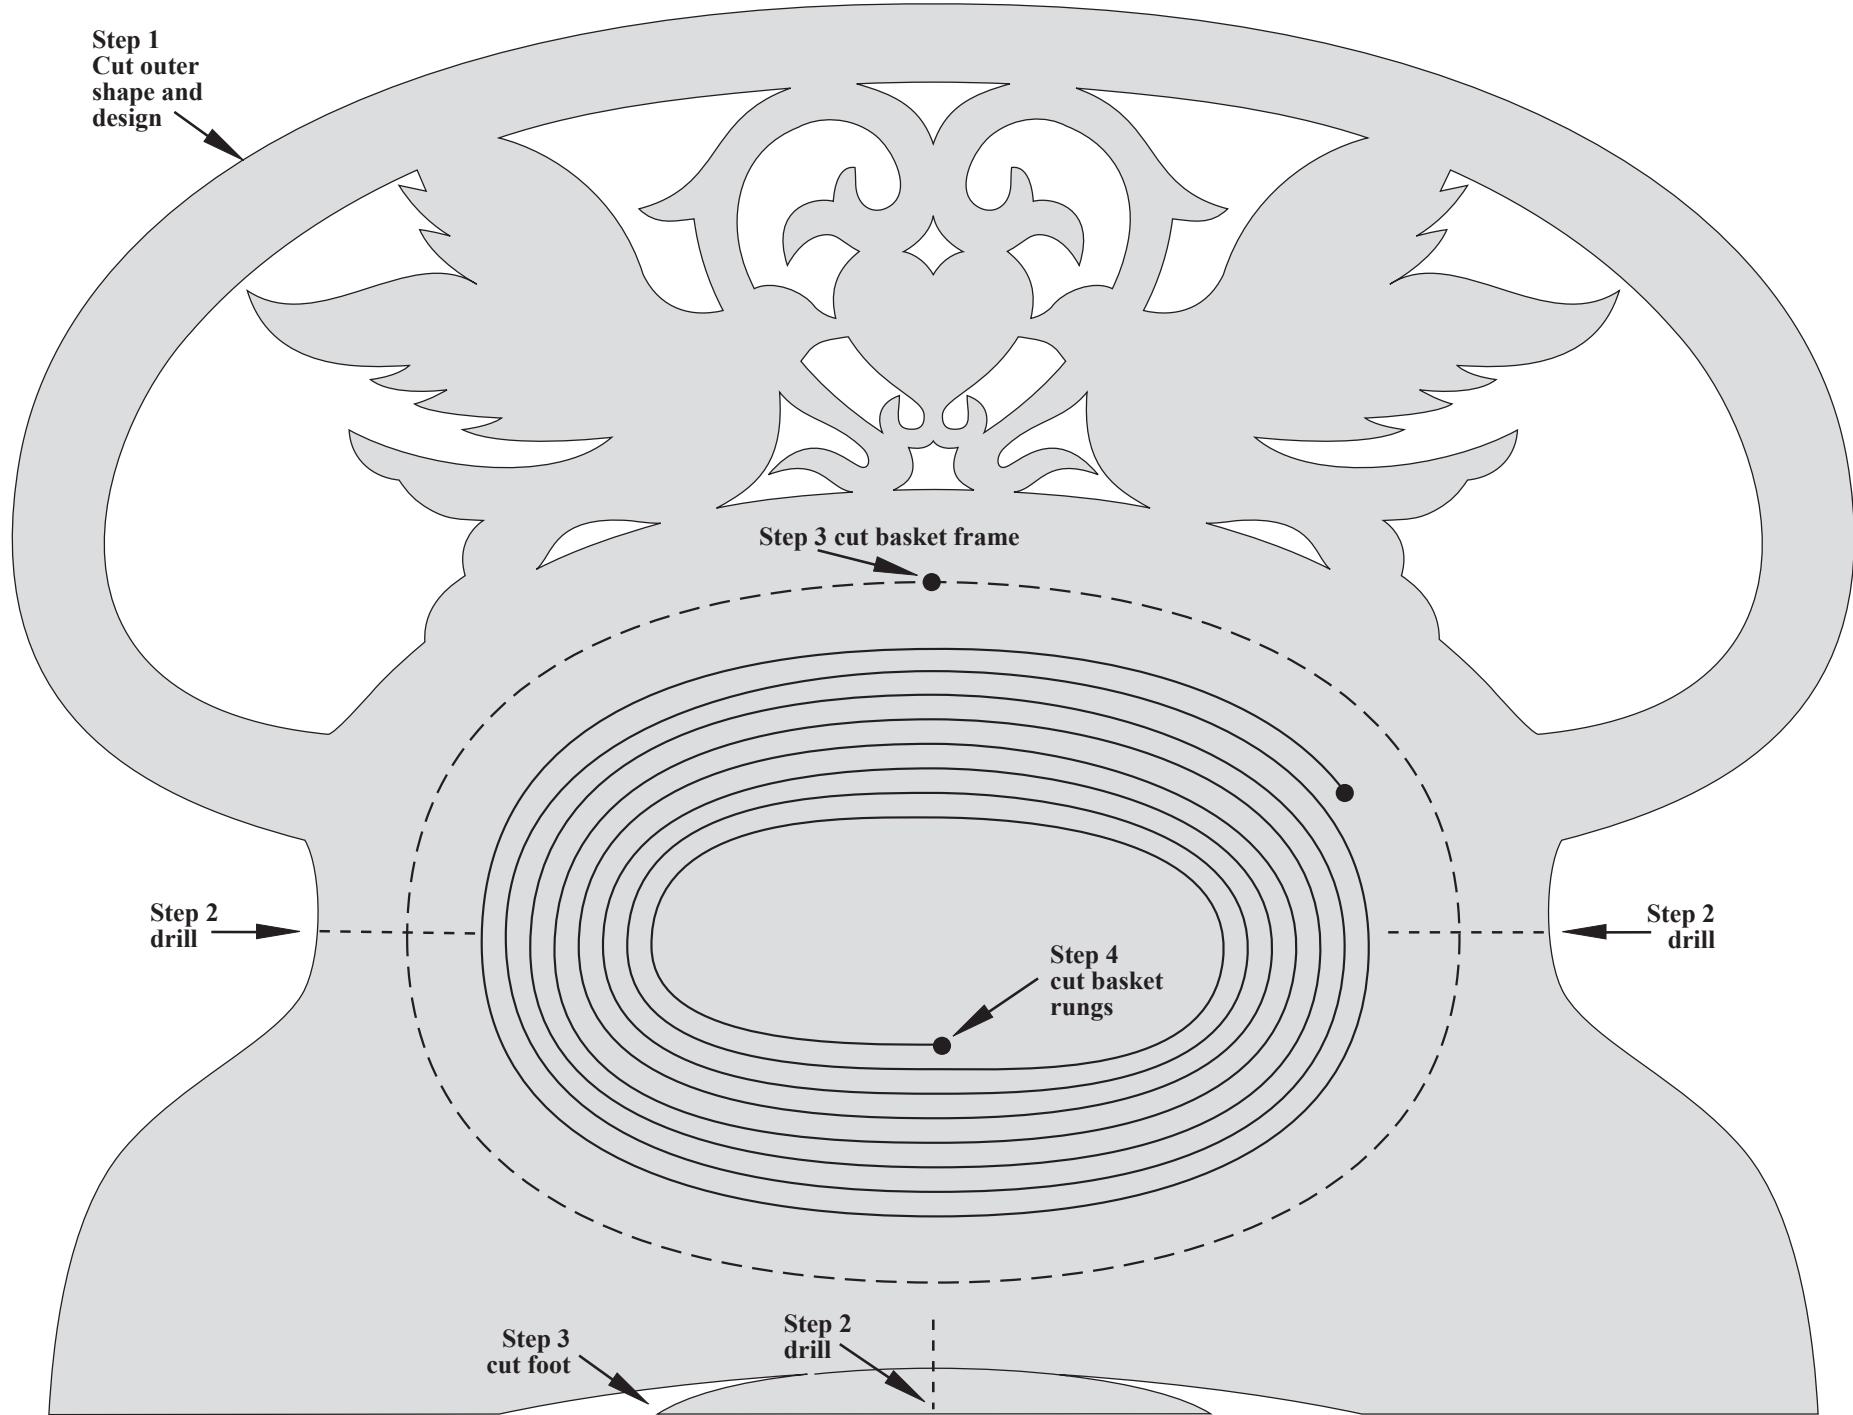


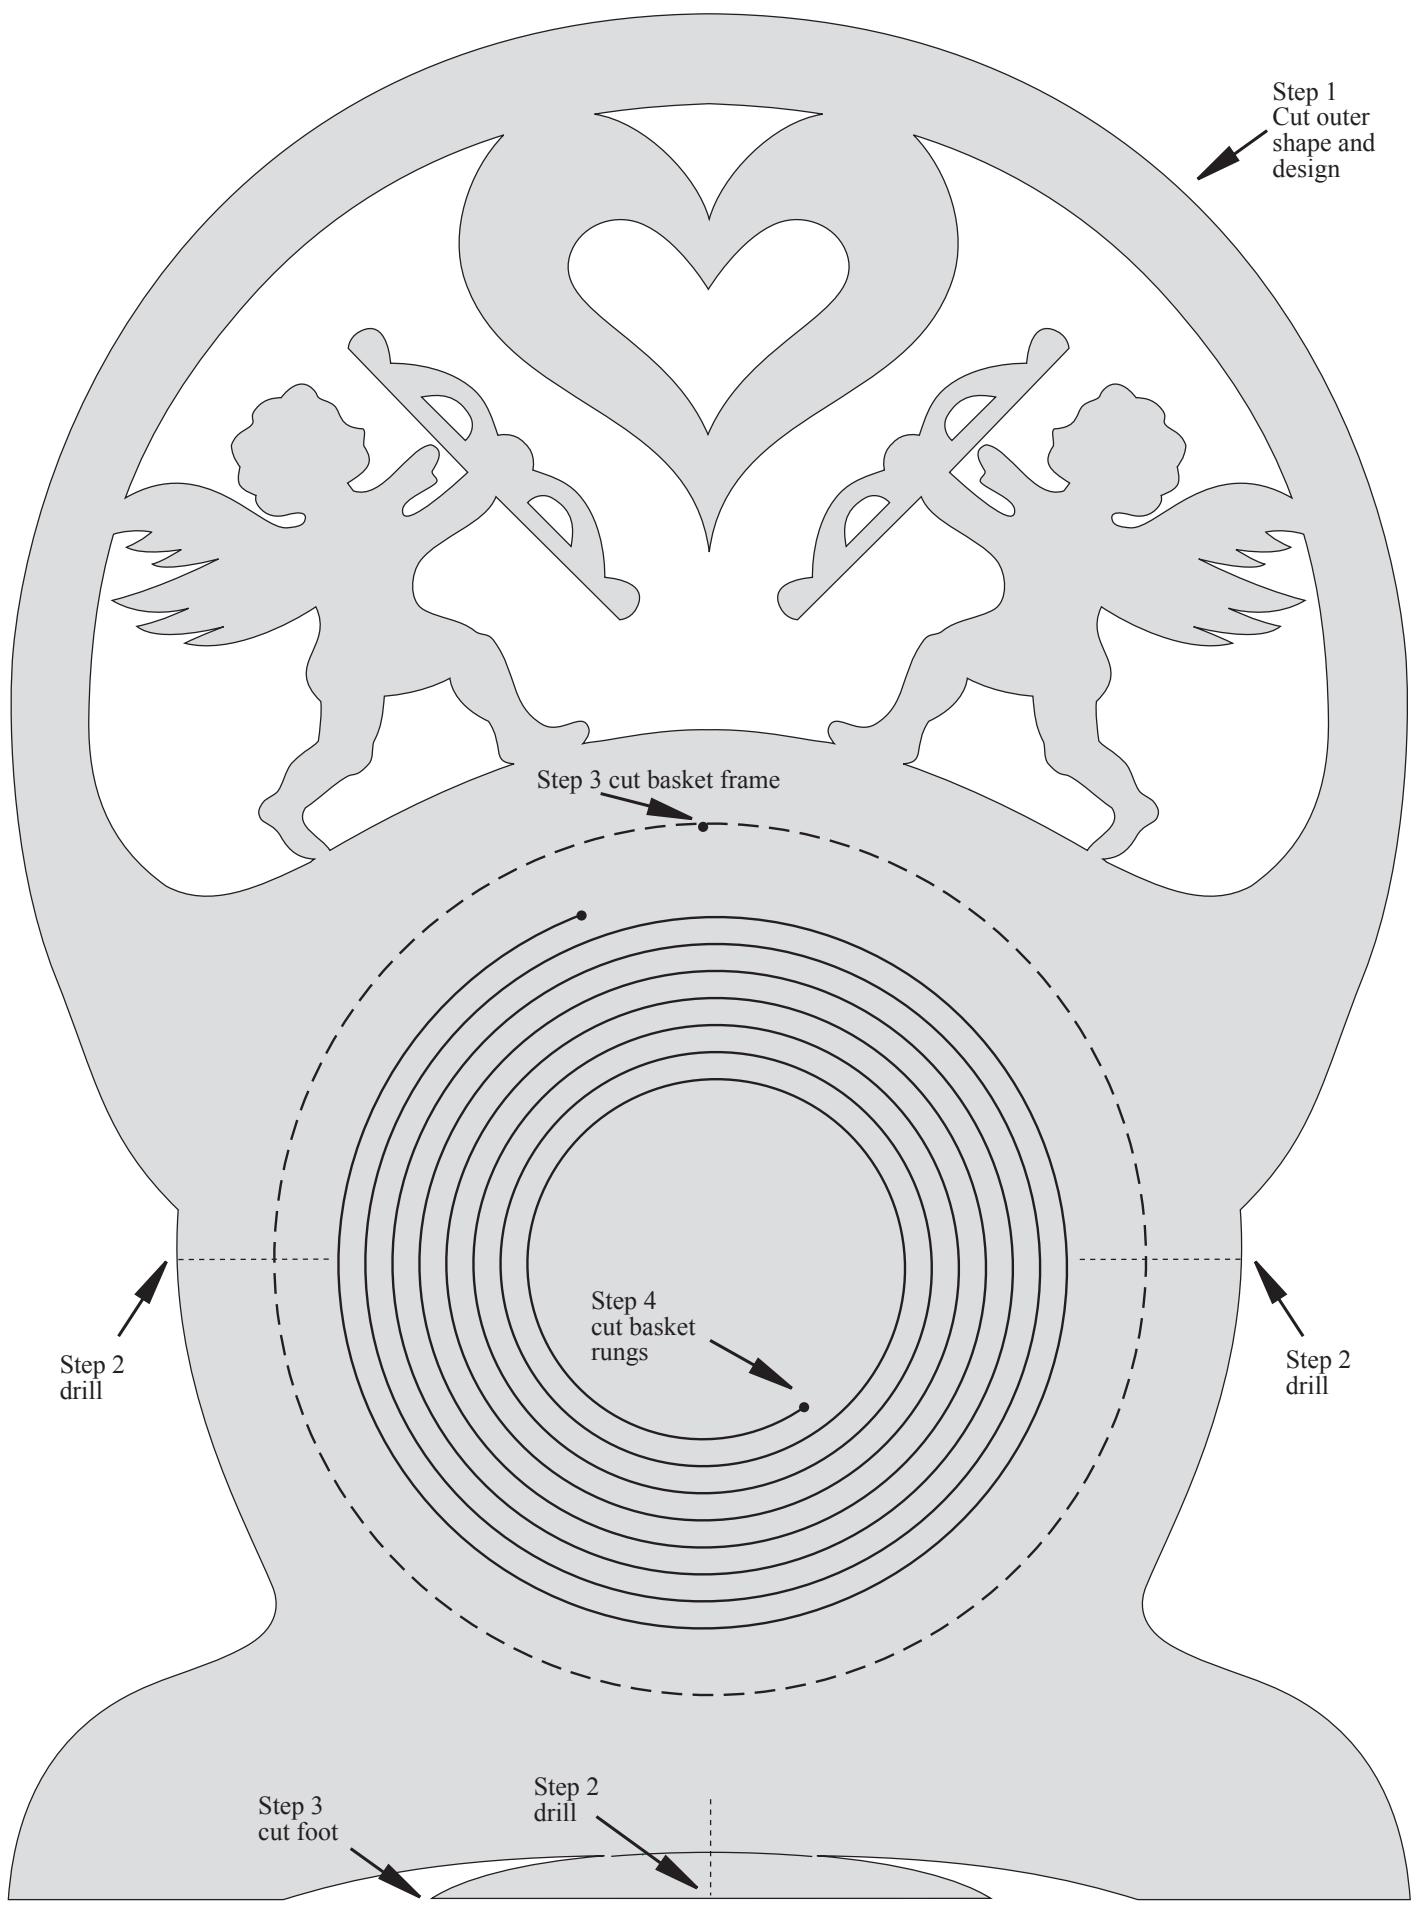


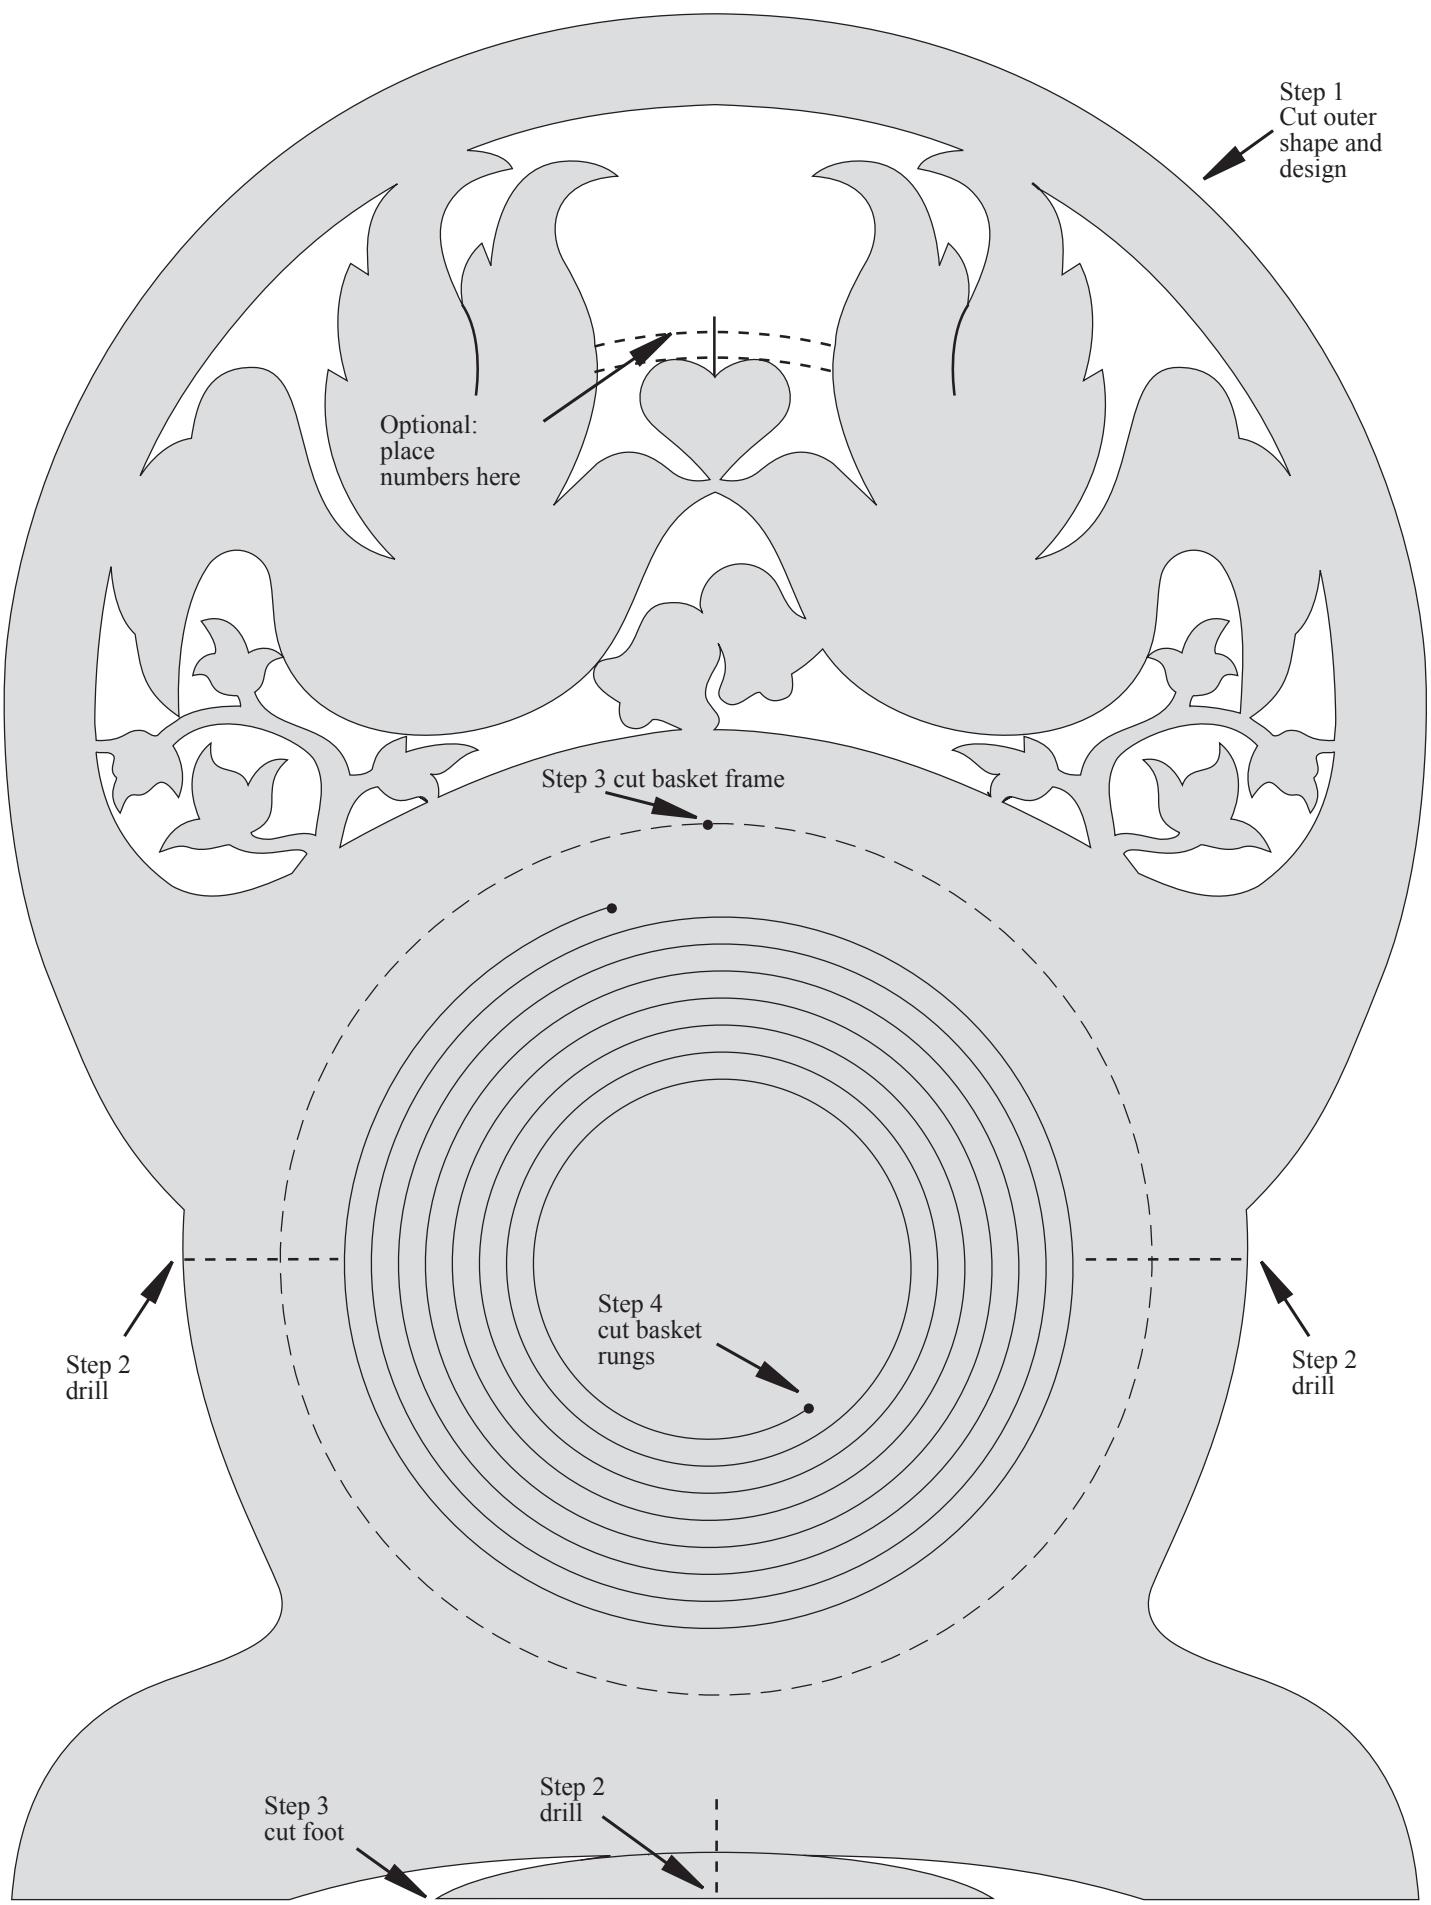


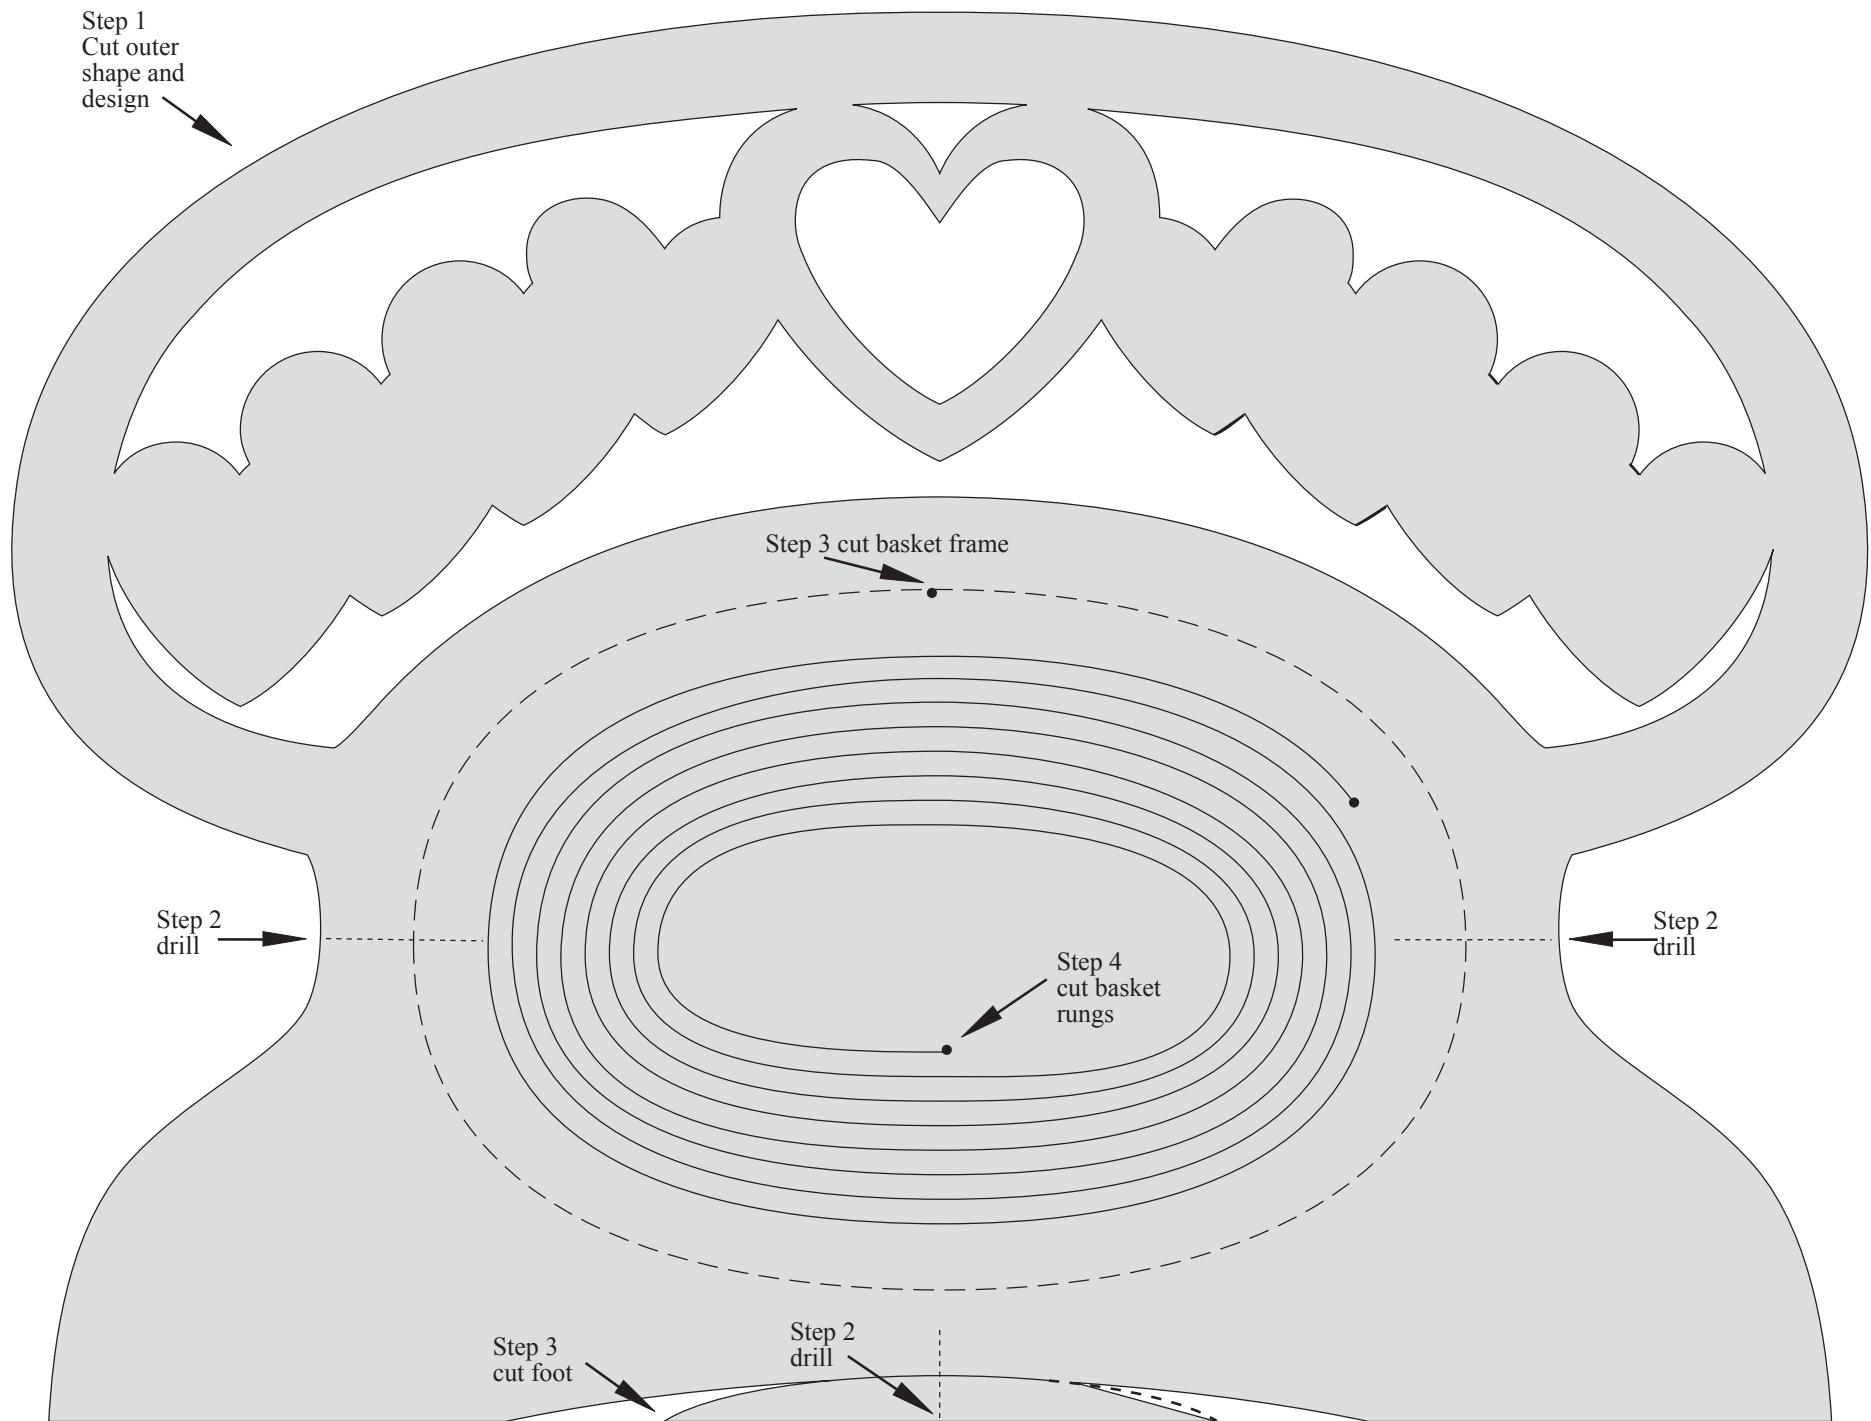


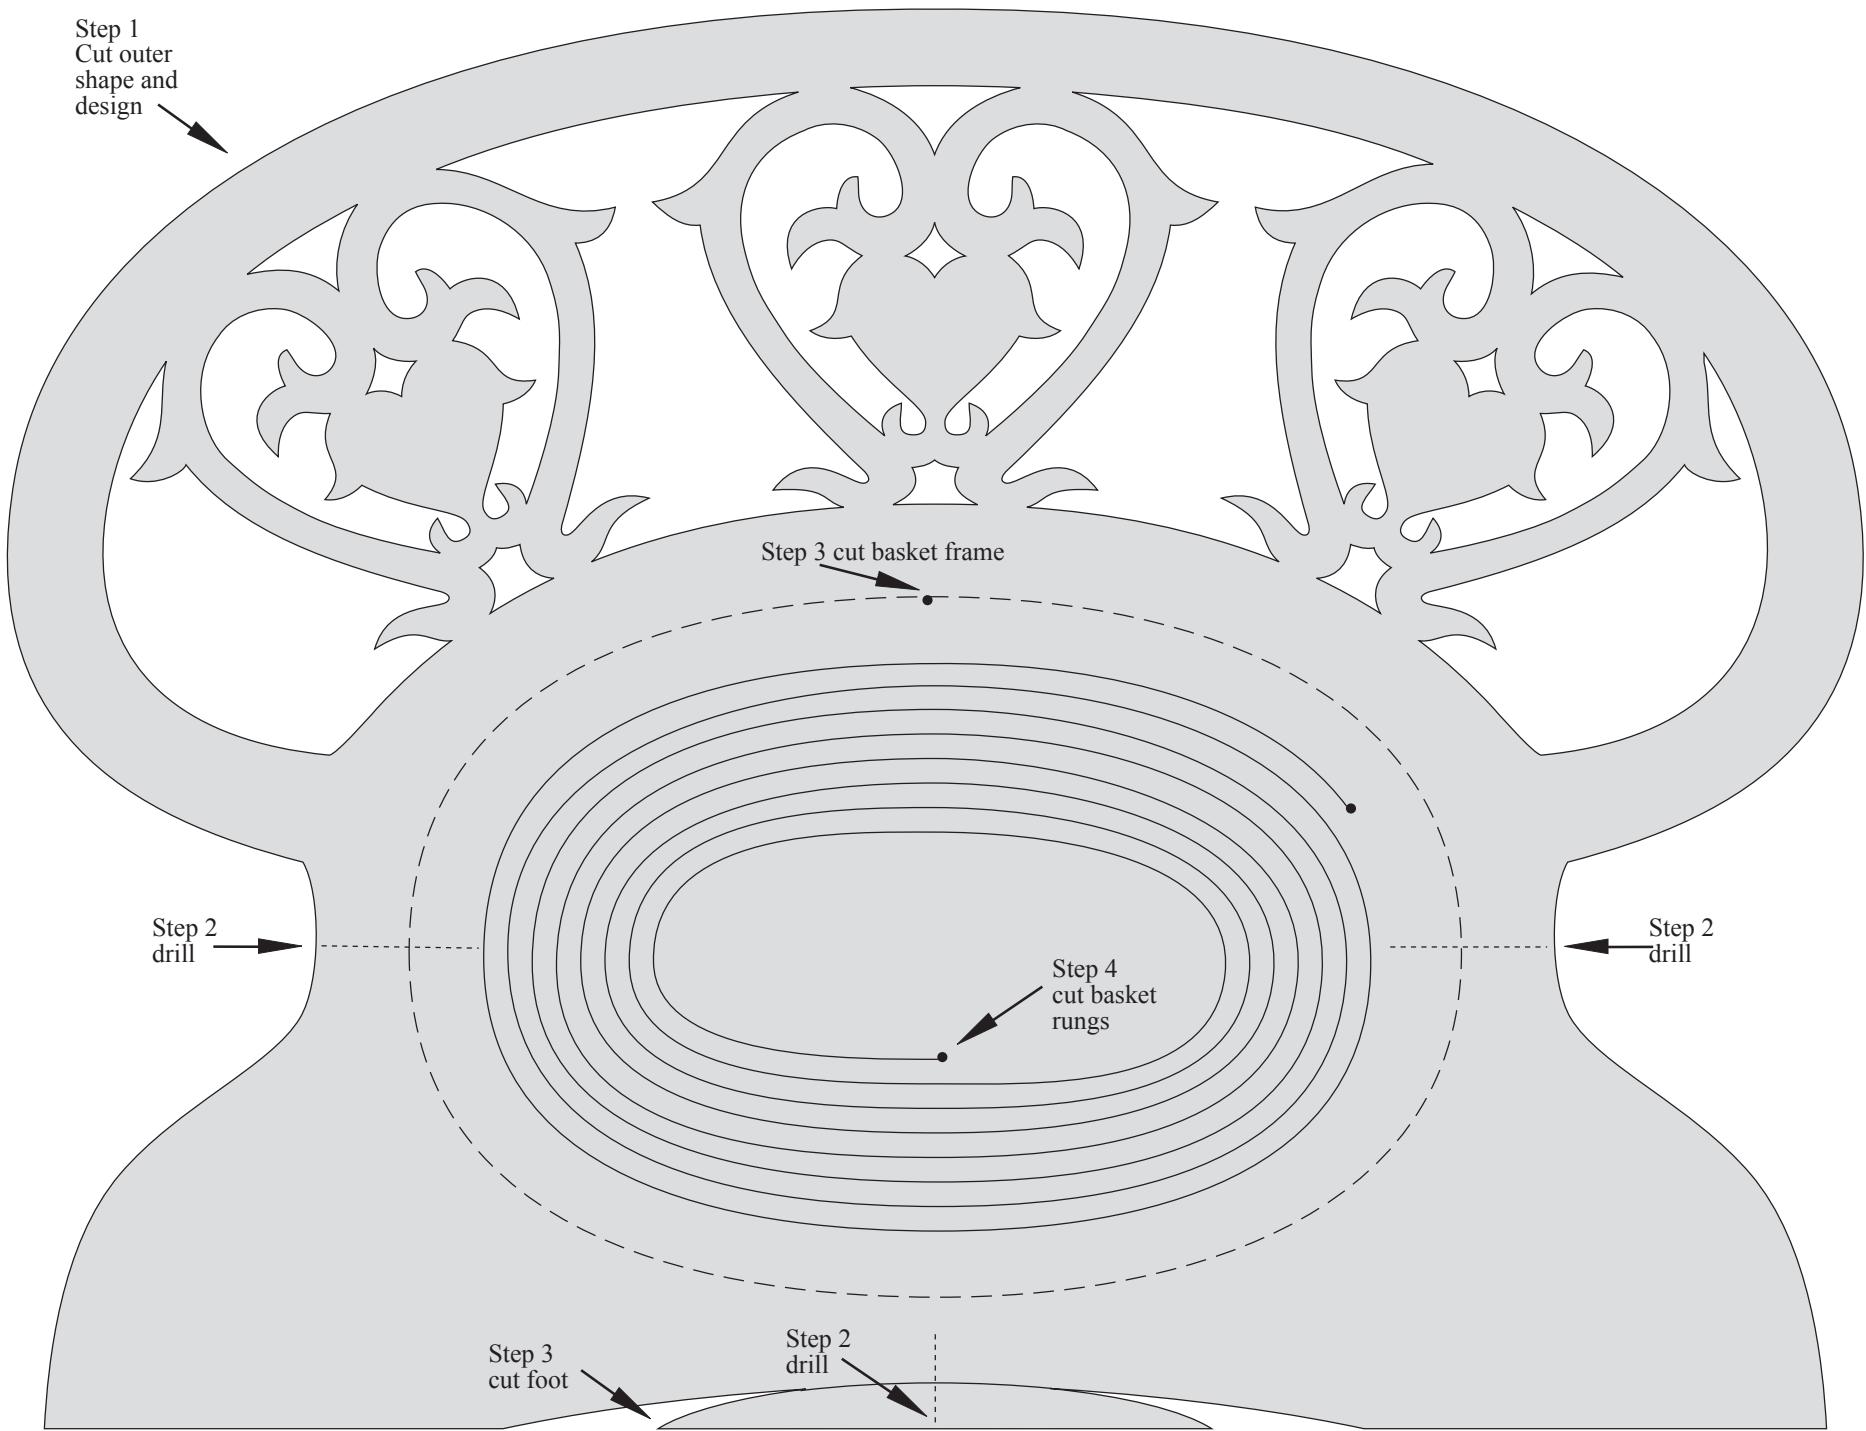


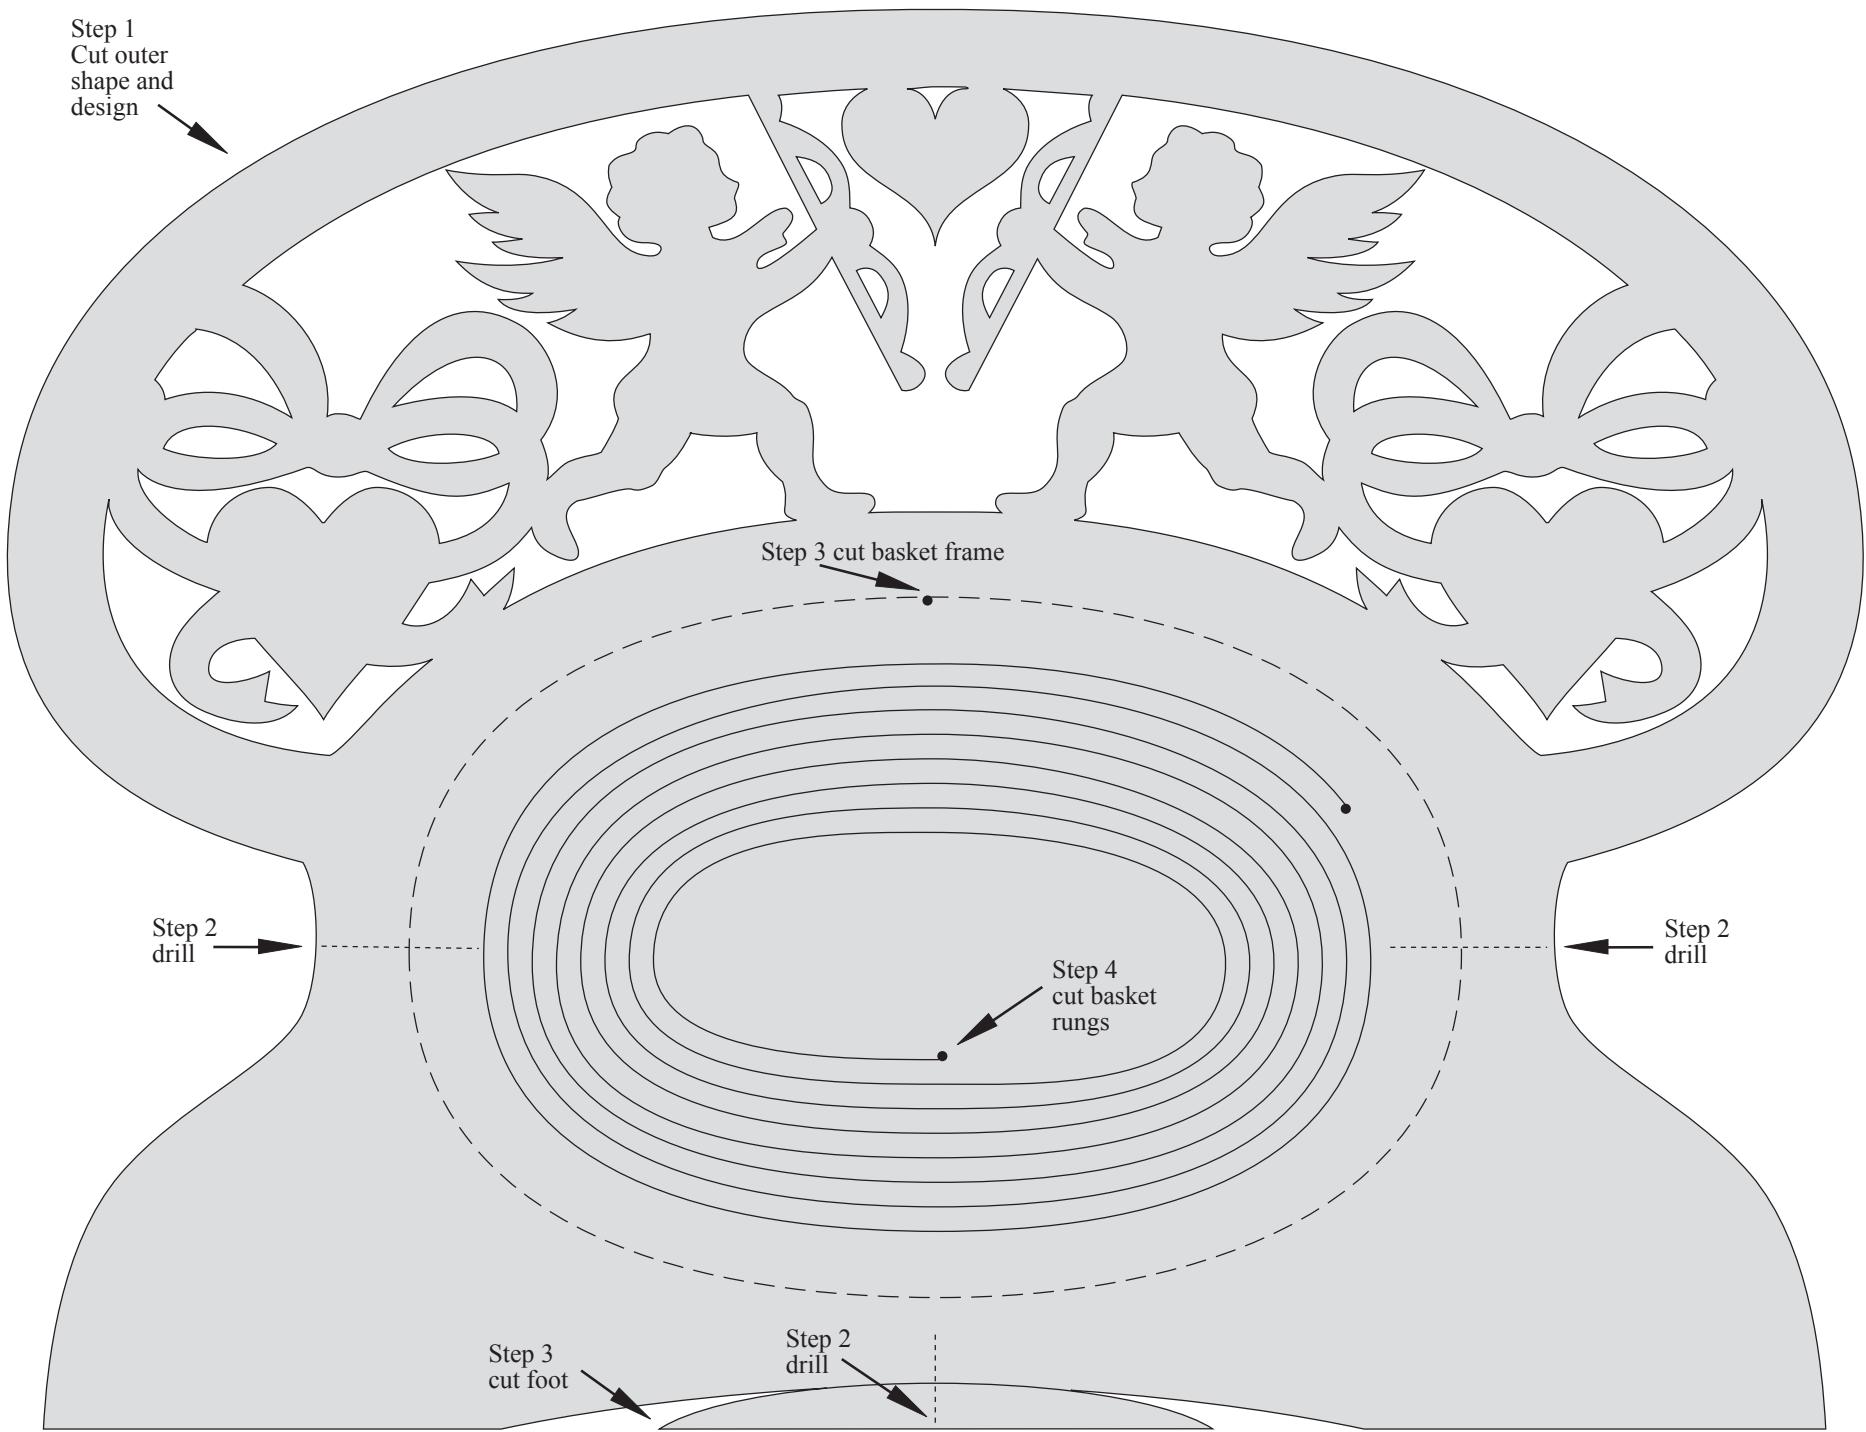


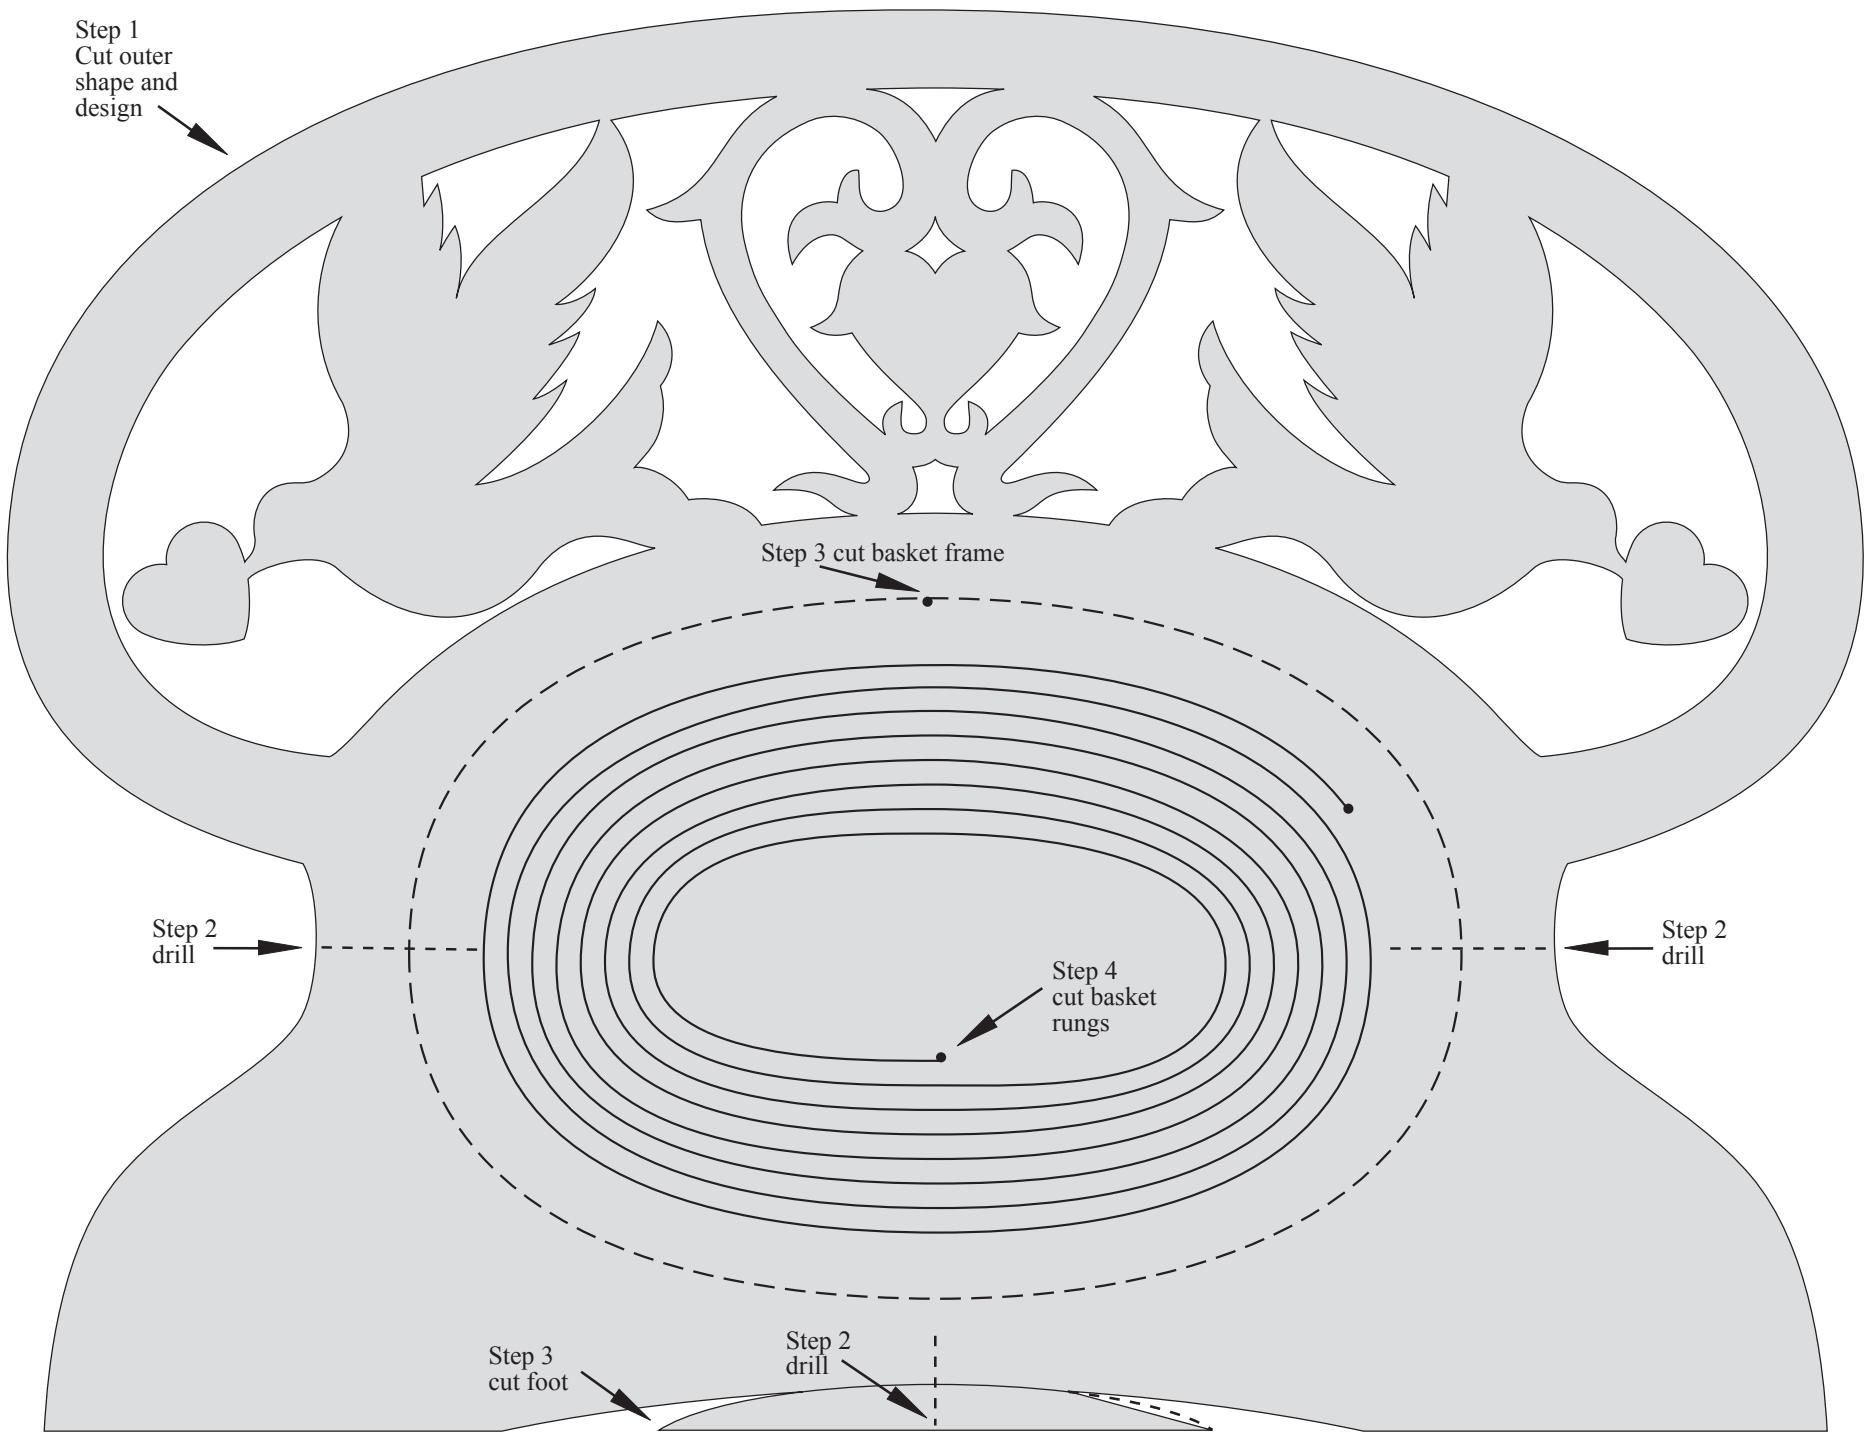


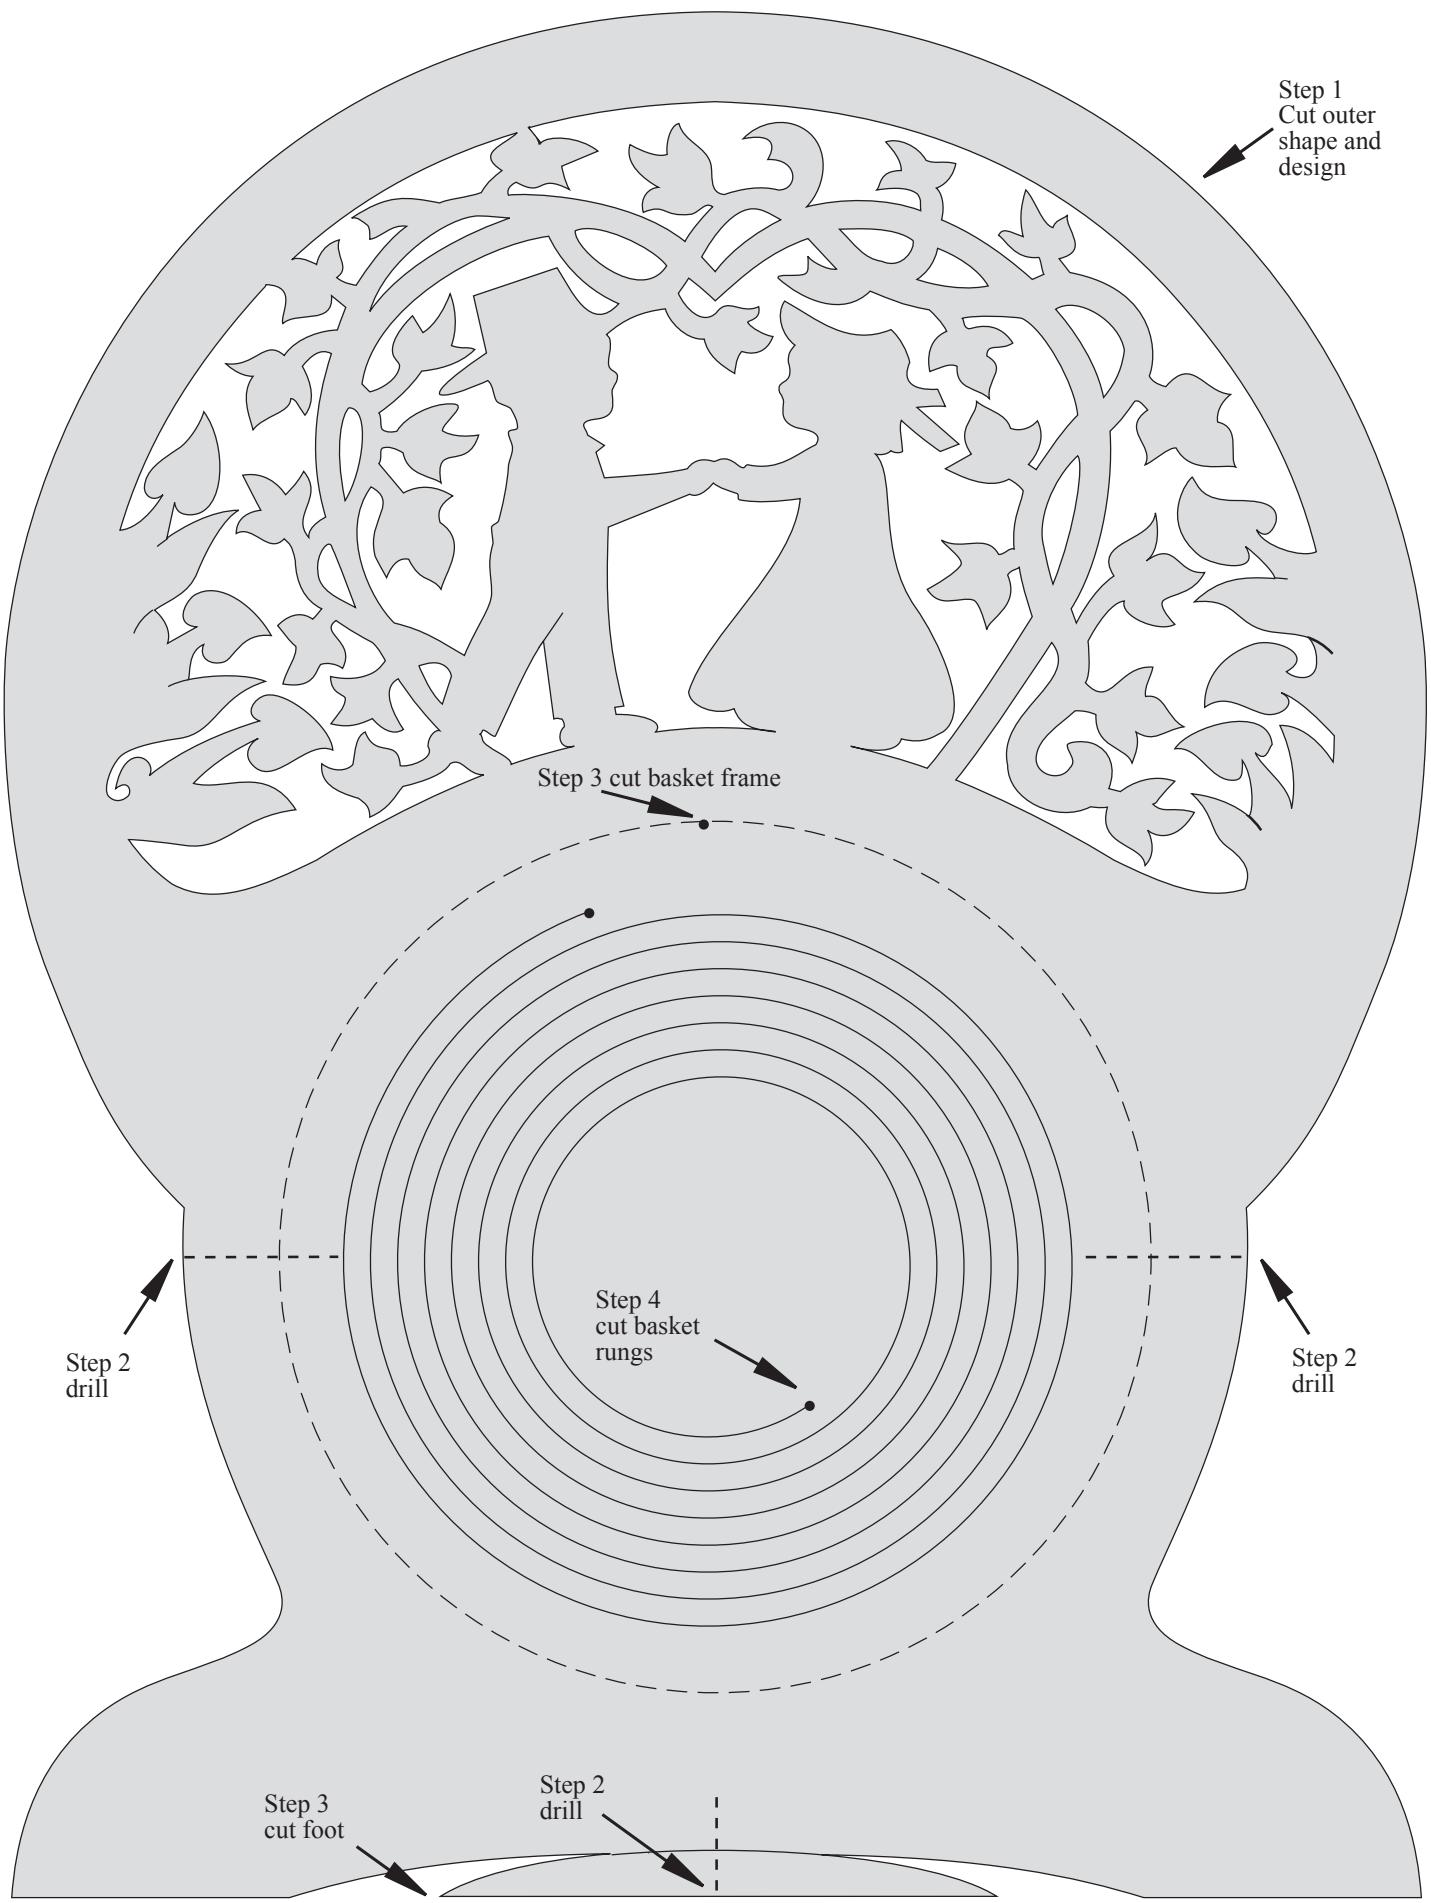


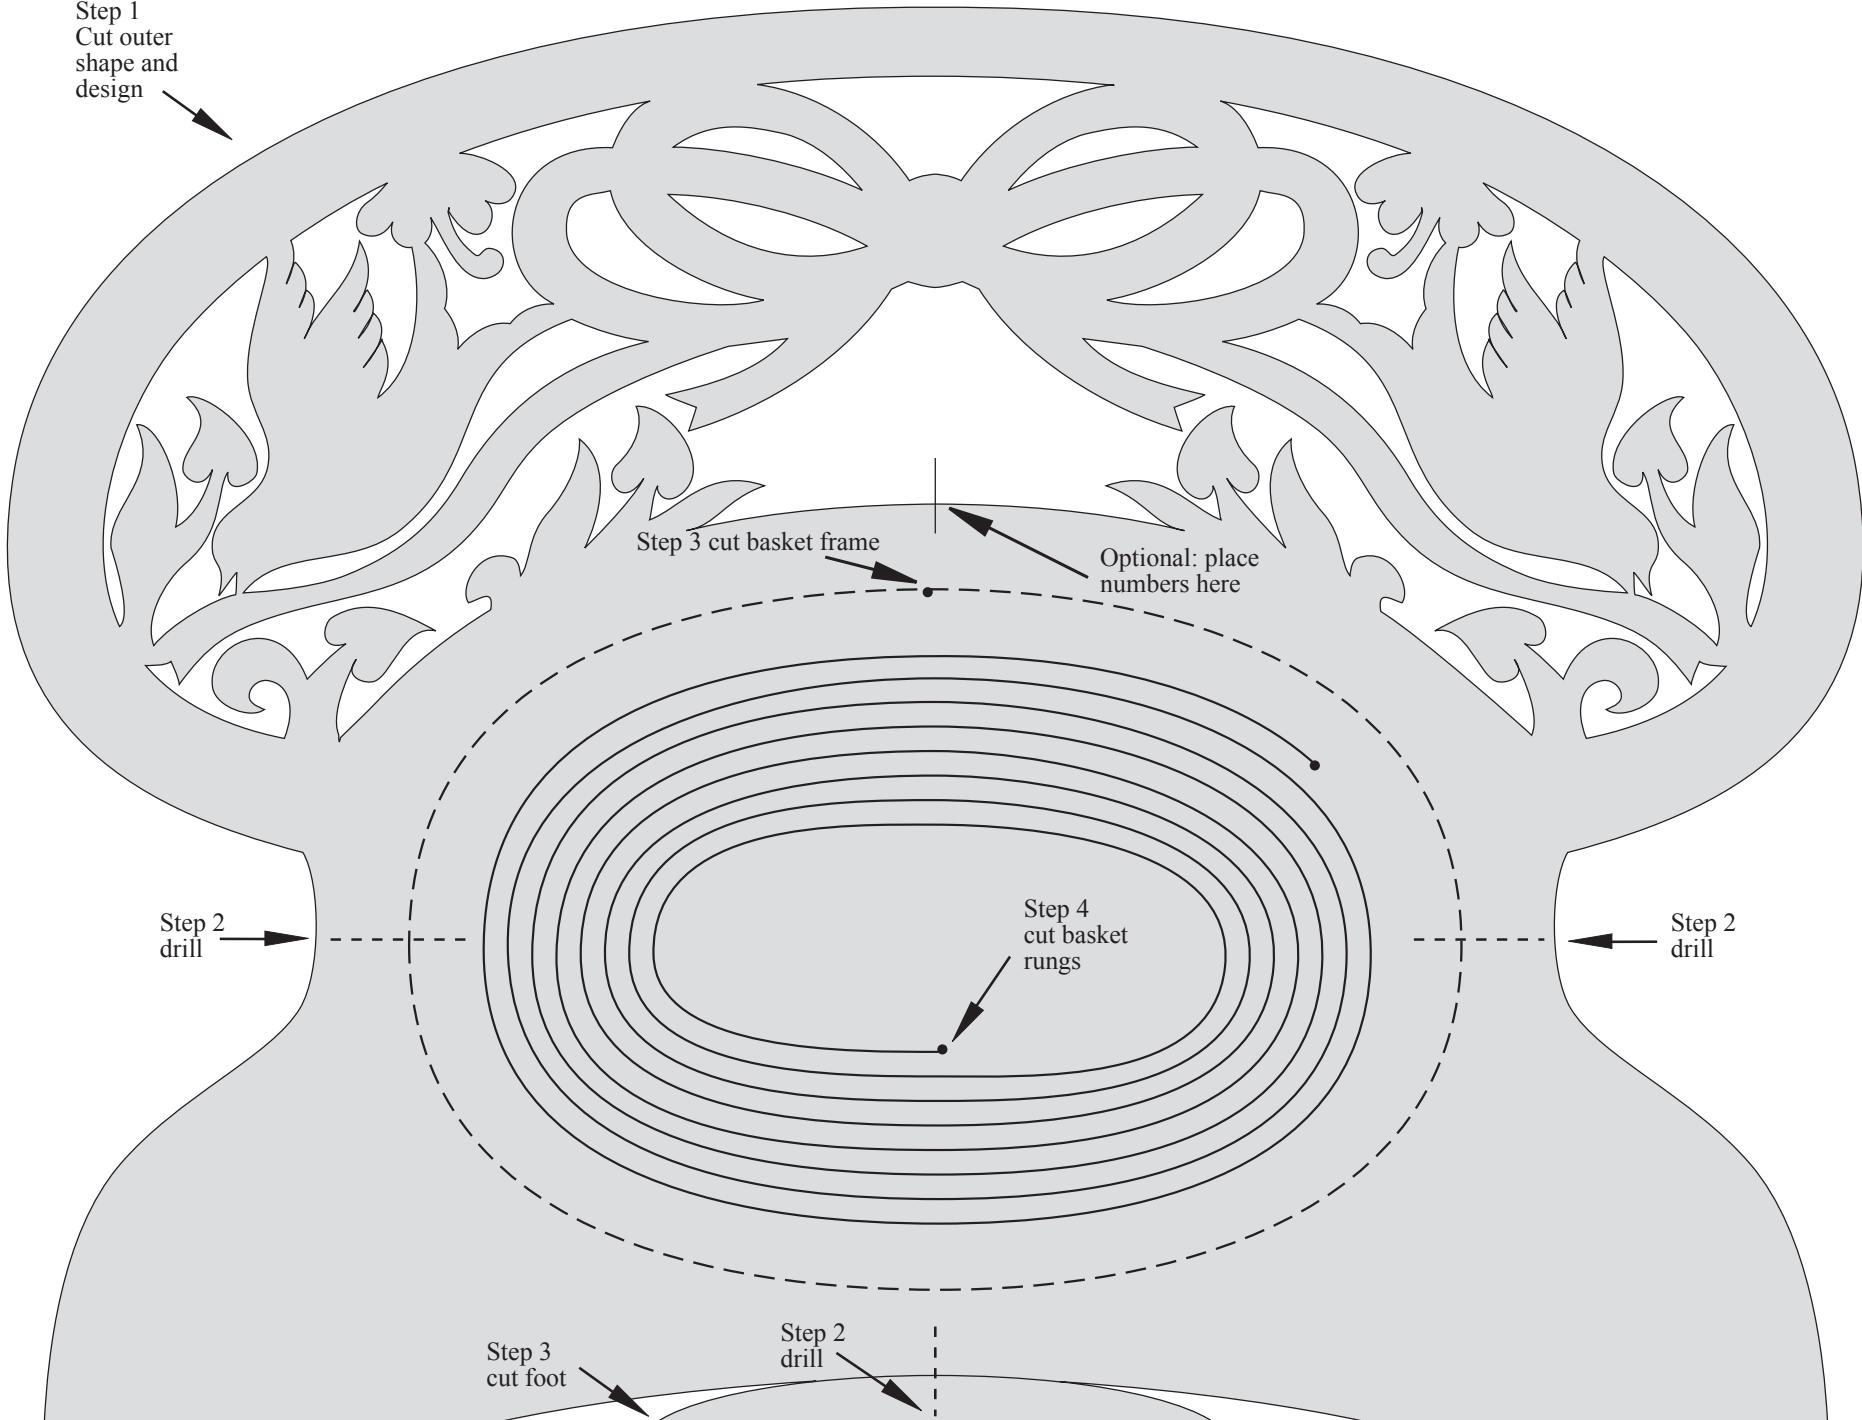


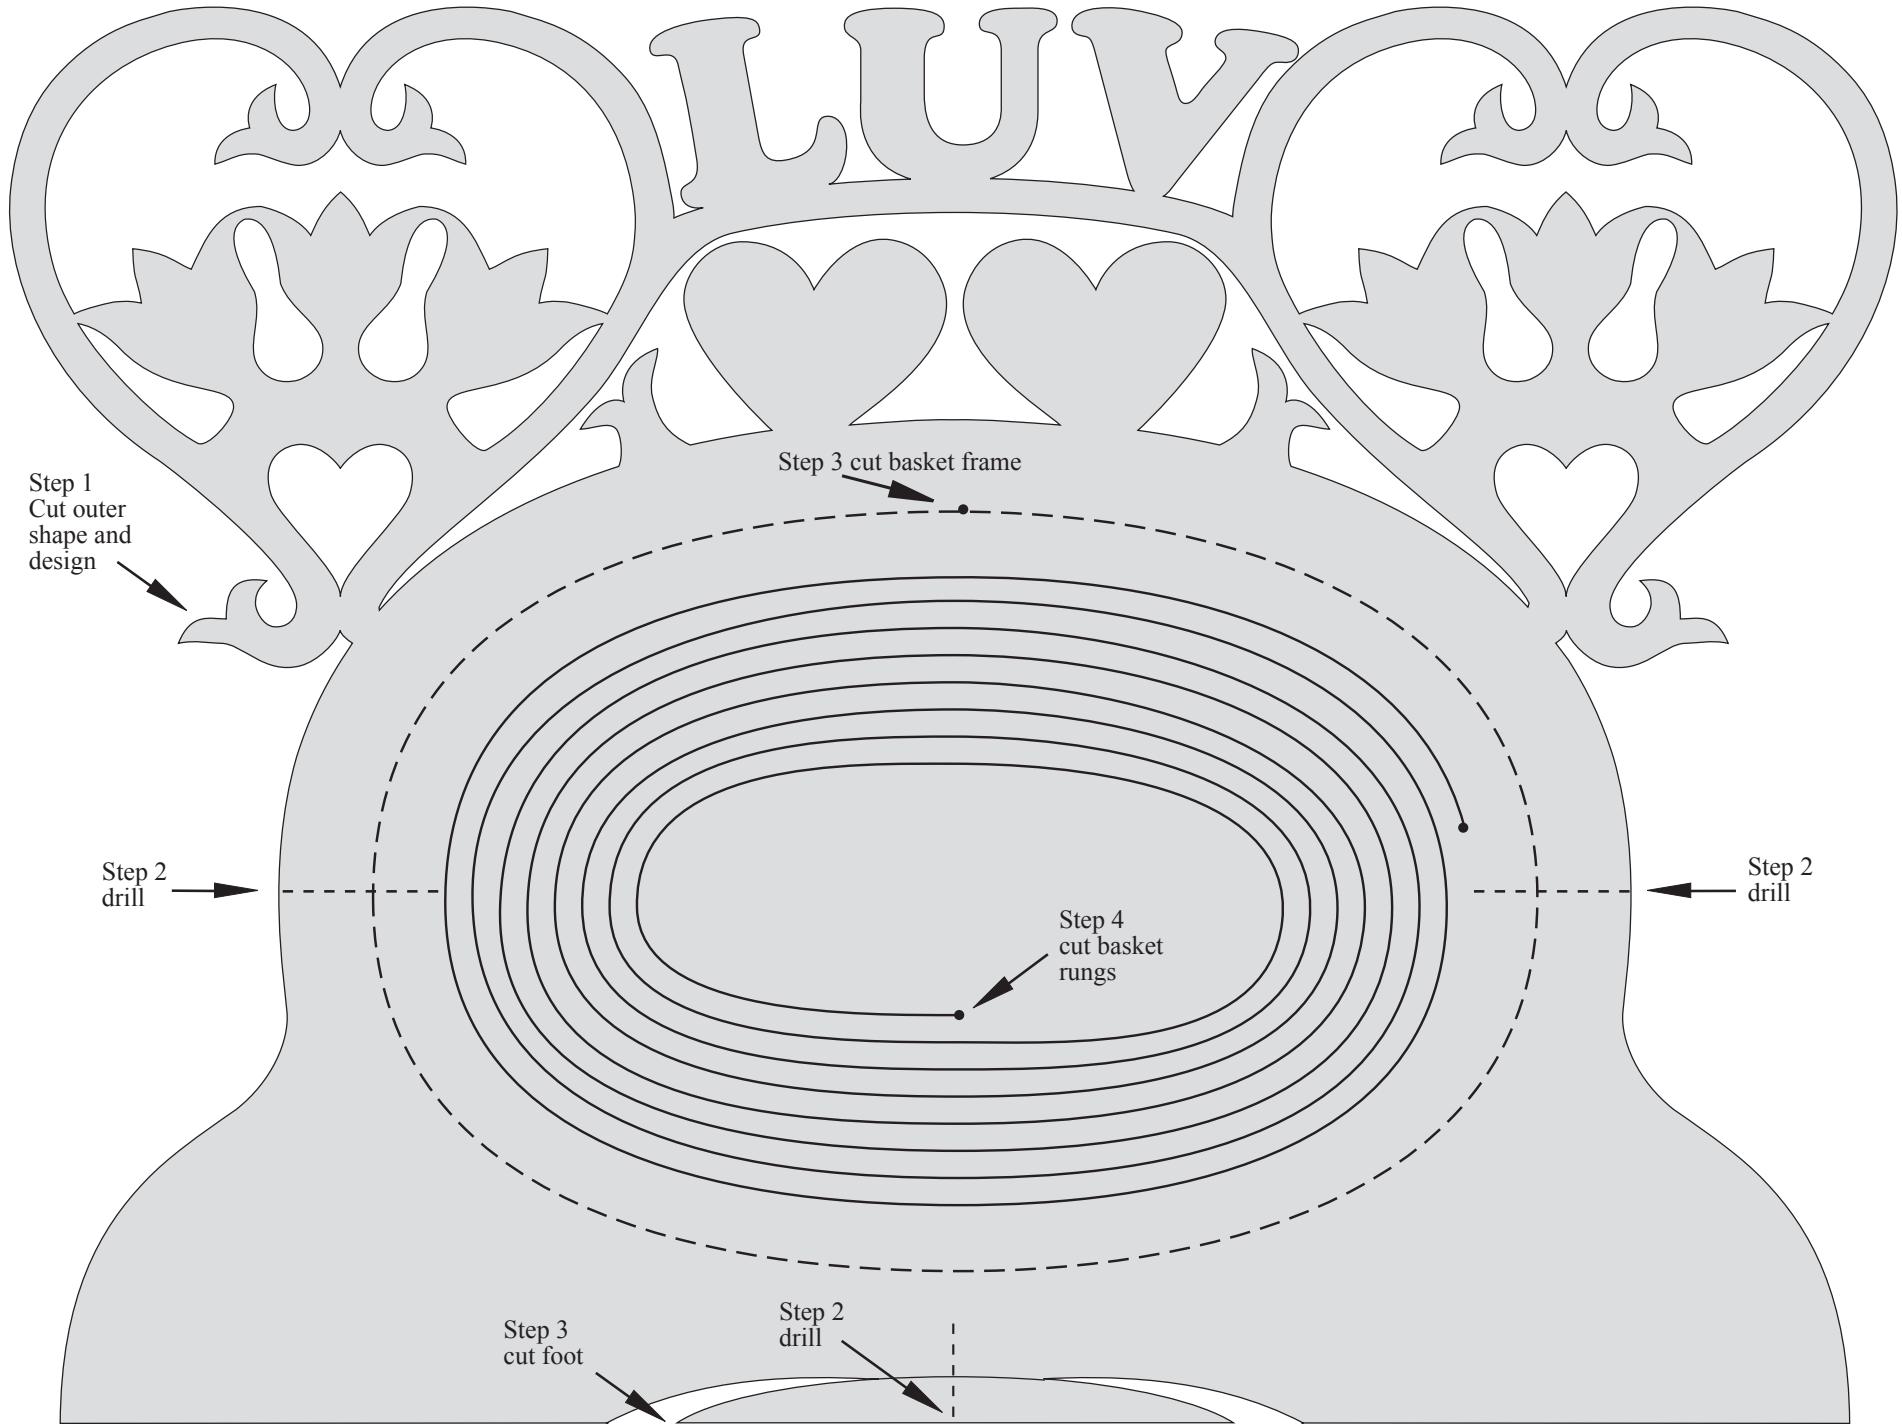


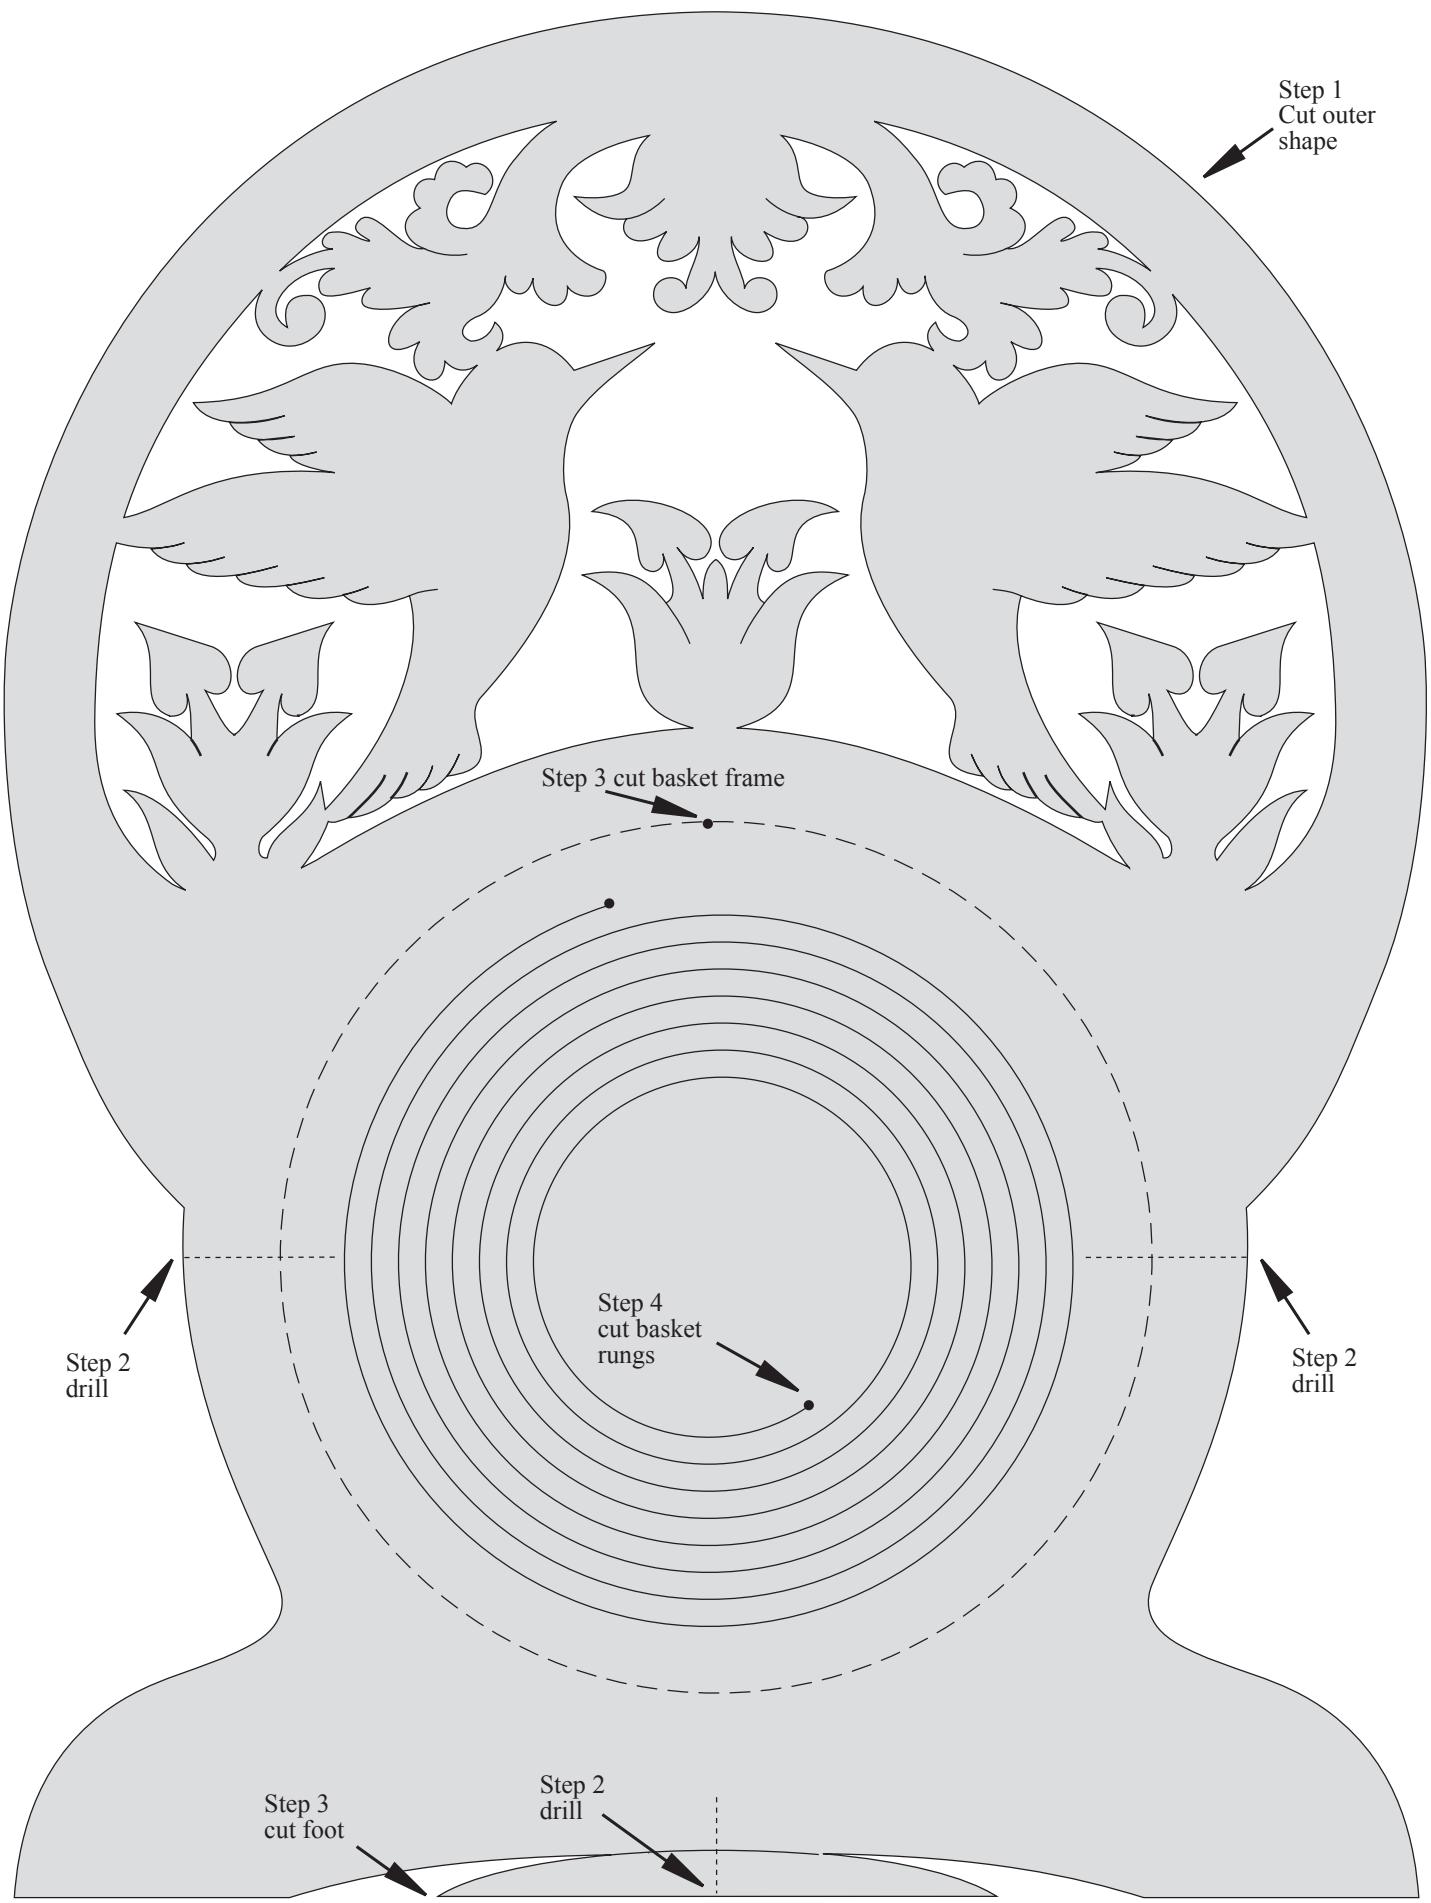


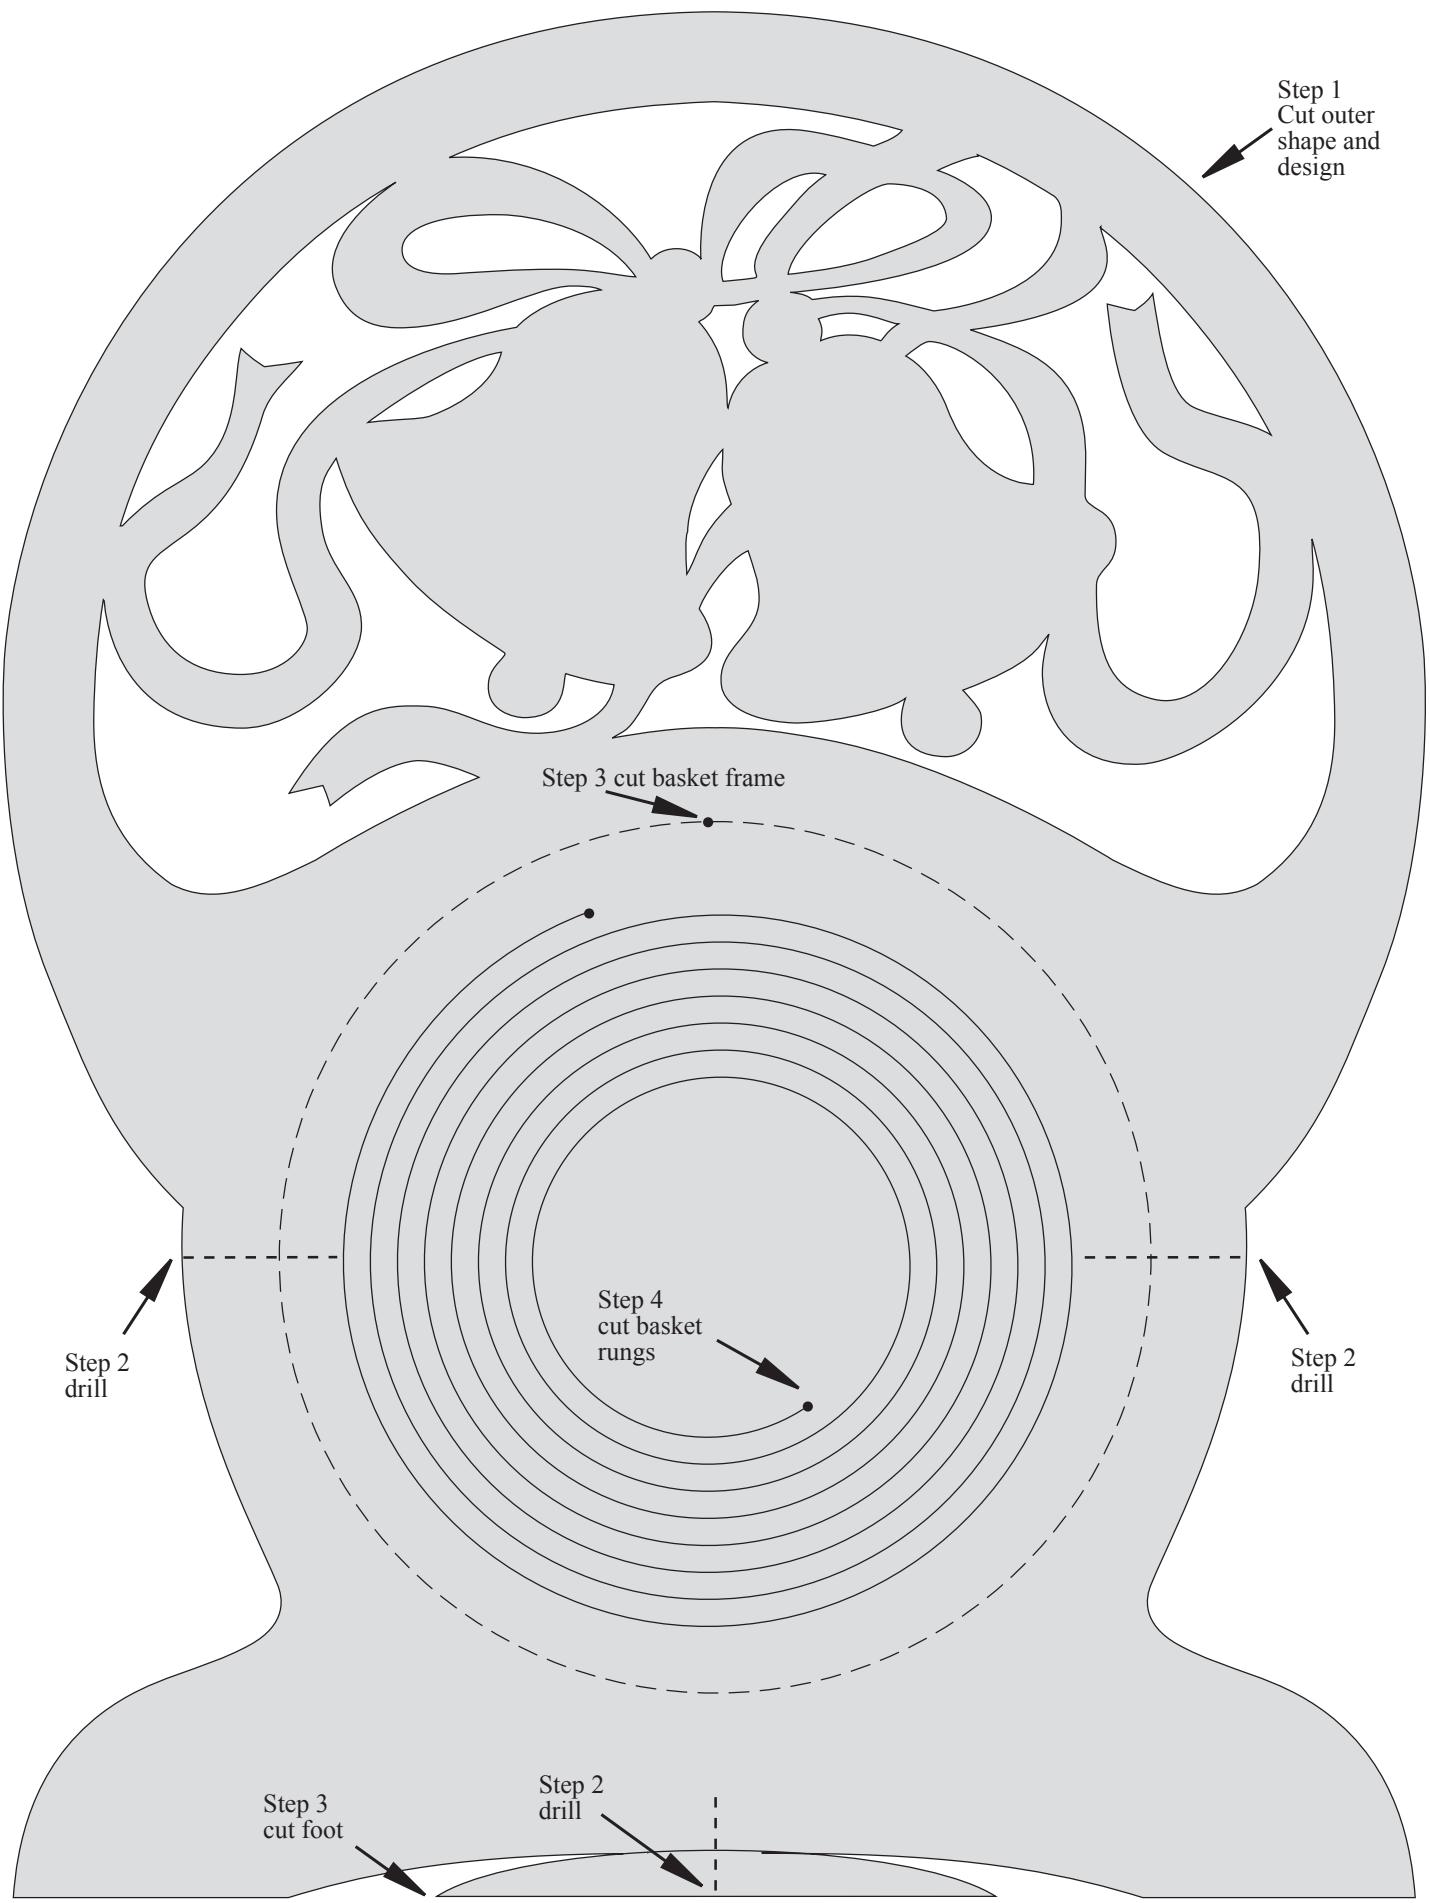


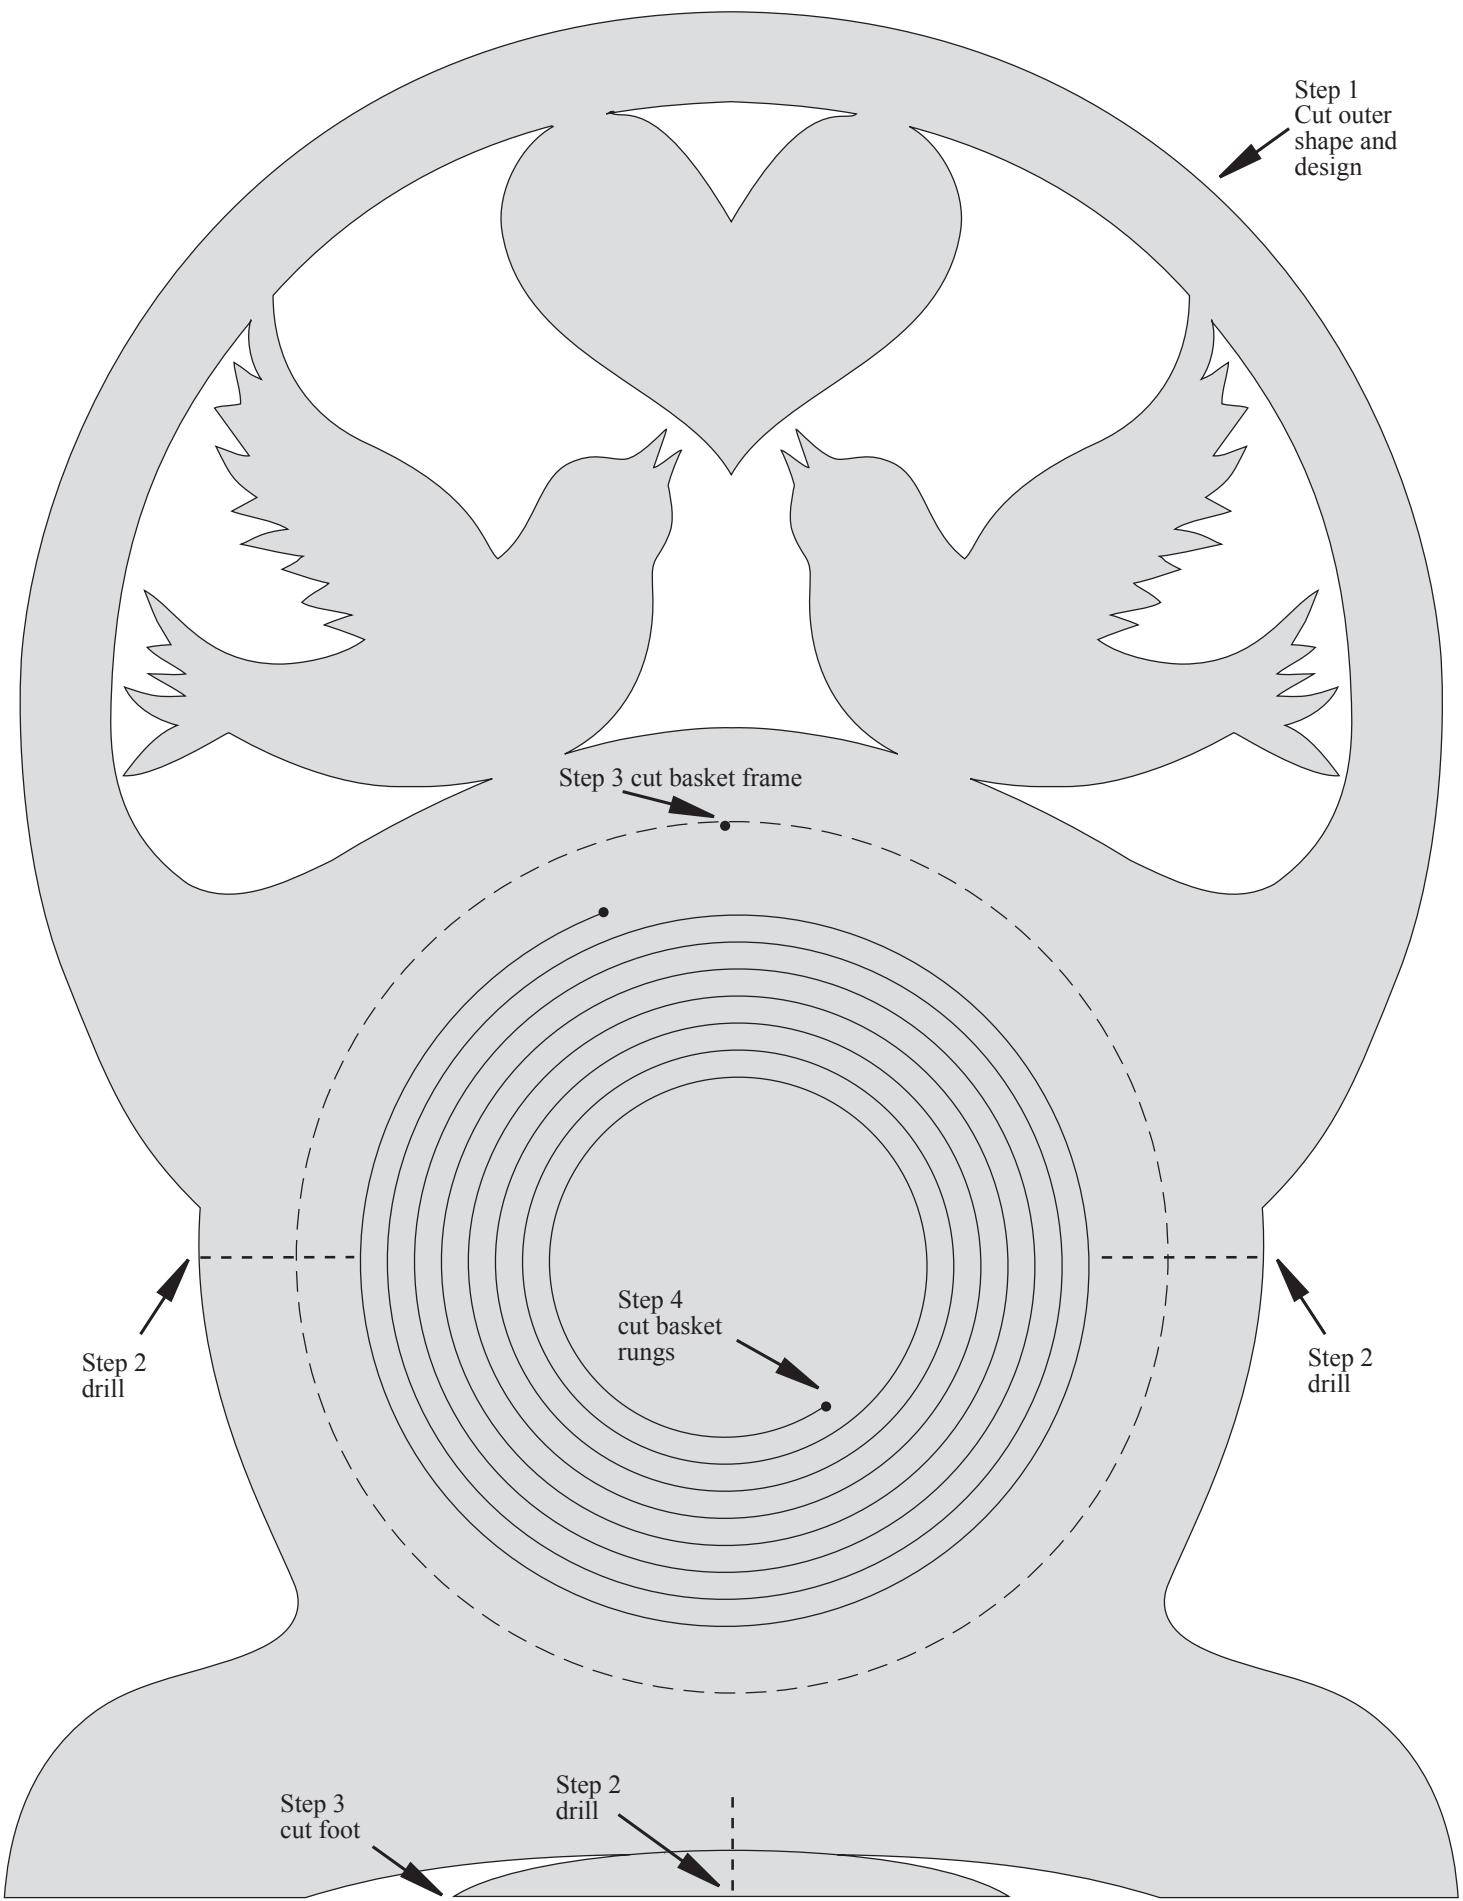


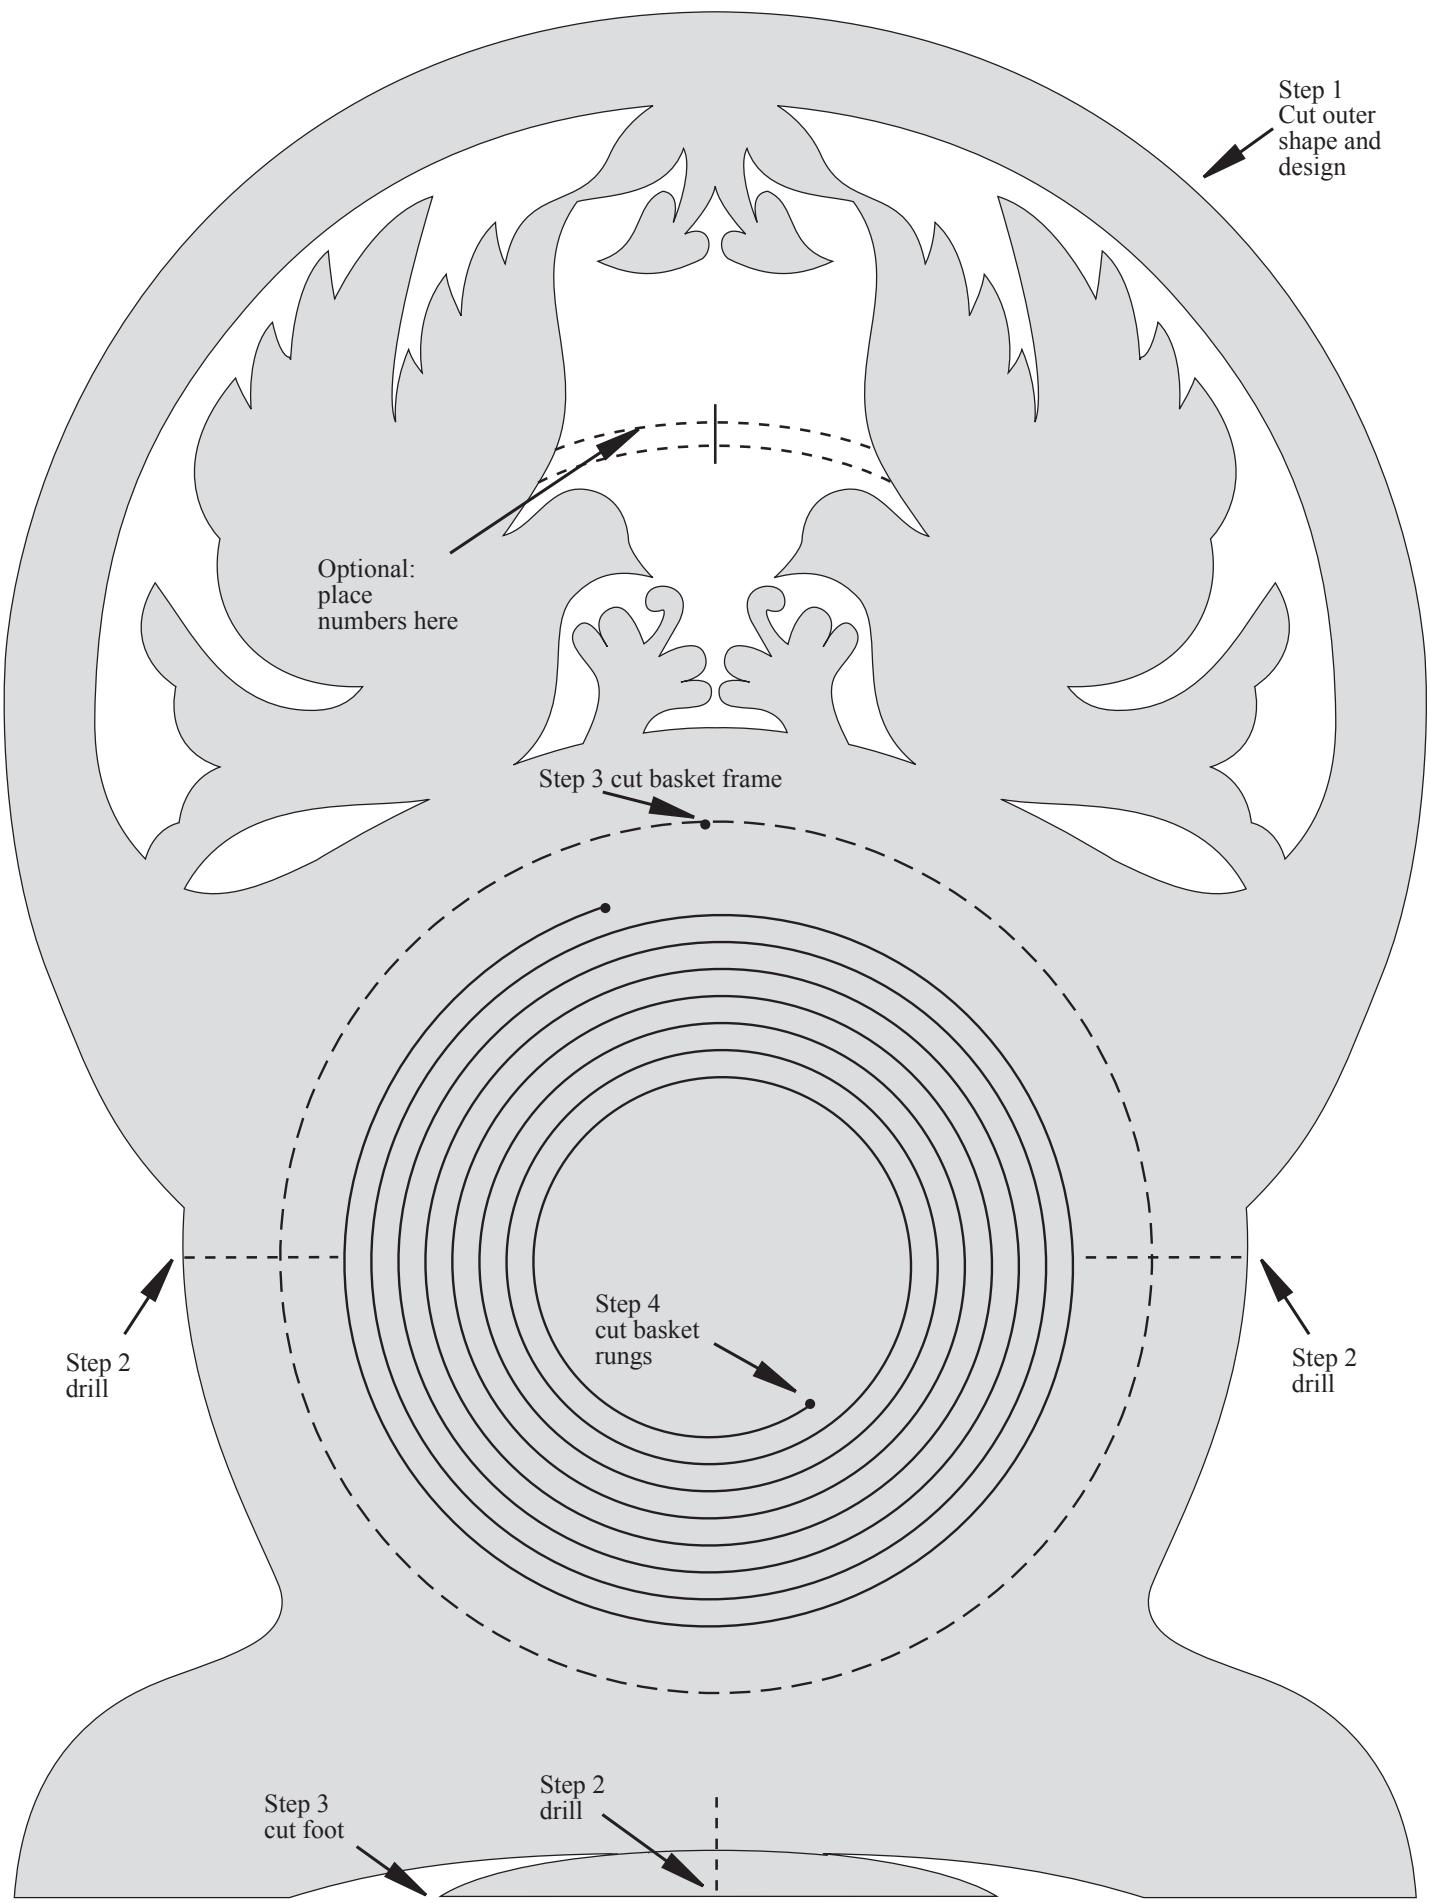


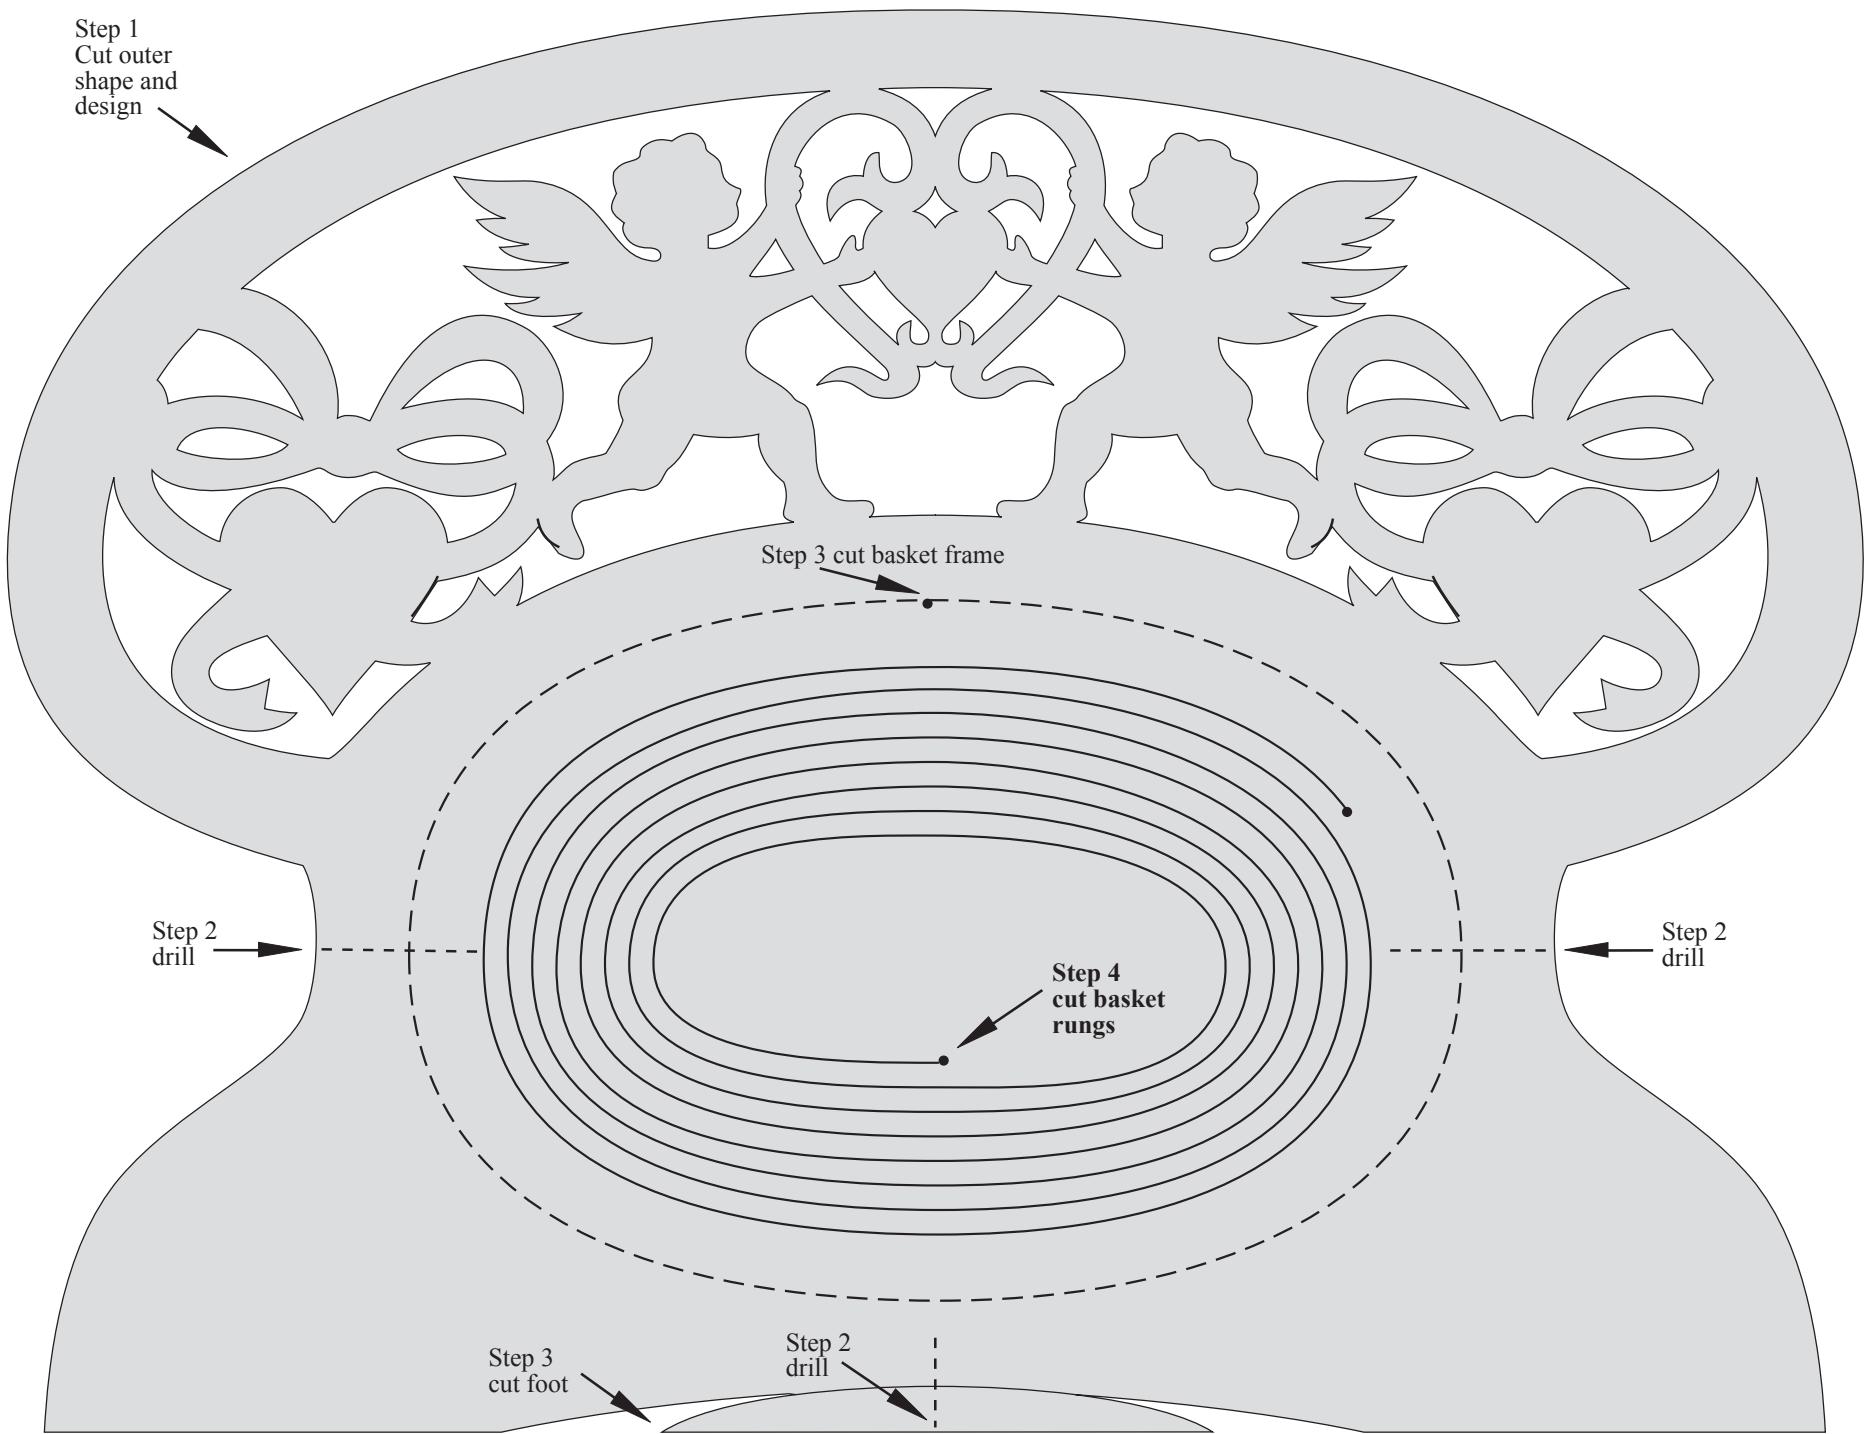


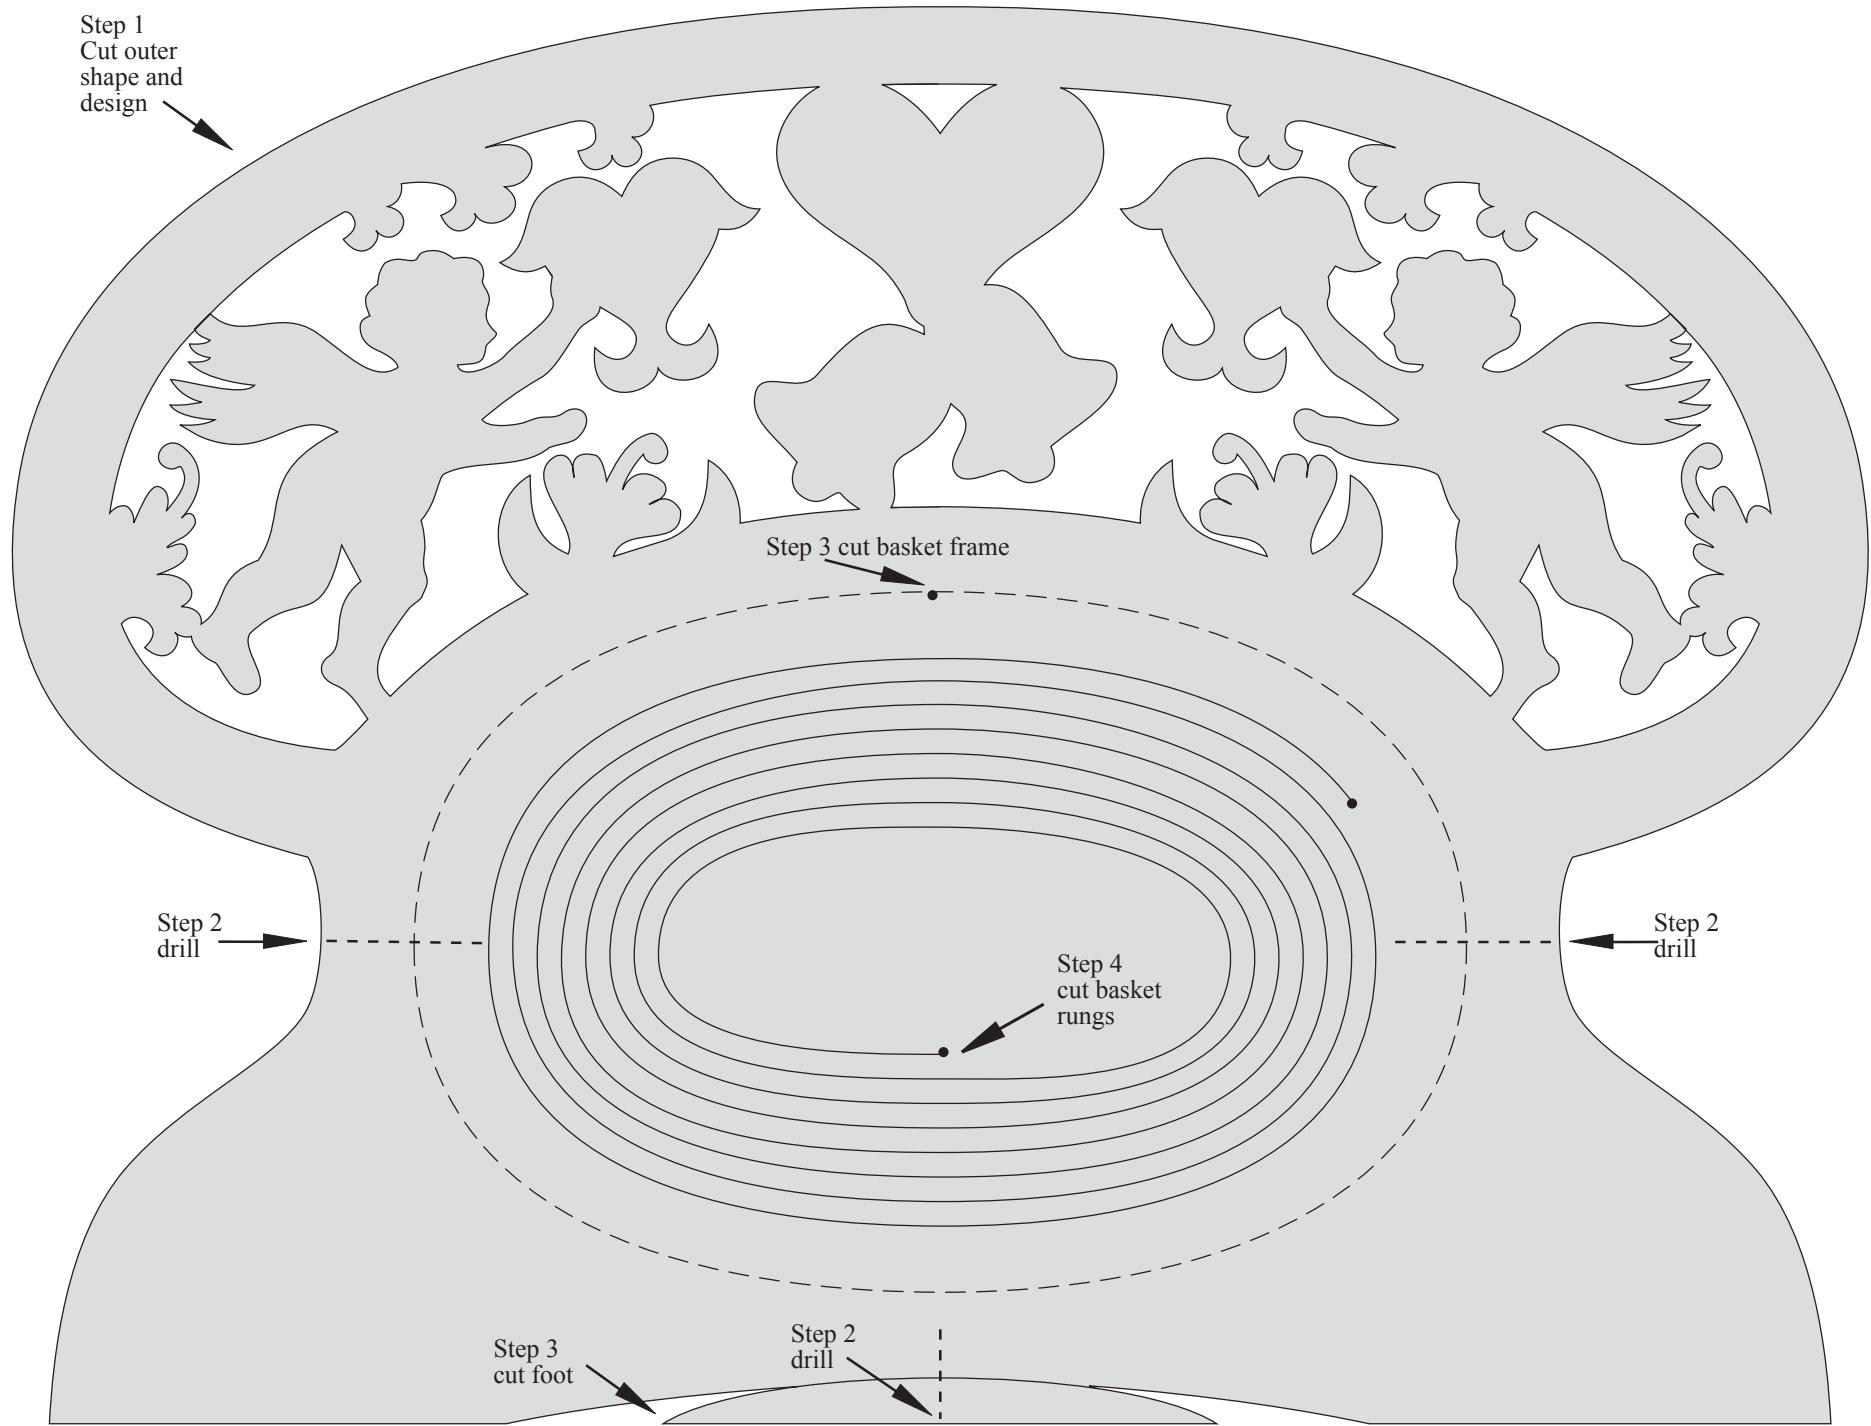


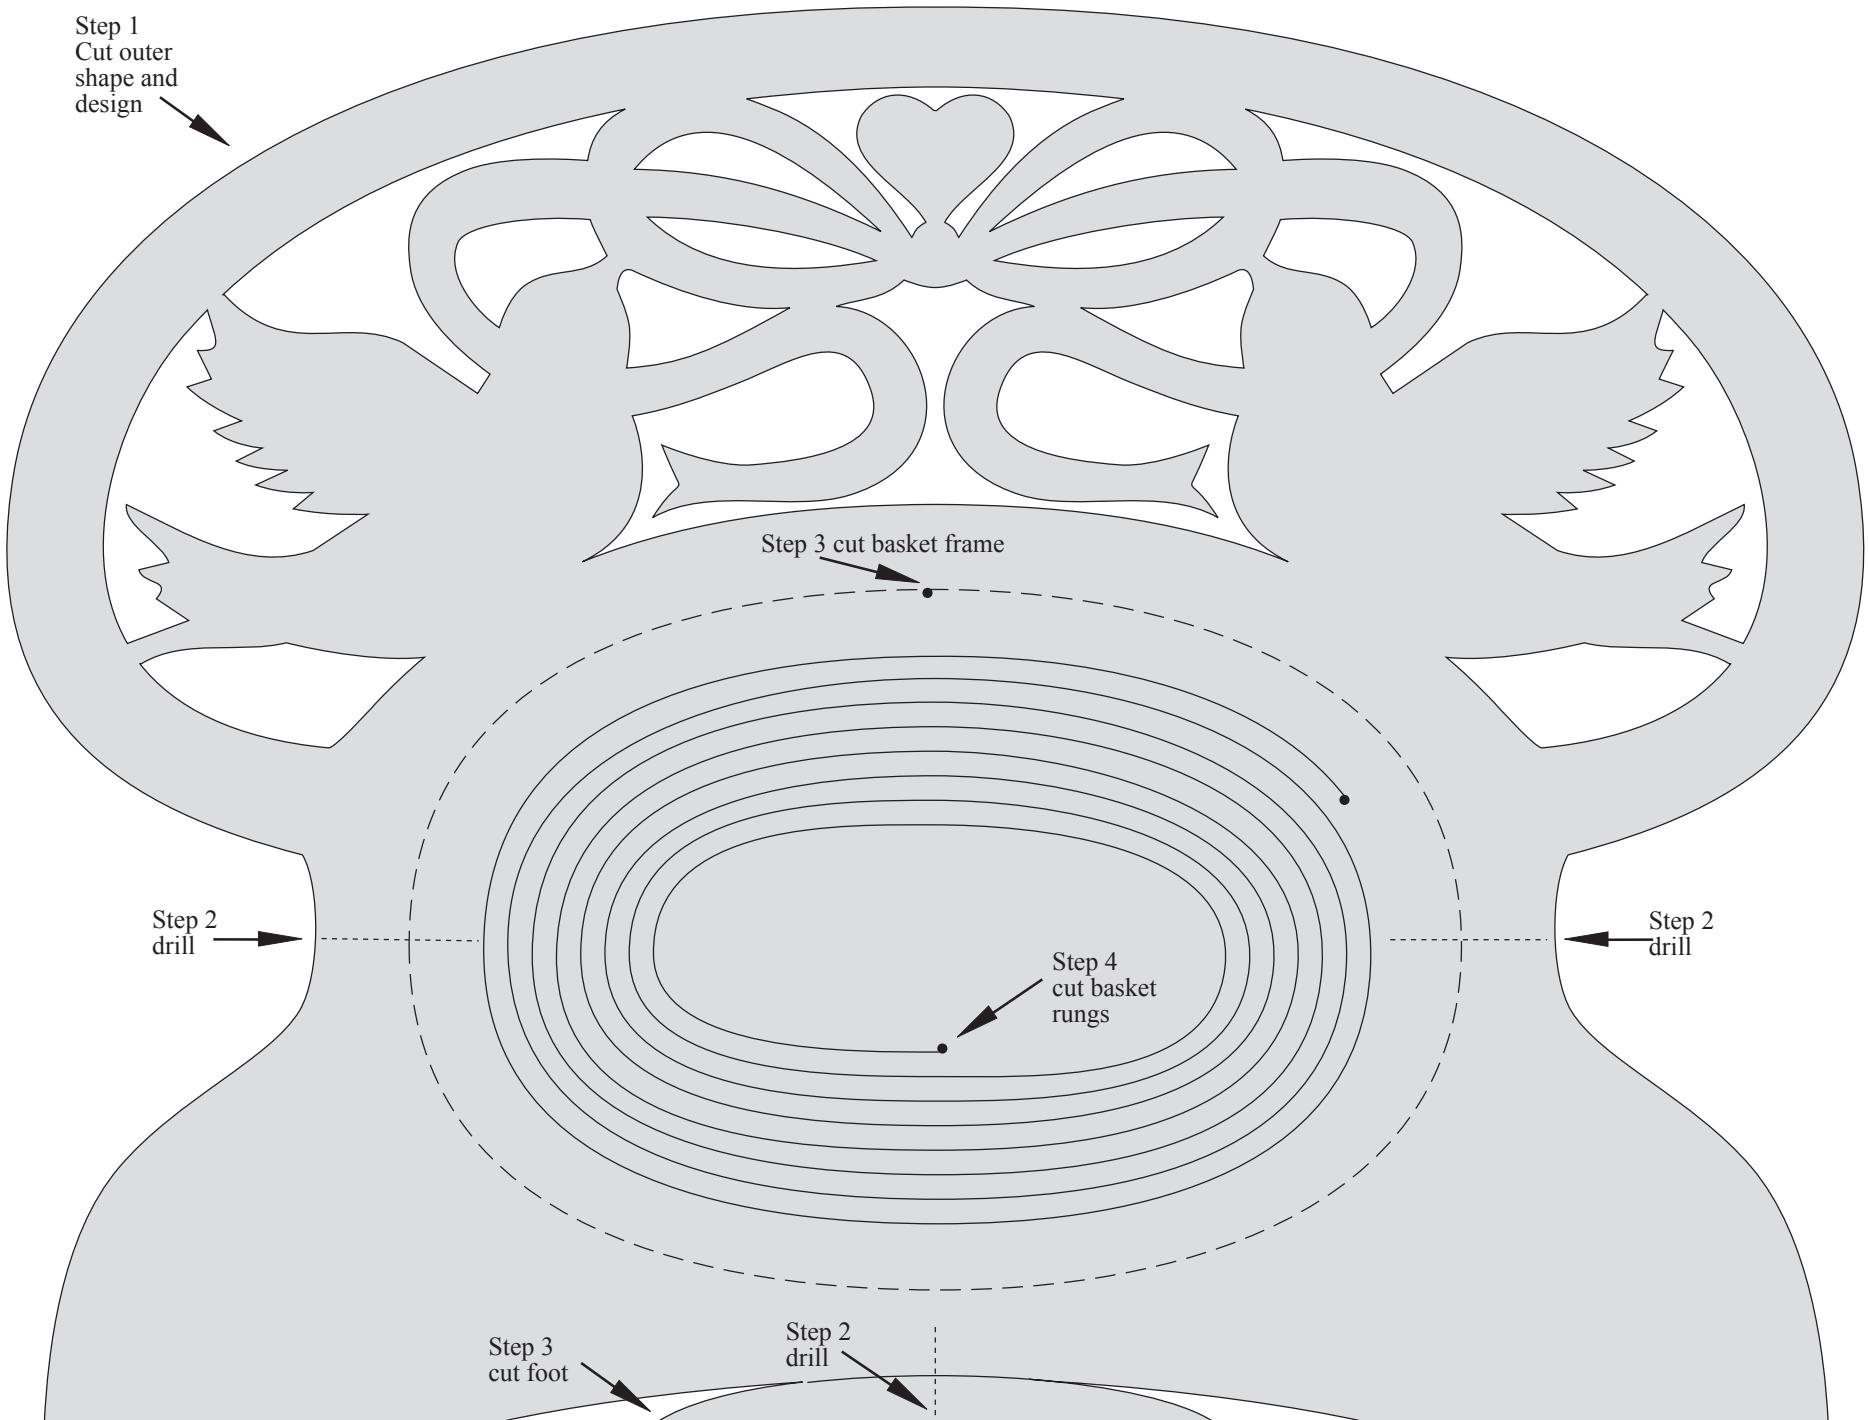


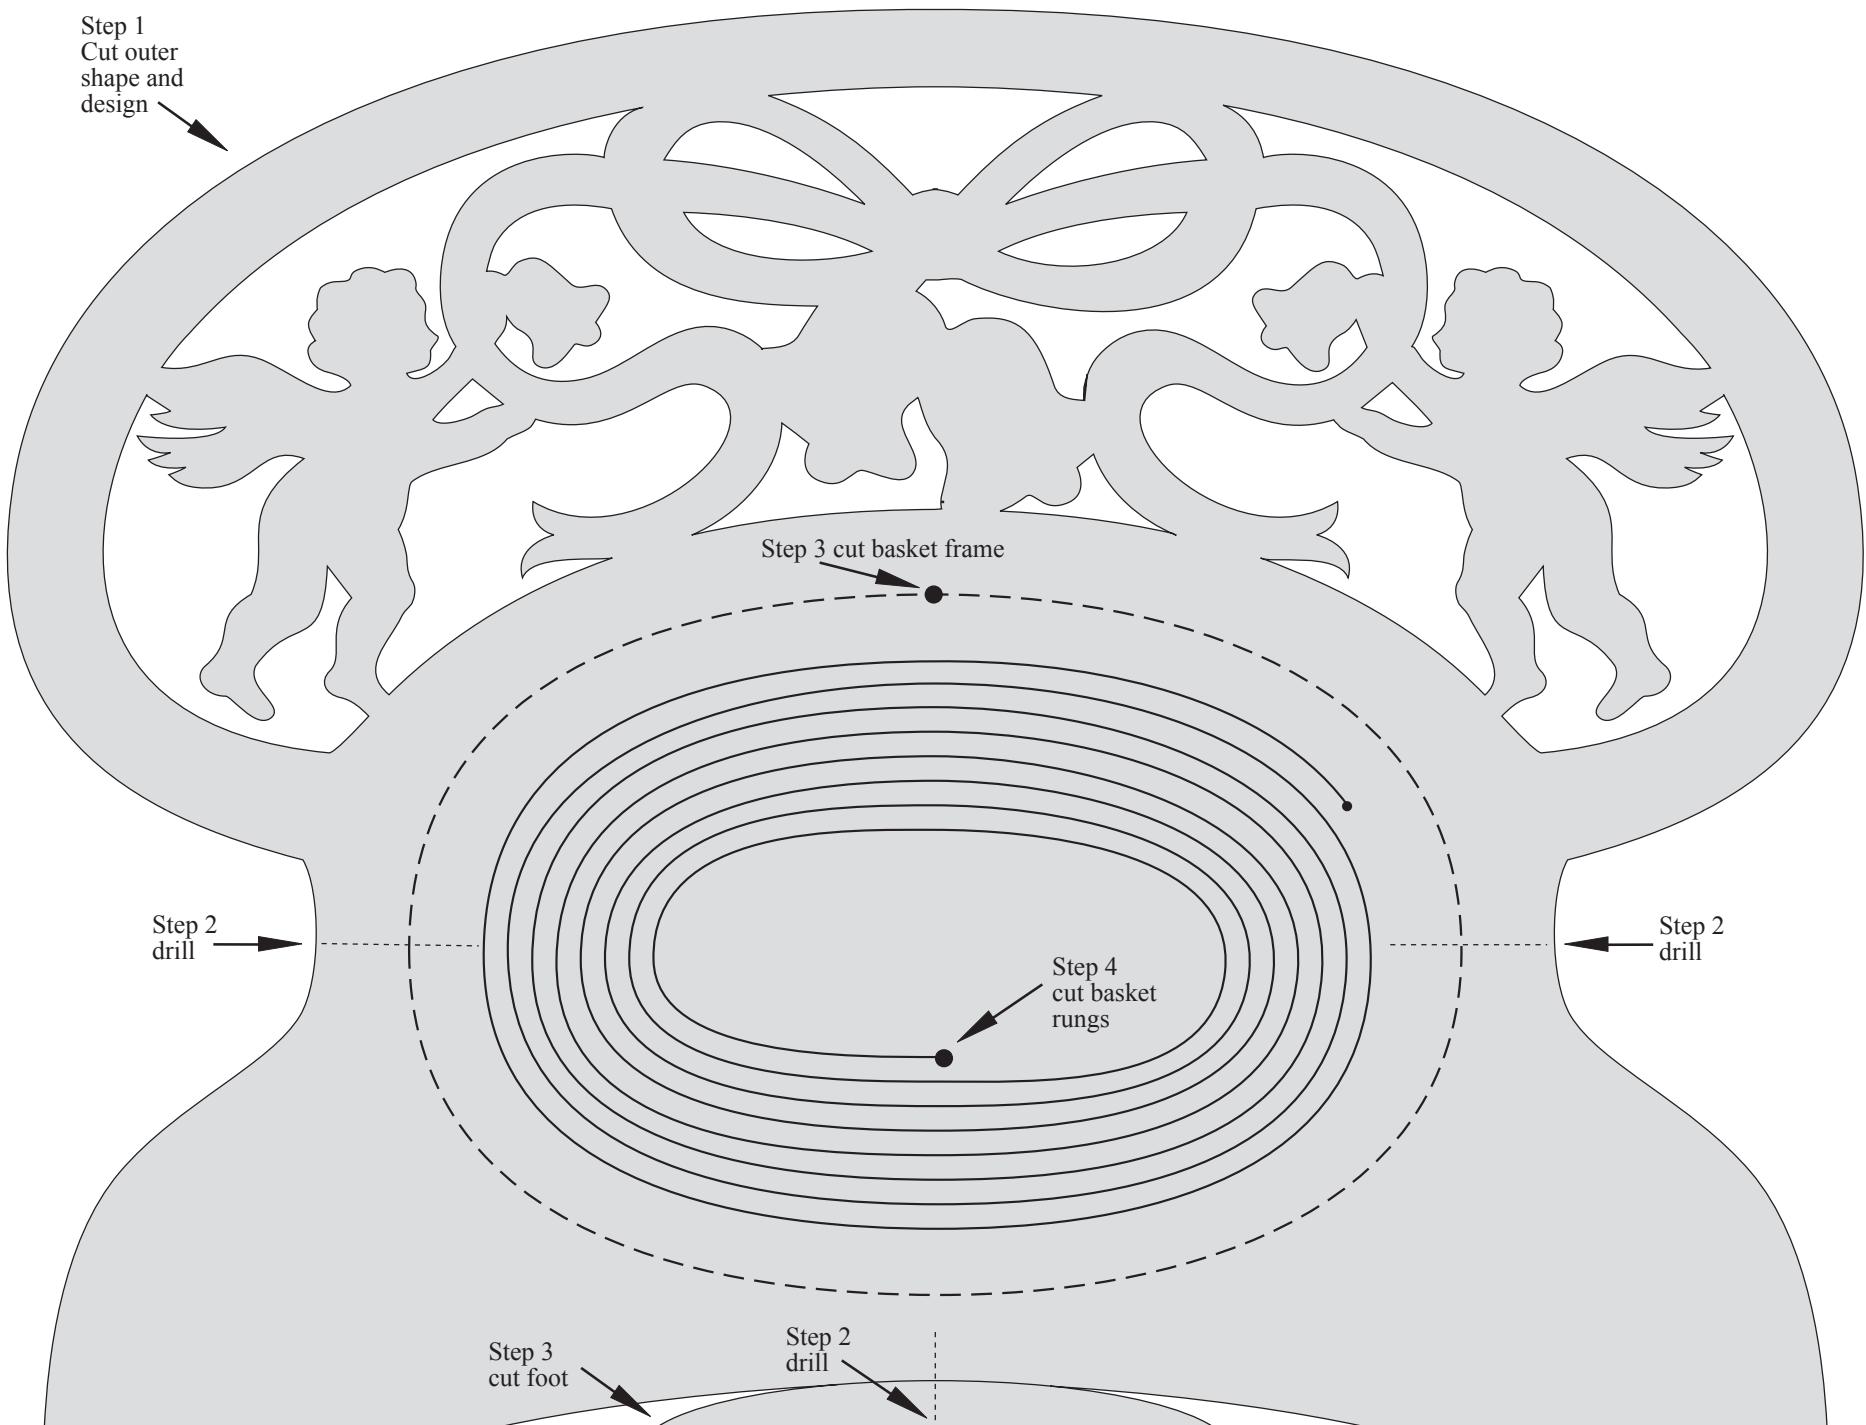


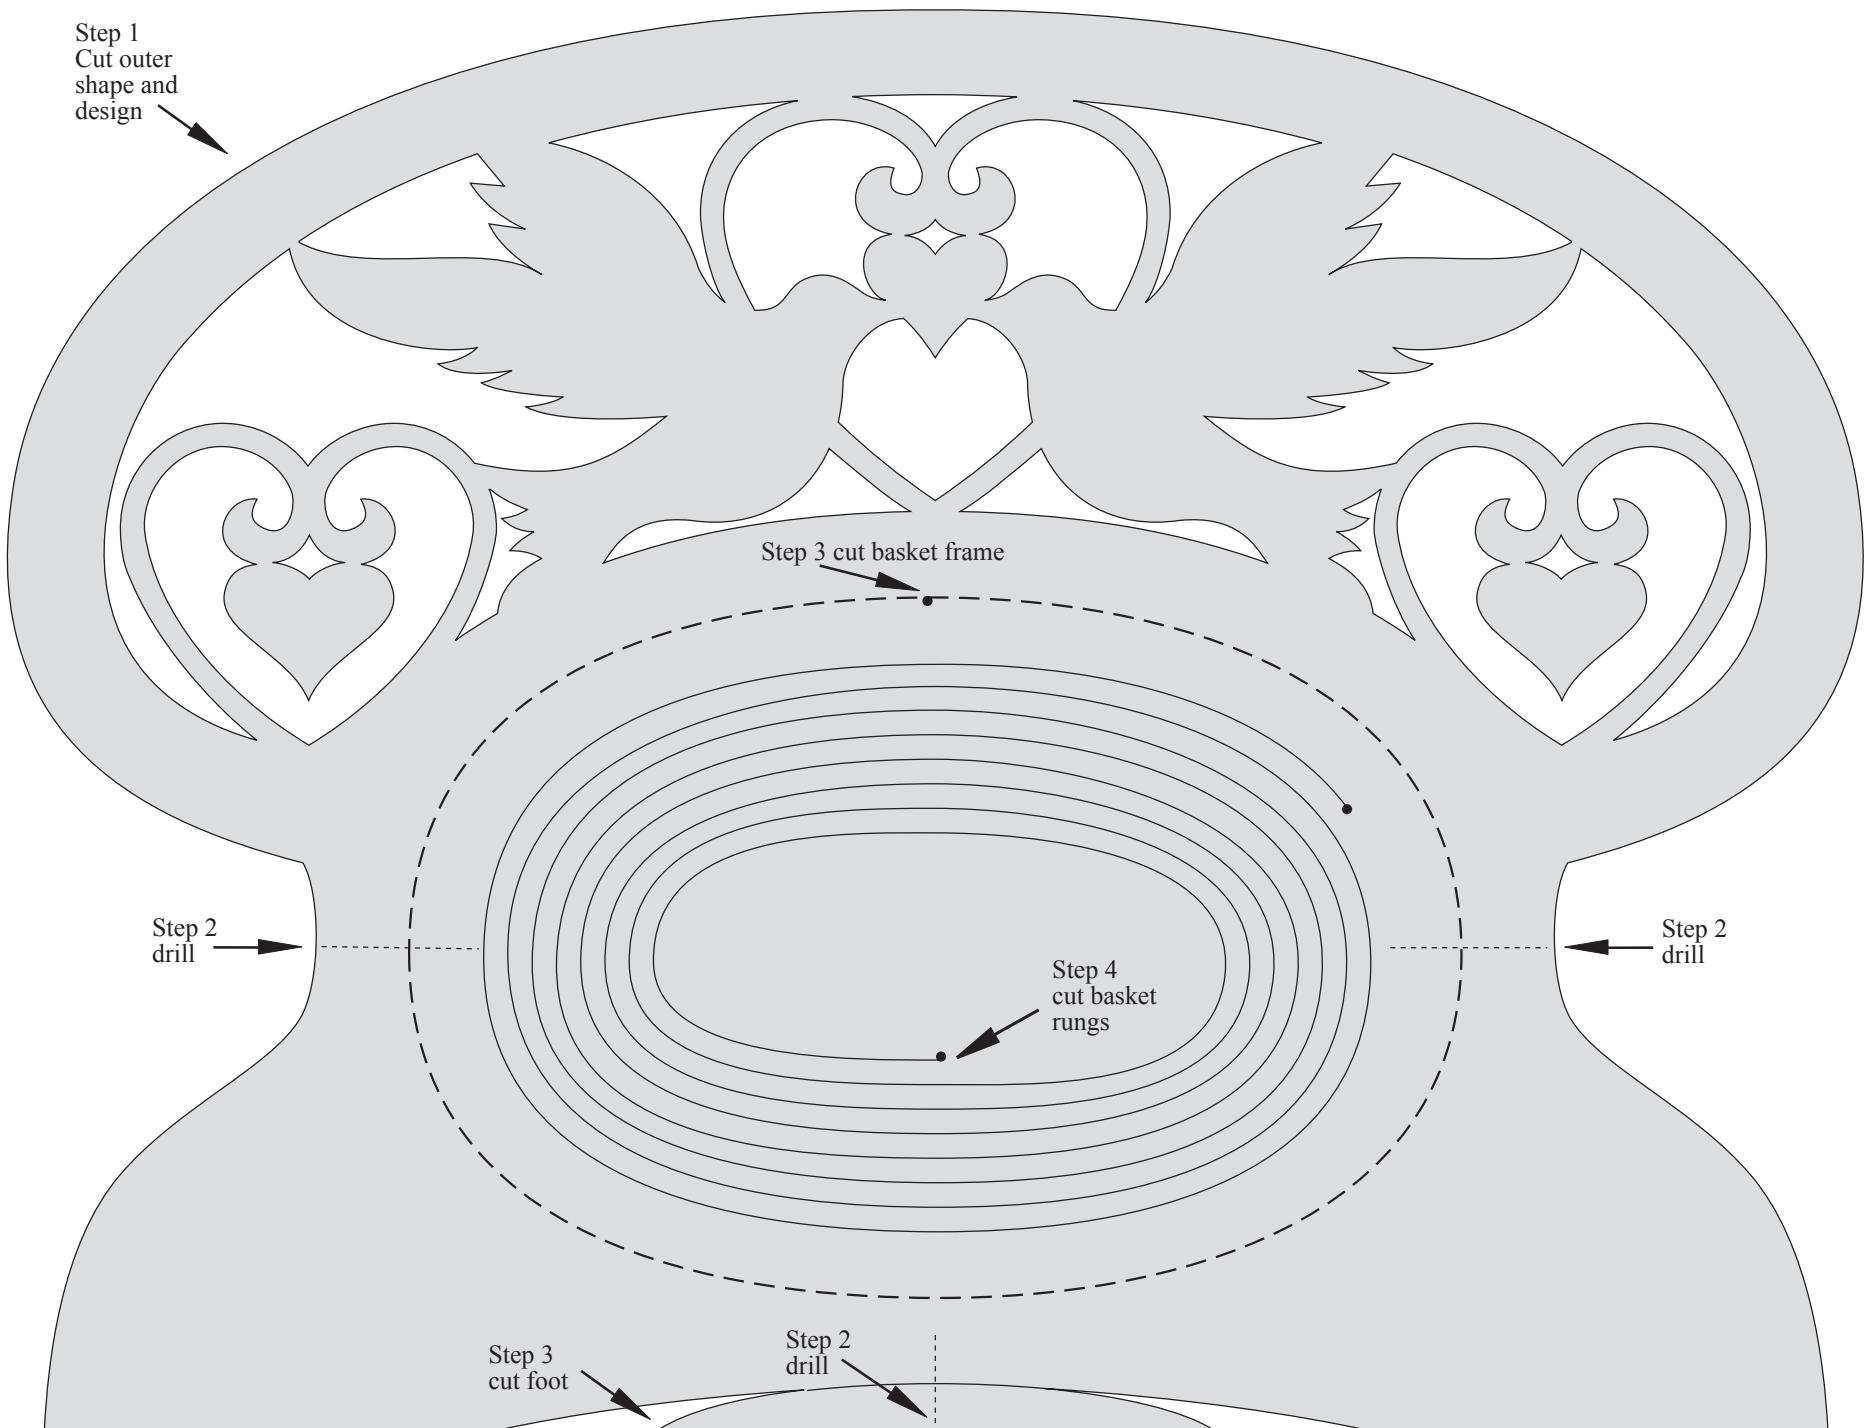


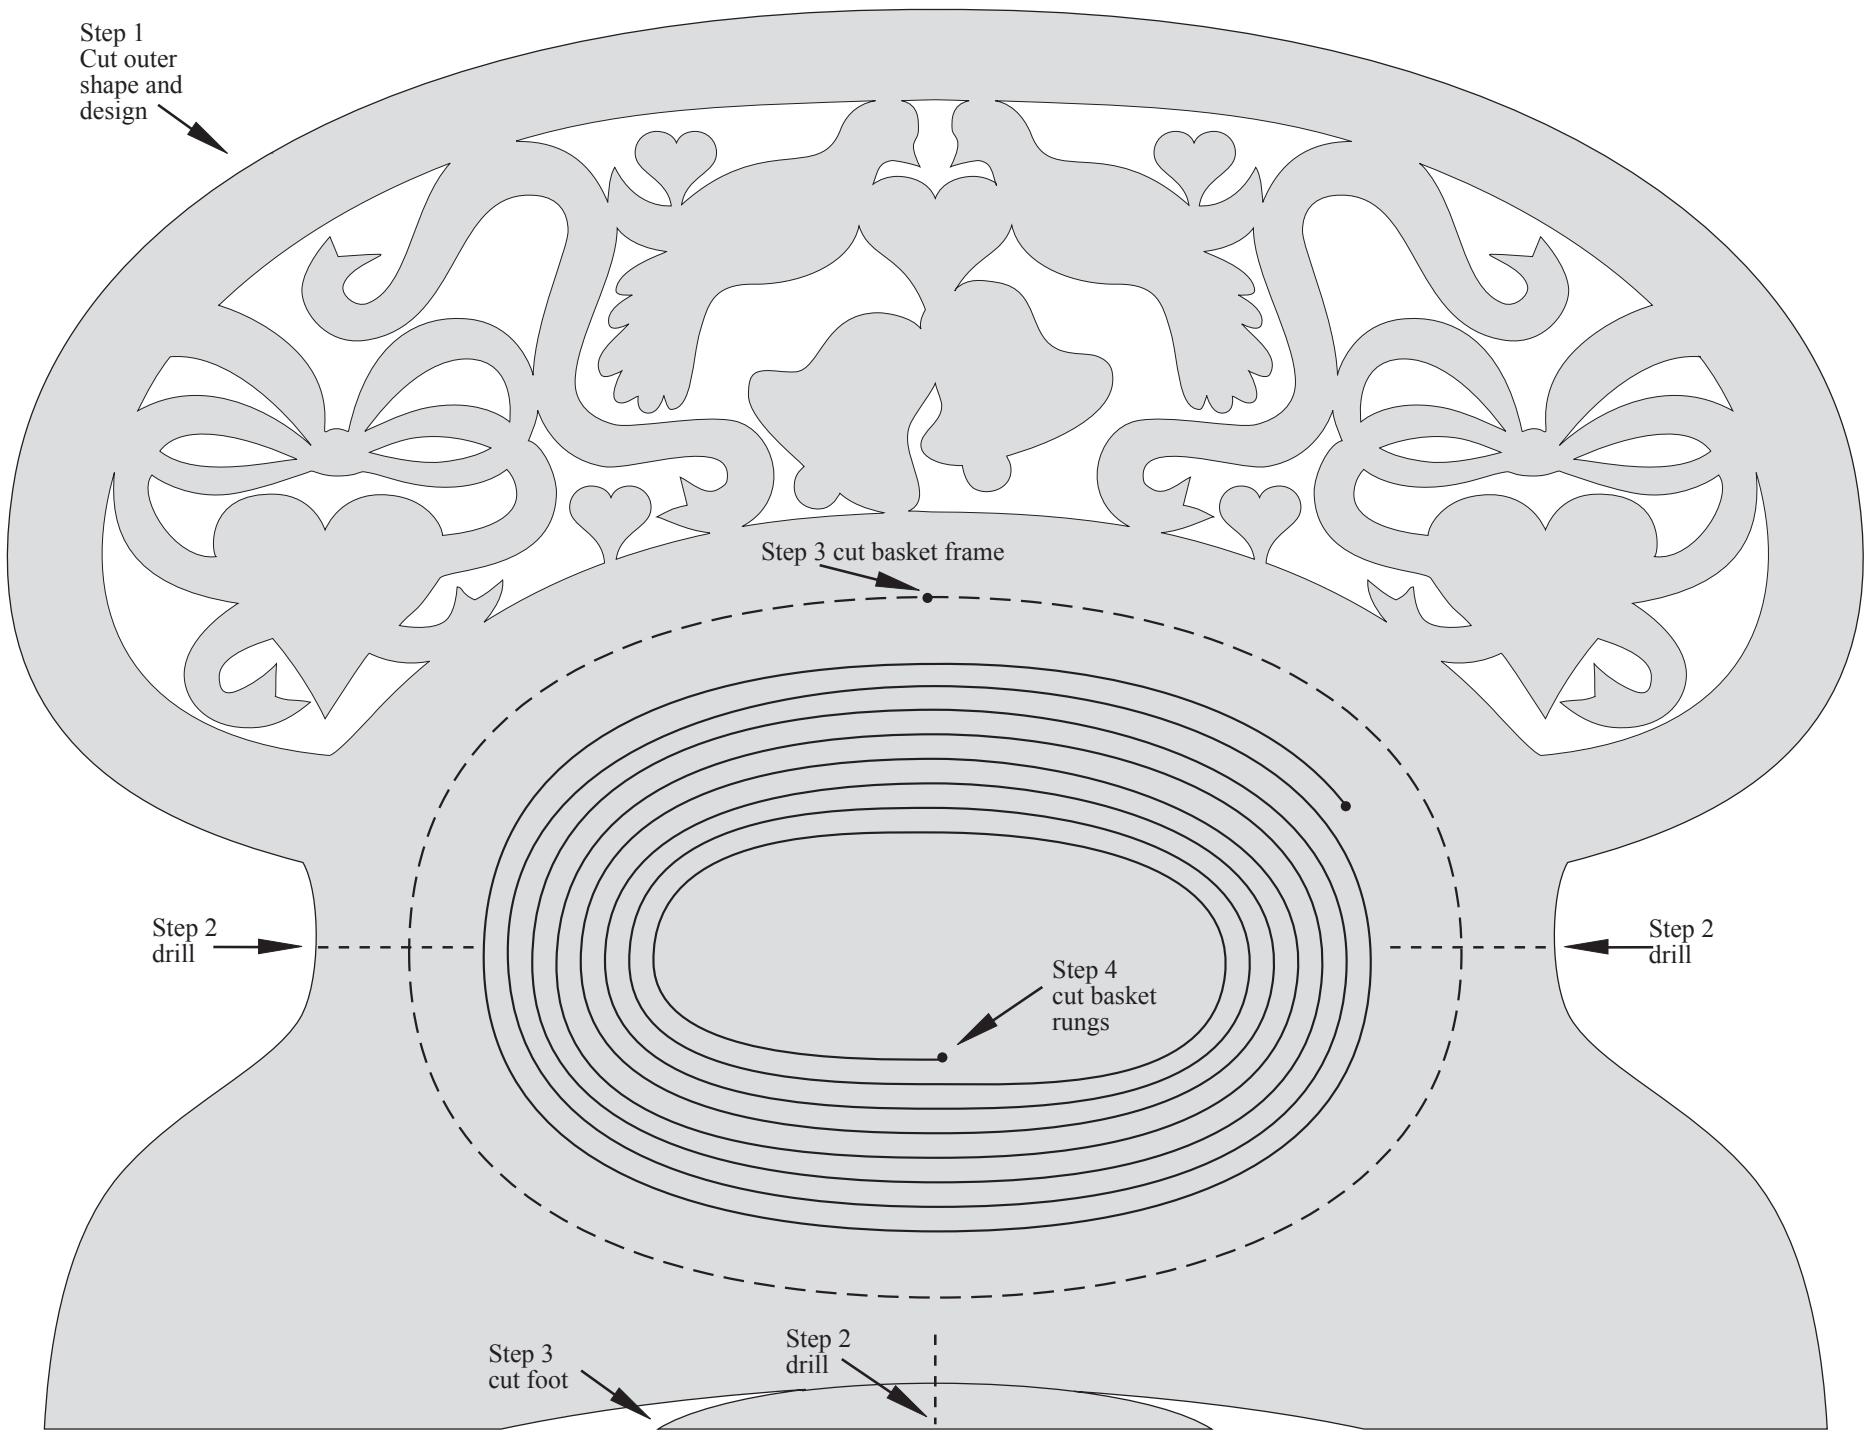

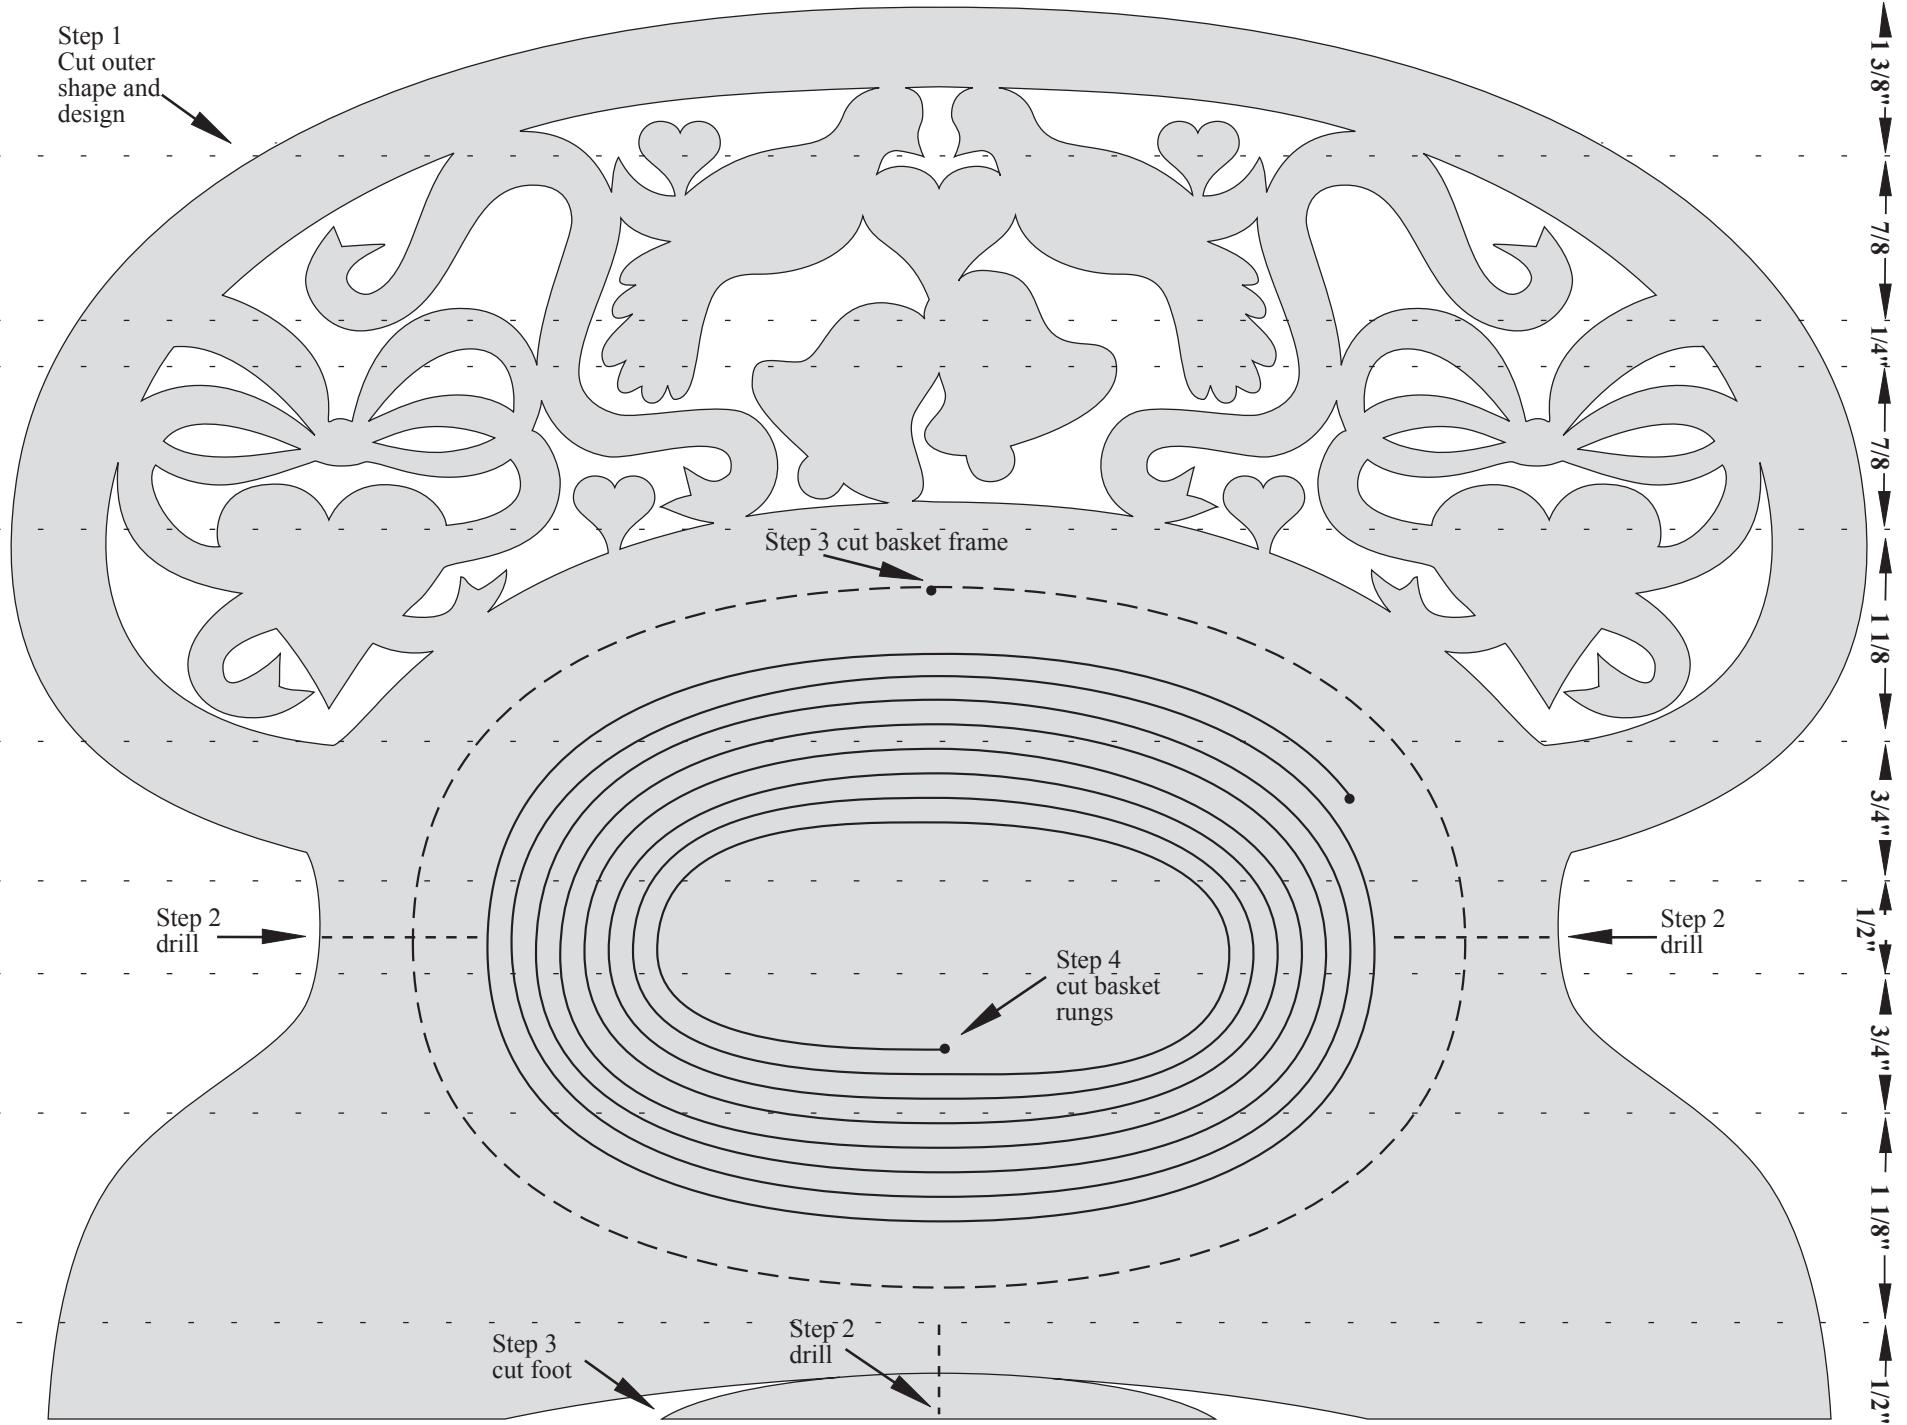

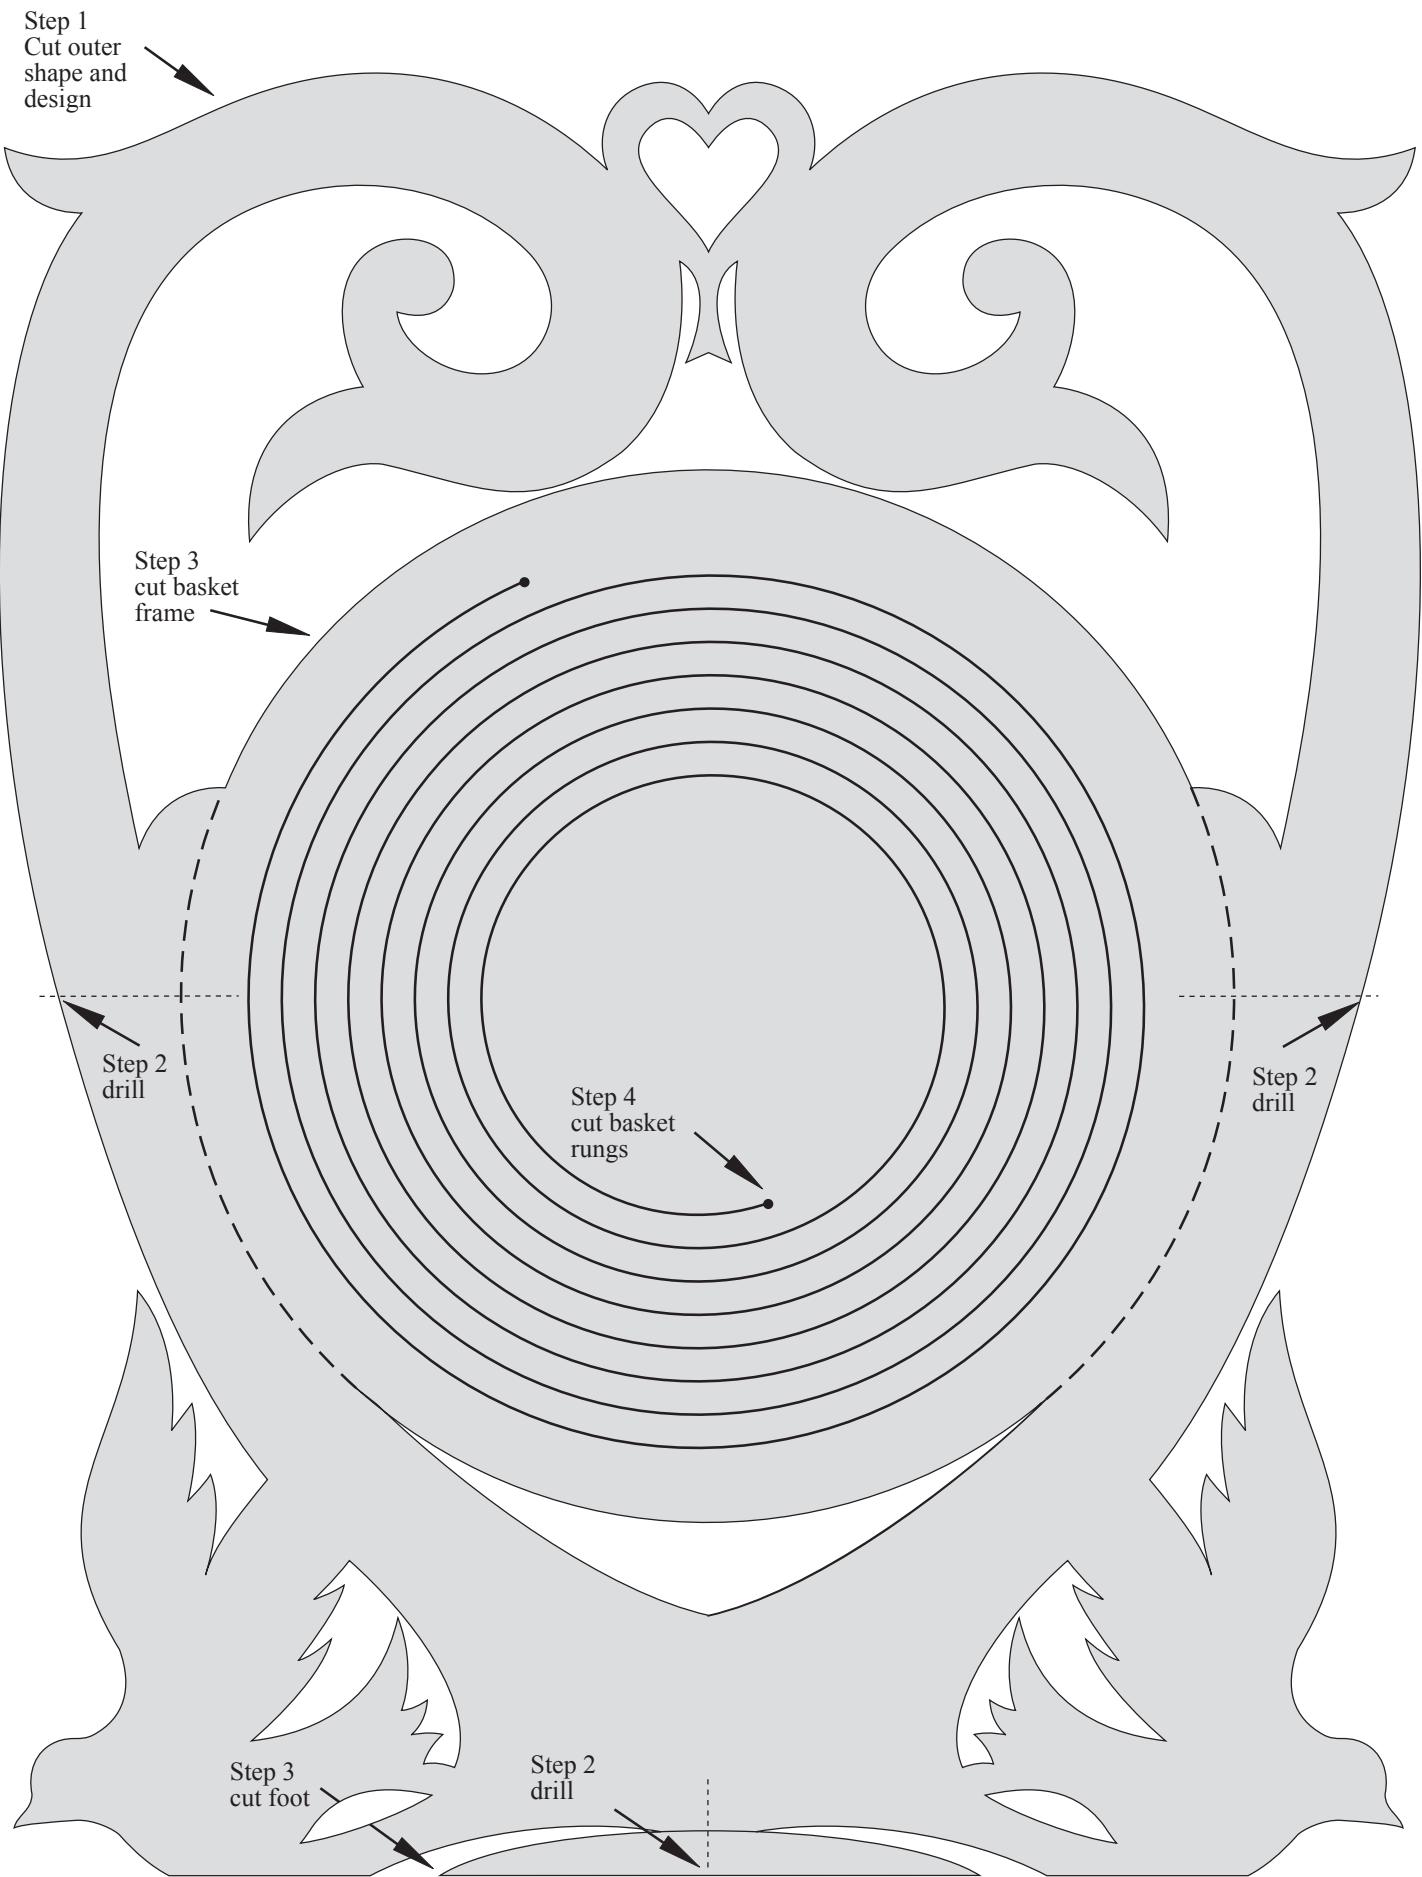

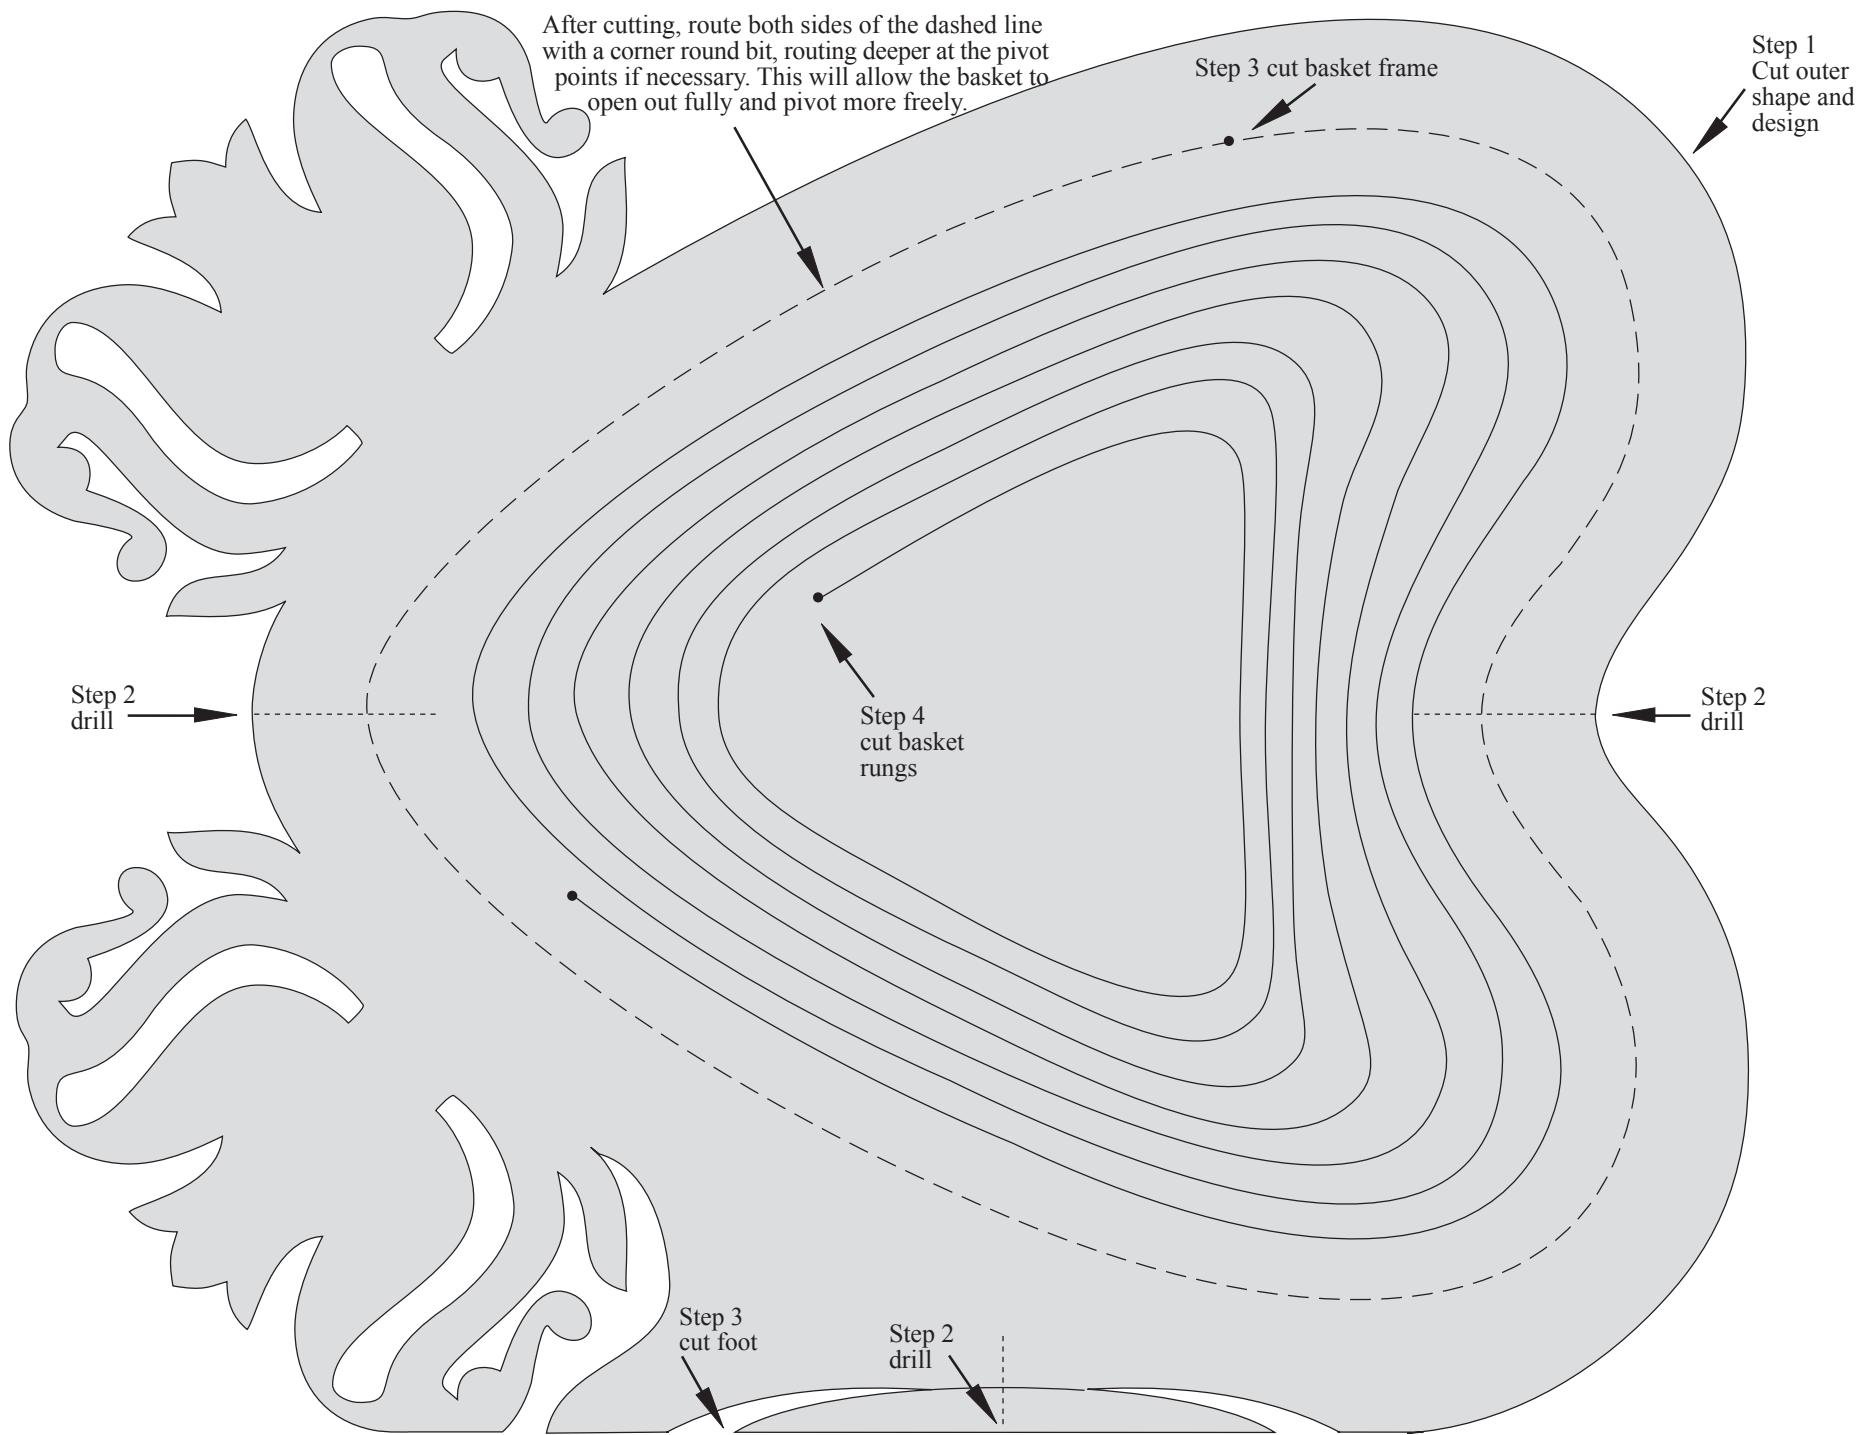

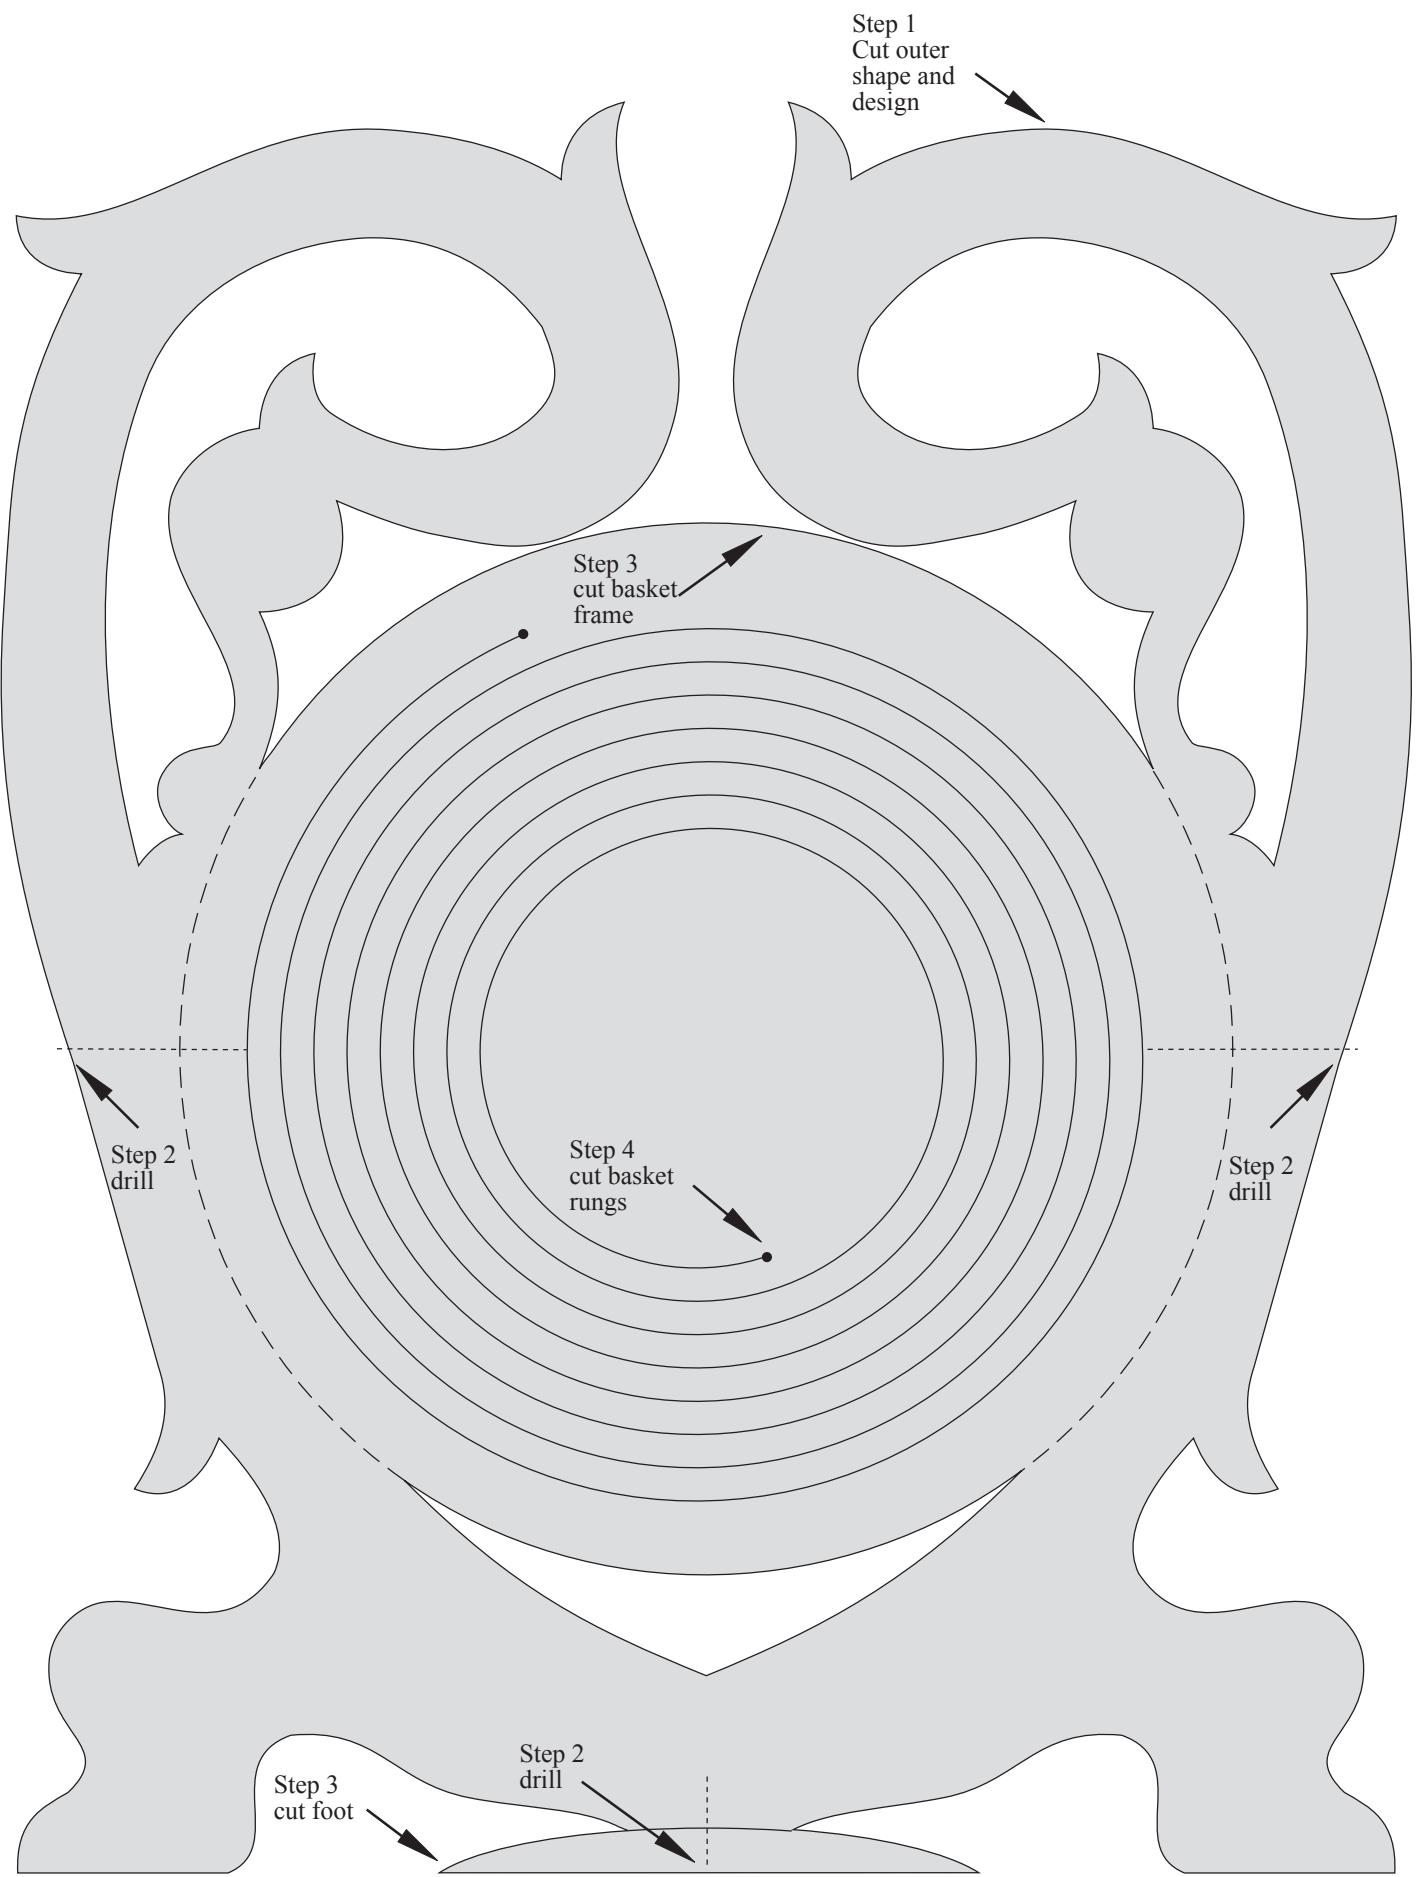

After cutting, route both sides of the dashed line with a corner round bit, routing deeper at the pivot points if necessary. This will allow the basket to open out fully and pivot more freely.

